














GEELY

PARTS CATALOG

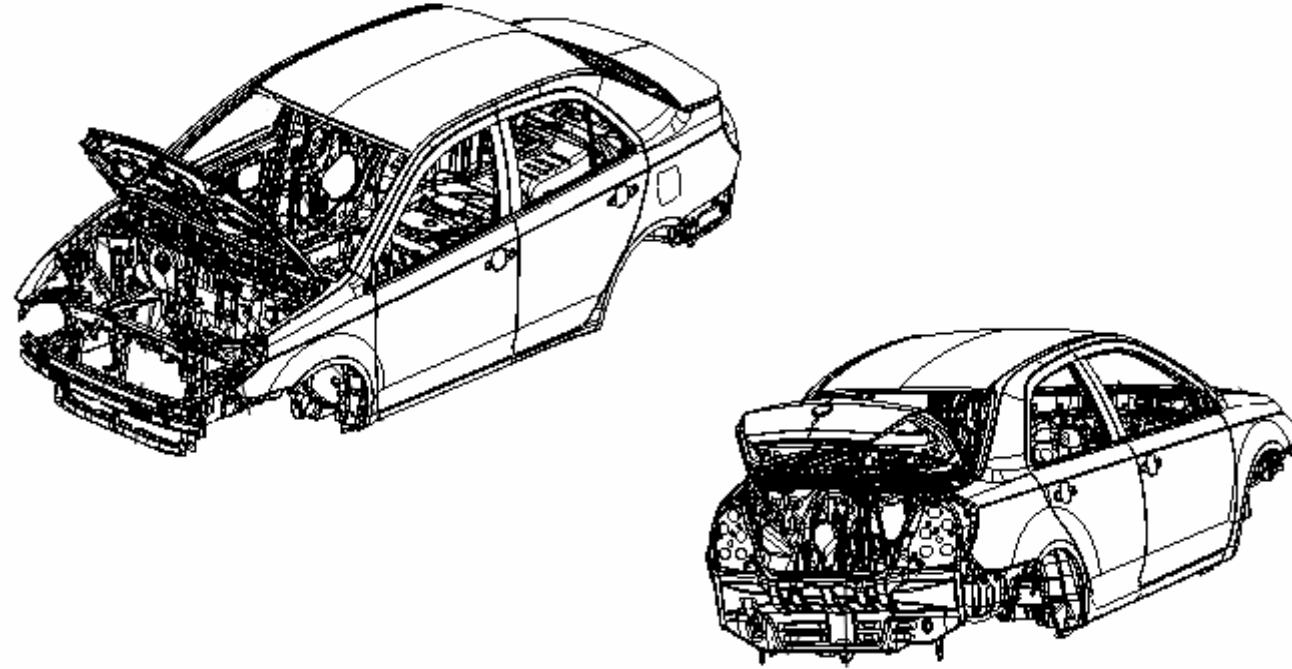


JULY 2009

PICTURE INDEX


<p style="text-align: center;">2000 BODY</p>	<p>2010 WHITE BODY ASSY</p>  <p style="text-align: right;">1</p>	<p>2020 BODY ASSY.</p>  <p style="text-align: right;">5</p>	<p>2030 ENGINE COMPARTMENT ASSY.</p>  <p style="text-align: right;">9</p>	<p>2040 ROOF SKIN ASSY.</p> 	<p>2050 TRUNK Baffle PLATE ASSY.</p>  <p style="text-align: right;">27</p>	<p>2060 LF DOOR ASSY.</p>  <p style="text-align: right;">28</p>
						<p>2070 RF DOOR ASSY.</p>  <p style="text-align: right;">29</p>
						<p>2080 LR DOOR ASSY.</p>  <p style="text-align: right;">31</p>
						<p>2090 RR DOOR ASSY.</p>  <p style="text-align: right;">30</p>
						<p>2100 ENGINE HOOD ASSY.</p>  <p style="text-align: right;">32</p>
					<p>2120 FRONT CROSS MEMBER ASSY.</p>  <p style="text-align: right;">16</p>	<p>2110 TRUNK LID ASSY.</p>  <p style="text-align: right;">33</p>

2010 WHITE BODY ASSY.

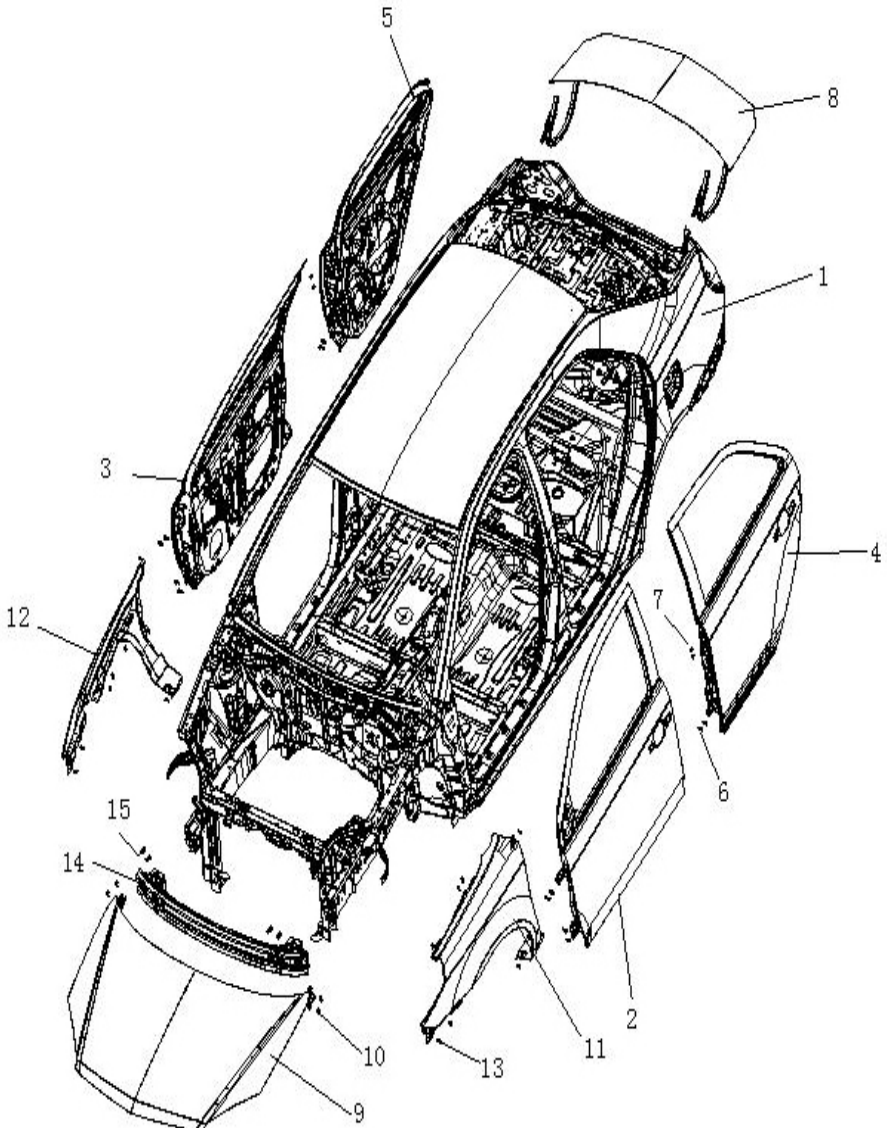	NO.	PART NO.	DES.	QTY	REMARK
	1	1012000400	WHITE BODY ASSY.	1	
	2	10120011000103	LF DOOR ASSY.	1	
	3	10120015500103	RF DOOR ASSY.	1	
	4	10120020500103	LR DOOR ASSY.	1	
	5	10120025400103	RR DOOR ASSY.	1	
	6		DOOR HINGE MOUNTING BOLT	12	
	7		HEXAGON FLANGE NUT	4	
	8	10120031100103	TRUNK LID ASSY.	1	
	9	10120032900103	ENGINE HOOD ASSY.	1	
	10	101201741602	ENGINE HOOD ASSY.	1	RADIATOR FORWARD
	11	10120005140103	LEFT FENDER	1	
	12	10120004990103	RIGHT FENDER	1	
	13		HEXAGON HEAD BOLT & SPRING WASHER ASSY.	14	
	14	101200018503	FRONT CROSS MEMBER ASSY.	1	
	15		M8 HEXAGON FLANGE NUT	4	

2020 BODY FRAME ASSY.


NO.	PART NO.	DES.	QTY	REMARK
1	101200365002	ROOF SKIN ASSY.(W/O SUNROOF)	1	
	101200041702	ROOF SKIN ASSY.(SUNROOF)	1	
2	101200002002	RIGHT SIDE RAIL	1	
3	101200002102	LEFT SIDE RAIL	1	
4		BODY BOTTOM ASSY.	1	
5		ENGINE COMPARTMENT ASSY.	1	
6		FRONT FLOOR ASSY.	1	
7	101200527002	REAR FLOOR ASSY.	1	
8	101200421402	LEFT SIDE WALL ASSY.	1	
9	101200467402	RIGHT SIDE WALL ASSY.	1	
10	101200715002	COWL PANEL UPPER PART ASSY.	1	
11	1012003880	TRUNK BAFFLE PLATE ASSY.	1	
12		ROOF 1# CROSS MEMBER	1	
13		ROOF REAR CROSS MEMBER	1	
14	101200389002	REAR END PANEL ASSY.	1	

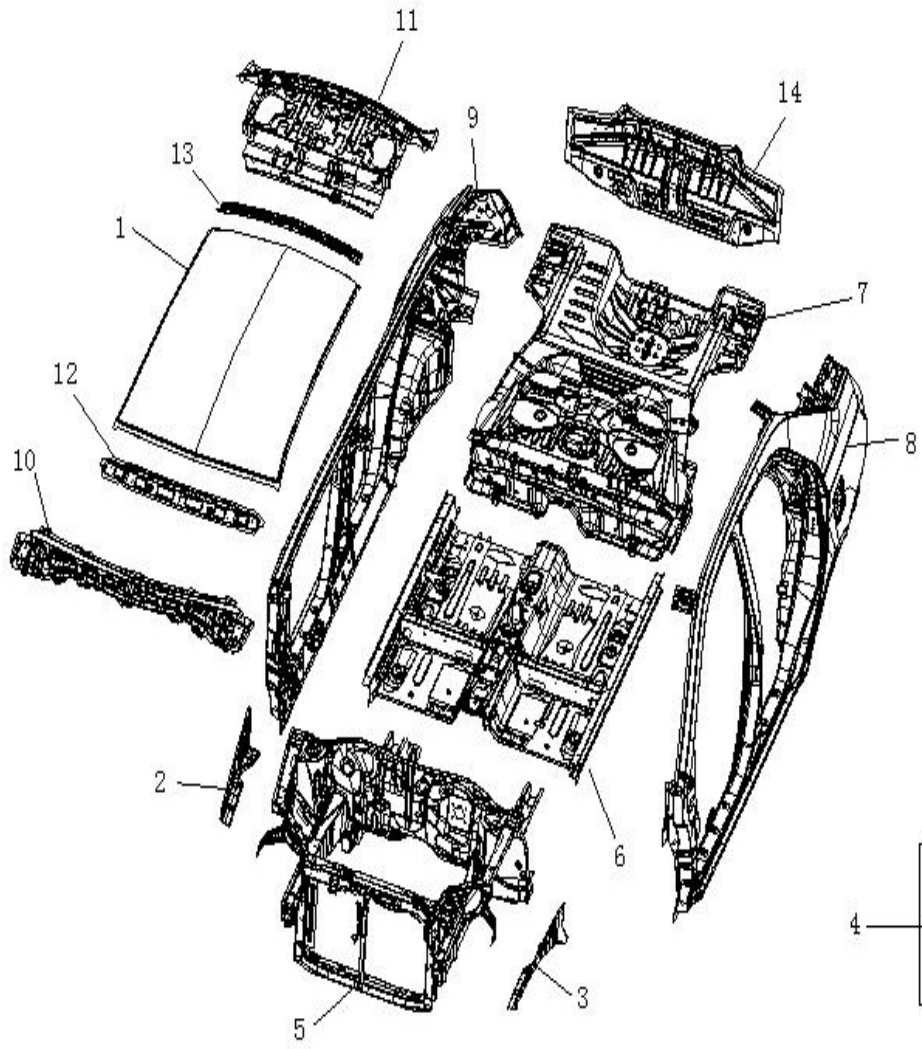

2030 ENGINE COMPARTMENT ASSY.

NO.	PART NO.	DES.	QTY	REMARK	
	1	101200031402	RADIATOR LOWER CROSS MEMBER	1	RADIATOR BACKWARD
		101201731002	RADIATOR LOWER CROSS MEMBER(MT)	1	RADIATOR FORWARD
		105201731002	RADIATOR LOWER CROSS MEMBER(AT)	1	
		101200032702	RADIATOR UPPER CROSS MEMBER	1	RADIATOR BACKWARD
		101201730502	RADIATOR UPPER CROSS MEMBER	1	RADIATOR FORWARD
		1012000335	FRONT CROSS MEMBER LEFT BRACKET	1	
		1012000339	FRONT CROSS MEMBER RIGHT BRACKET	1	
		101200032503	RADIATOR CENTER BRACKET	1	RADIATOR BACKWARD
		101201732102	RADIATOR CENTER BRACKET(MT)	1	RADIATOR FORWARD
		105201732102	RADIATOR CENTER BRACKET(AT)	1	
	2	1012000357	RF SHOCK ABSORBER LOWER FRONT PLATE	1	
	3	101200018202	RIGHT SIDE RAIL ASSY.	1	
4		RF SHOCK ABSORBER INTERIOR BRACKET	1		
5	Q1460616	HEXAGON HEAD BOLT, SPRING WASHER & PLAIN WASHER SET	2		
6	101200018302	LEFT SIDE RAIL ASSY.	1		
7	1012000359	LF SHOCK ABSORBER LOWER FRONT PLATE	1		
8		LF SHOCK ABSORBER LOWER FRONT PLATE SUB-ASSY.	1		
9		LF TOW HOOK FIXING PLATE ASSY.	1		
10		COWL PANEL BAFFLE PLATE ASSY.	1		
11	101200029103	RADIATOR RIGHT PILLAR ASSY.	1		
12	101200030303	RADIATOR LEFT PILLAR ASSY.	1		
	1018004683	ENGINE BOTTOM RIGHT SHIELD	1		
	1018004682	ENGINE BOTTOM LEFT SHIELD	1		
	1018011470	ENGINE BOTTOM RIGHT SHIELD	1	RADIATOR FORWARD	
	1018011472	ENGINE BOTTOM LEFT SHIELD	1		

2040 ROOF SKIN ASSY.

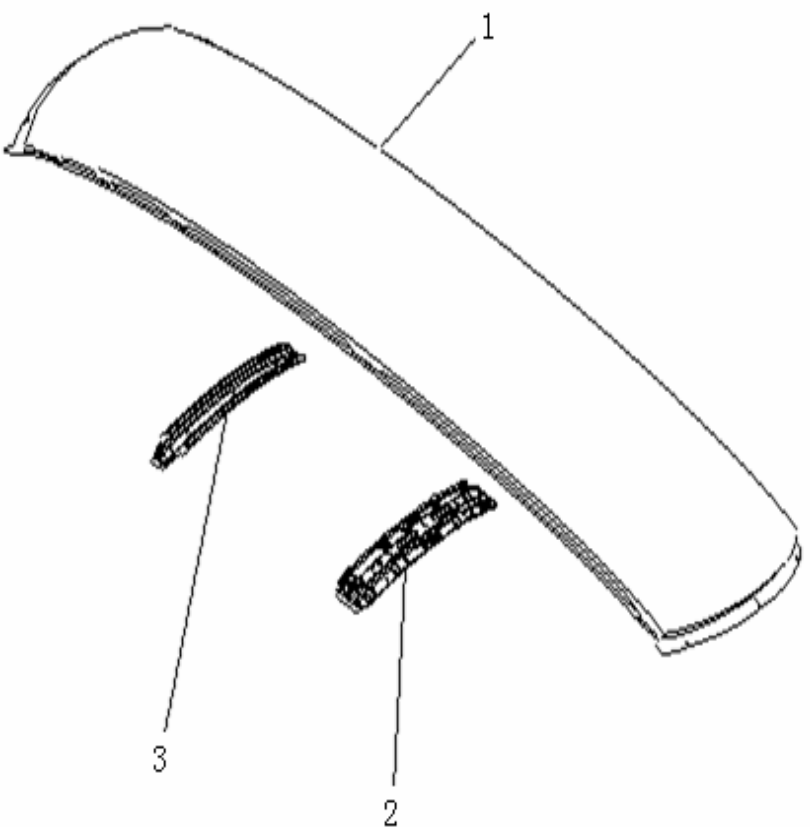	NO.	PART NO.	DES.	QTY	REMARK
	1	101200365002	ROOF SKIN ASSY.(W/O SUNROOF)	1	
		101200041702	ROOF SKIN ASSY.(SUNROOF)	1	
	2		ROOF 3# CROSS MEMBER	1	
	3		ROOF 2# CROSS MEMBER	1	


2050 TRUNK Baffle Plate Assy.

	NO.	PART NO.	DES.	QTY	REMARK
	1	101200388002	TRUNK Baffle Plate Assy.	1	
	2		RIGHT CONNECTING PLATE	1	
	3		DRAIN CHANNEL	1	
	4		LEFT CONNECTING PLATE	1	
	5		REAR SEAT HOOK FIXING PLATE	1	
	6		REAR SEAT HOOK	1	
	7		REAR SEAT HOOK FIXING PLATE Assy.	2	

2060 LF DOOR ASSY.


	NO.	PART NO.	DES.	QTY	REMARK
		10120011000103	LF DOOR ASSY.	1	
	1	1012000970	LF DOOR LOWER HINGE ASSY.	1	
	2	1012001101	LF DOOR UPPER HINGE ASSY.	1	
	3		DOOR HINGE MOUNTING BOLT	4	
	4		LF DOOR BODY	1	
	5	1012001129	LF DOOR GLASS REAR GUIDE RAIL	1	
6		LF DOOR GLASS UPPER GUIDE RAIL	1		

2070 RF DOOR ASSY.

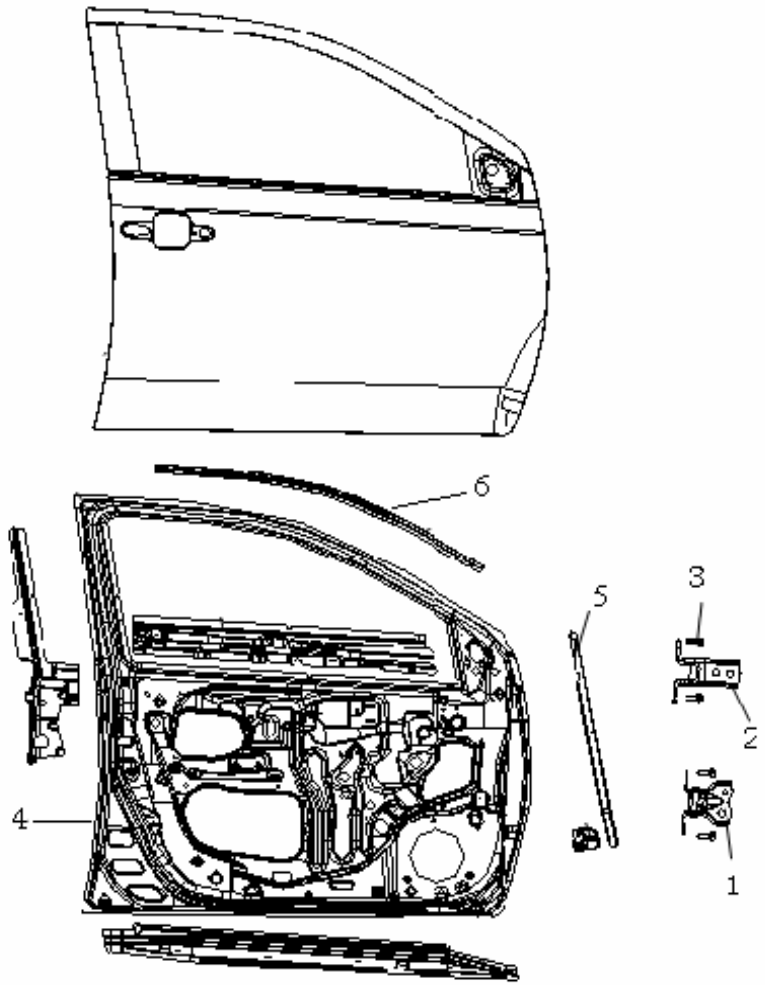	NO.	PART NO.	DES.	QTY	REMARK
		10120015500103	RF DOOR ASSY.	1	
	1	1012000972	RF DOOR LOWER HINGE ASSY.	1	
	2	1012001551	RF DOOR UPPER HINGE ASSY.	1	
	3		DOOR HINGE MOUNTING BOLT	4	
	4		RF DOOR BODY	1	
	5	1012001581	RF DOOR GLASS REAR GUIDE RAIL	1	
6		RF DOOR GLASS UPPER GUIDE RAIL	1		

2080 LR DOOR ASSY.

NO.	PART NO.	DES.	QTY	REMARK
	10120020500103	LR DOOR ASSY.	1	
1	1012002051	LR DOOR UPPER HINGE ASSY.	1	
2	1012000974	LR DOOR LOWER HINGE ASSY.	1	
3		DOOR HINGE MOUNTING BOLT	4	
4	1012002058	LR DOOR GLASS FRONT GUIDE RAIL	1	
5		LR DOOR GALSS UPPER GUIDE RAIL	1	
6		LR DOOR BODY	1	

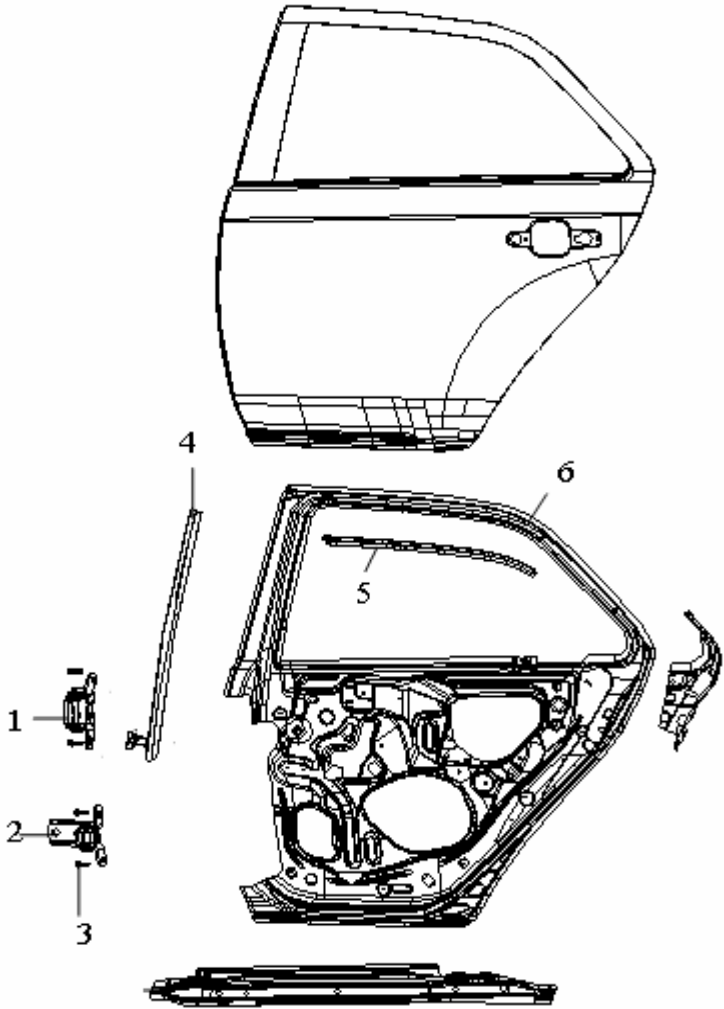

2090 RR DOOR ASSY.

	NO.	PART NO.	DES.	QTY	REMARK
		10120025400103	RR DOOR ASSY.	1	
	1	1012002541	RR DOOR UPPER HINGE ASSY.	1	
	2	1012000976	RR DOOR LOWER HINGE ASSY.	1	
	3		DOOR HINGE MOUNTING BOLT	4	
	4	1012002547	RR DOOR GLASS FRONT GUIDE RAIL	1	
	5		RR DOOR GALSS UPPER GUIDE RAIL	1	
6		RR DOOR BODY	1		

2100 ENGINE HOOD ASSY.

	NO.	PART NO.	DES.	QTY	REMARK
		10120032900103	ENGINE HOOD ASSY.	1	
		101201741602	ENGINE HOOD ASSY.	1	RADIATOR FORWARD
	1	1018005657	ENGINE HOOD LOCK ASSY.	1	
		1018011471	ENGINE HOOD LOCK ASSY.	1	RADIATOR FORWARD
		1012017318	ENGINE HOOD LOCK BUCKLE FIXING PLATE		
	2		ENGINE HOOD INTERIOR PLATE	1	
	3		ENGINE HOOD EXTERIOR PLATE	1	
	4	1012003542	ENGINE HOOD RIGHT HINGE ASSY.	1	
	5	1012003537	ENGINE HOOD LEFT HINGE ASSY.	1	







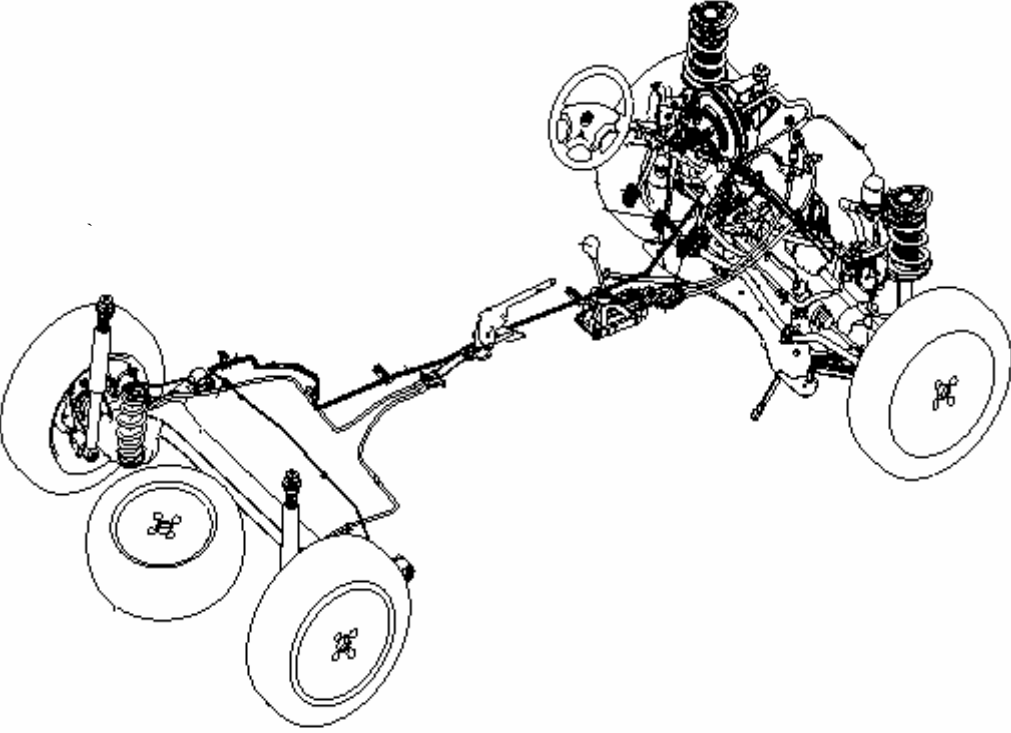

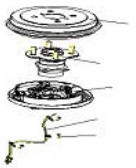





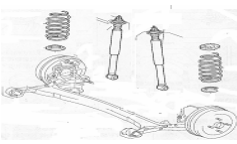
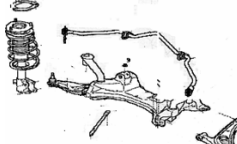


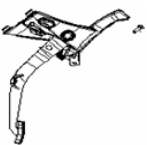

2110 TRUNK LID ASSY.

	NO.	PART NO.	DES.	QTY	REMARK
		10120031100103	TRUNK LID ASSY.	1	
	1	1018005221	TRUNK LID RIGHT HINGE TORSION SPRING	1	
	2	1018005222	TRUNK LID LEFT HINGE TORSION SPRING	1	
	3		TRUNK LID EXTERIOR PLATE	1	
	4		TRUNK LID INTERIOR PLATE	1	
	5		TRUNK LID LOCK CYLINDER MOUNTING PLATE ASSY.	1	
	6		TRUNK LID RIGHT HINGE FIXING PLATE ASSY.	1	
	7		TRUNK LID LEFT HINGE FIXING PLATE ASSY.	1	
	8	1012003150	TRUNK LID HINGE ASSY.	2	
9	1018005223	TRUNK LID HINGE TORSION BAR PLASTIC CLIP	1		

2120 FRONT CROSS MEMBER ASSY.

	NO.	PART NO.	DES.	QTY	REMARK
		101200018503	FRONT CROSS MEMBER ASSY.	1	
	1		FRONT CROSS MEMBER SIDE RAIL	2	
	2	101200033502	FRONT CROSS MEMBER LEFT BRACKET ASSY.	1	
	3	101200033902	FRONT CROSS MEMBER RIGHT BRACKET ASSY.	1	
	4		FRONT CROSS MEMBER EXTERIOR PLATE ASSY.	1	
	5		FRONT CROSS MEMBER INTERIOR PLATE ASSY.	1	
6		FRONT CROSS MEMBER SUB-ASSY.	1		

PICTURE INDEX

<p>4000 CHASSIS</p>	<p>4010 BRAKE PEDAL</p> 	<p>4020 ACCELERATOR PEDAL</p> 	<p>4030 CLUTCH CONTROL</p> 	<p>4040 BRAKE PIPELINE (ABS)</p> 	<p>4050 BRAKE PIPELINE(W/O ABS)</p> 	<p>4060 FRONT DISC BRAKE</p> 
<p>4210 MK CHASSIS REPAIR KIT</p>						<p>4070 FRONT STEERING KNUCKLE</p> 
<p>4200 MK CHASSIS REPAIR KIT</p>						<p>4080 REAR DRUM BRAKE</p> 
<p>4190 STEERING WHEEL ASSY.</p> 						<p>4090 PARKING BRAKE CONTROL</p> 
<p>4180 WHEEL</p> 						<p>4100 STEERING LINKAGE</p> 
<p>4170 CONSTANT VELOCITY DRIVE SHAFT</p> 	<p>4160 REAR SUSPENSION</p> 	<p>4150 FRONT SUSPENSION</p> 	<p>4140 AT CONTROL</p> 	<p>4130 MT CONTROL</p> 	<p>4120 STEERING PIPELINE</p> 	<p>4110 EPS ASSY.</p> 


4010 BRAKE PEDAL

	NO.	PART NO.	DES.	QTY	REMARK
	1		VACUUM HOSE	1	
	2		STEEL HOOP	2	
	3	1014001600	VACUUM BOOSTER & BRAKE MASTER CYLINDER ASSY.	1	MT
		1014003364	VACUUM BOOSTER & BRAKE MASTER CYLINDER ASSY.	1	AT
		1014001975	VACUUM BOOSTER & BRAKE MASTER CYLINDER ASSY.	1	W/O ABS
	4		BOOSTER MOUNTING MAT	1	
	5		HEXAGON FLANGE NUT	4	
	6		HEXAGON HEAD BOLT	1	
	7	1014001612	BRAKE PEDAL & BRACKET ASSY.	1	MT
		1014001936	BRAKE PEDAL & BRACKET ASSY.	1	AT

4020 ACCELERATOR PEDAL


	NO.	PART NO.	DES.	QTY	REMARK
	1	1014001696	ACCELERATOR CABLE ASSY.	1	
	2		HEXAGON FLANGE NUT	2	
	3	1014001609	ACCELERATOR PEDAL & BRACKET ASSY.	1	
	4		PEDAL LEVER ASSY.	1	
	5		PEDAL BRACKET ASSY.	1	
	6		SPECIAL ELASTIC GASKET	1	
	7		LUBRICATING SHAFT BUSHING	2	
	8		CONNECTING SHAFT ROD	1	
	9		RETURN SPRING	1	
	10		CUSHION	1	

4030 CLUTCH PEDAL

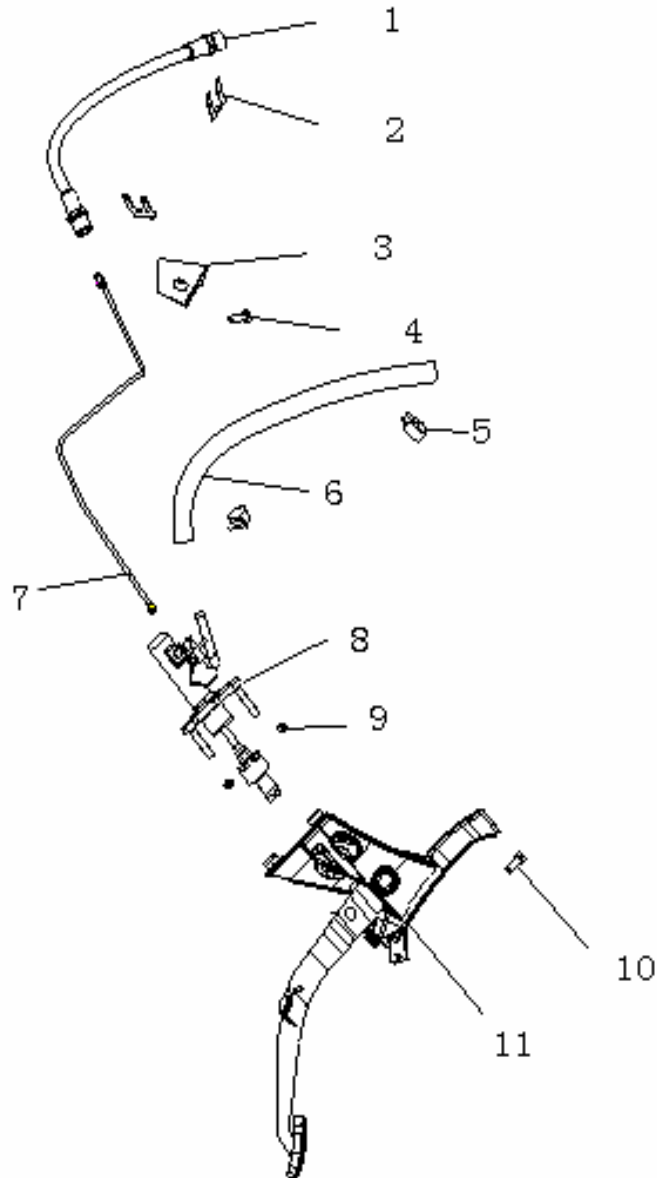

NO.	PART NO.	DES.	QTY	REMARK
1	1014001775	CLUTCH HOSE	1	
2		"L" TYPE CIRCLIP	2	
3	1016001927	CLUTCH HOSE FIXING BRACKET	1	
4	Q1840616	HEXAGON FLANGE BOLT	1	
5		STEEL SPRING HOOP	2	
6	1014001771	MASTER CYLINDER INLET PIPE ASSY.	1	
7	1014001773	MASTER CYLINDER OUTLET PIPE ASSY.	1	
8	1014001688	CLUTCH MASTER CYLINDER ASSY.	1	
	1016001310	CLUTCH RELEASE CYLINDER ASSY.	1	
9		HEXAGON NUT	2	
10		HEXAGON FLANGE BOLT	1	
11	1014001611	CLUTCH PEDAL & BRACKET ASSY.	1	


4040 BRAKE PIPELINE (ABS)

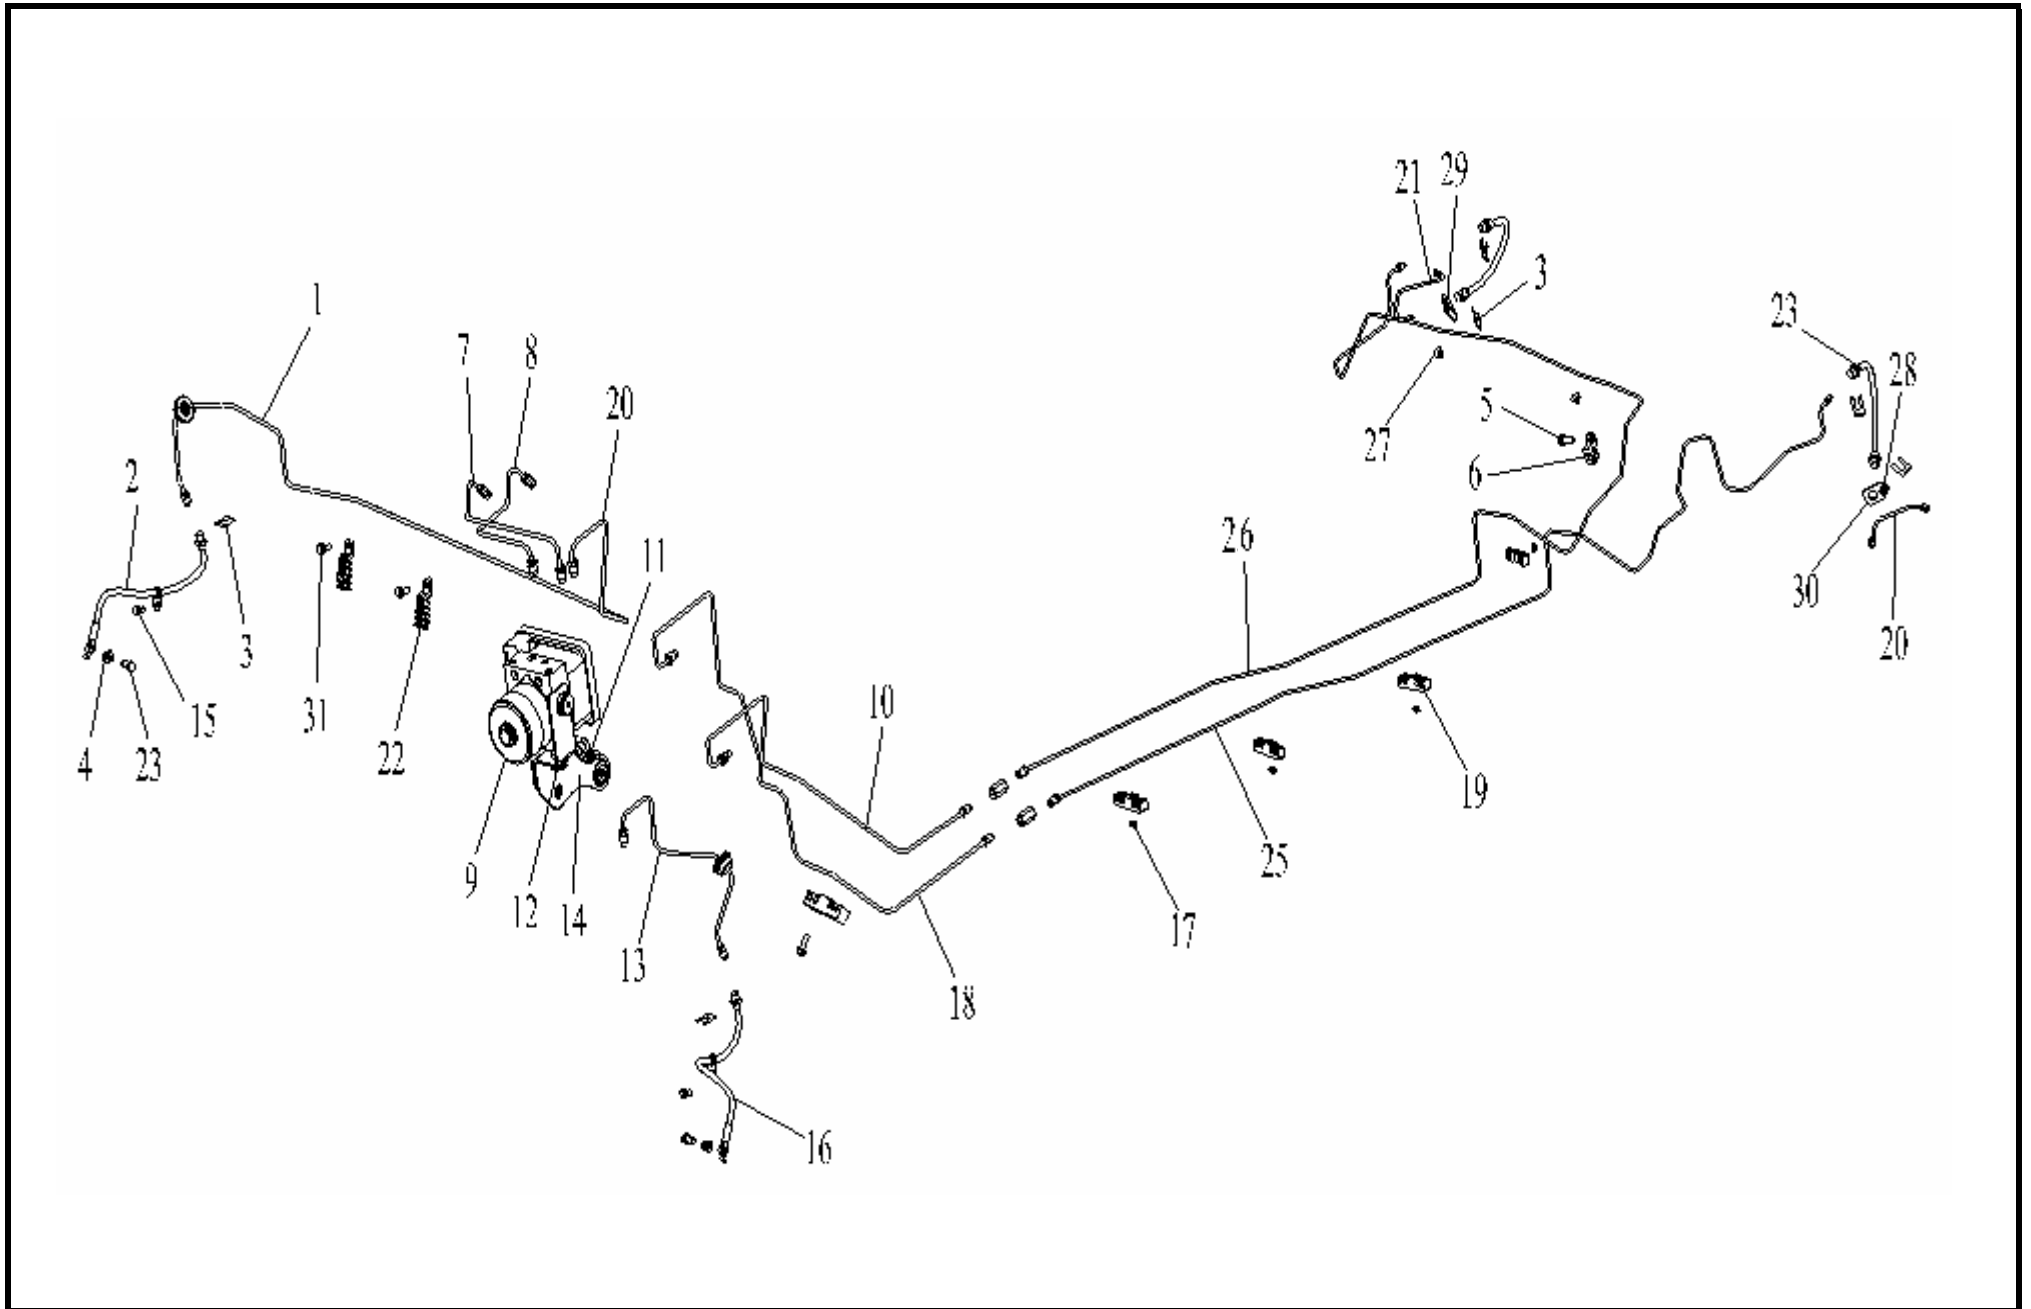

4040 BRAKE PIPELINE (ABS)

NO.	PART NO.	DES.	QTY	REMARK	NO.	PART NO.	DES.	QTY	REMARK
1	1014001865	RF BRAKE PIPE ASSY.	1		20	1014001868	LR BRAKE PIPE ASSY.III	1	
2	1014001649	RF BRAKE HOSE ASSY.	1		21	1014001869	RR BRAKE PIPE ASSY.III	2	
3		"L" TYPE SPRING CLIP	4		22	1014001658	SEVEN-WAY CLIP	2	
4	1014001950	GASKET	2		23	1014001765	BRAKE HOSE CONNECTING BOLT	4	
5	Q1460625	HEXAGON HEAD BOLT & SPRING WASHER ASSY.	1		24	1014001650	REAR BRAKE HOSE ASSY.	2	
6		DUAL-WAY CLIP	1		25	1014001738	LR BRAKE PIPE ASSY.II	1	
7	1014003412	BRAKE MASTER CYLINDER 1# BRAKE PIPE ASSY.	1	MK60	26	1014001739	RR BRAKE PIPE ASSY.II	1	
	1014003926	BRAKE MASTER CYLINDER 1# BRAKE PIPE ASSY.	1	MK70	27	1014001737	SINGLE-WAY CLIP	2	
8	1014001863	BRAKE MASTER CYLINDER 2# BRAKE PIPE ASSY.	1		28		HEXAGON HEAD BOLT & WASHER ASSY.	2	
9	1014001686	HECU	1	MK60	29		RR BRAKE HOSE FIXING PLATE ASSY.	1	
	1014003650	HECU	1	MK70	30		LR BRAKE HOSE FIXING PLATE ASSY.	1	
10	1014001867	RR BRAKE PIPE ASSY.	1		31	Q1460620	HEXAGON HEAD BOLT & WASHER ASSY.	2	
11	1017009273	CONNECTING BOLT	3	MK60		1406141180	BRAKE PIPE DUAL-WAY JOINT	1	
	1014003923	CONNECTING BOLT	3	MK70					
12	1017009272	RUBBER CUSHION	3	MK60					
	1014003924	RUBBER CUSHION	3	MK70					
13	1014001864	LF BRAKE PIPE ASSY.	1						
14	1014001888	HECU BRACKET ASSY.	1	MK60					
	1014003411	HECU BRACKET ASSY.	1	MK70					
15		HEXAGON HEAD BOLT & SPRING WASHER ASSY.	3						
16	1014001648	LF BRAKE HOSE ASSY.	1						
17	Q32006	HEXAGON FLANGE NUT	5						
18	1014001866	LR BRAKE PIPE ASSY.	1						
19		FIVE-WAY CLIP II	5						


4050 BRAKE PIPELINE(W/O ABS)

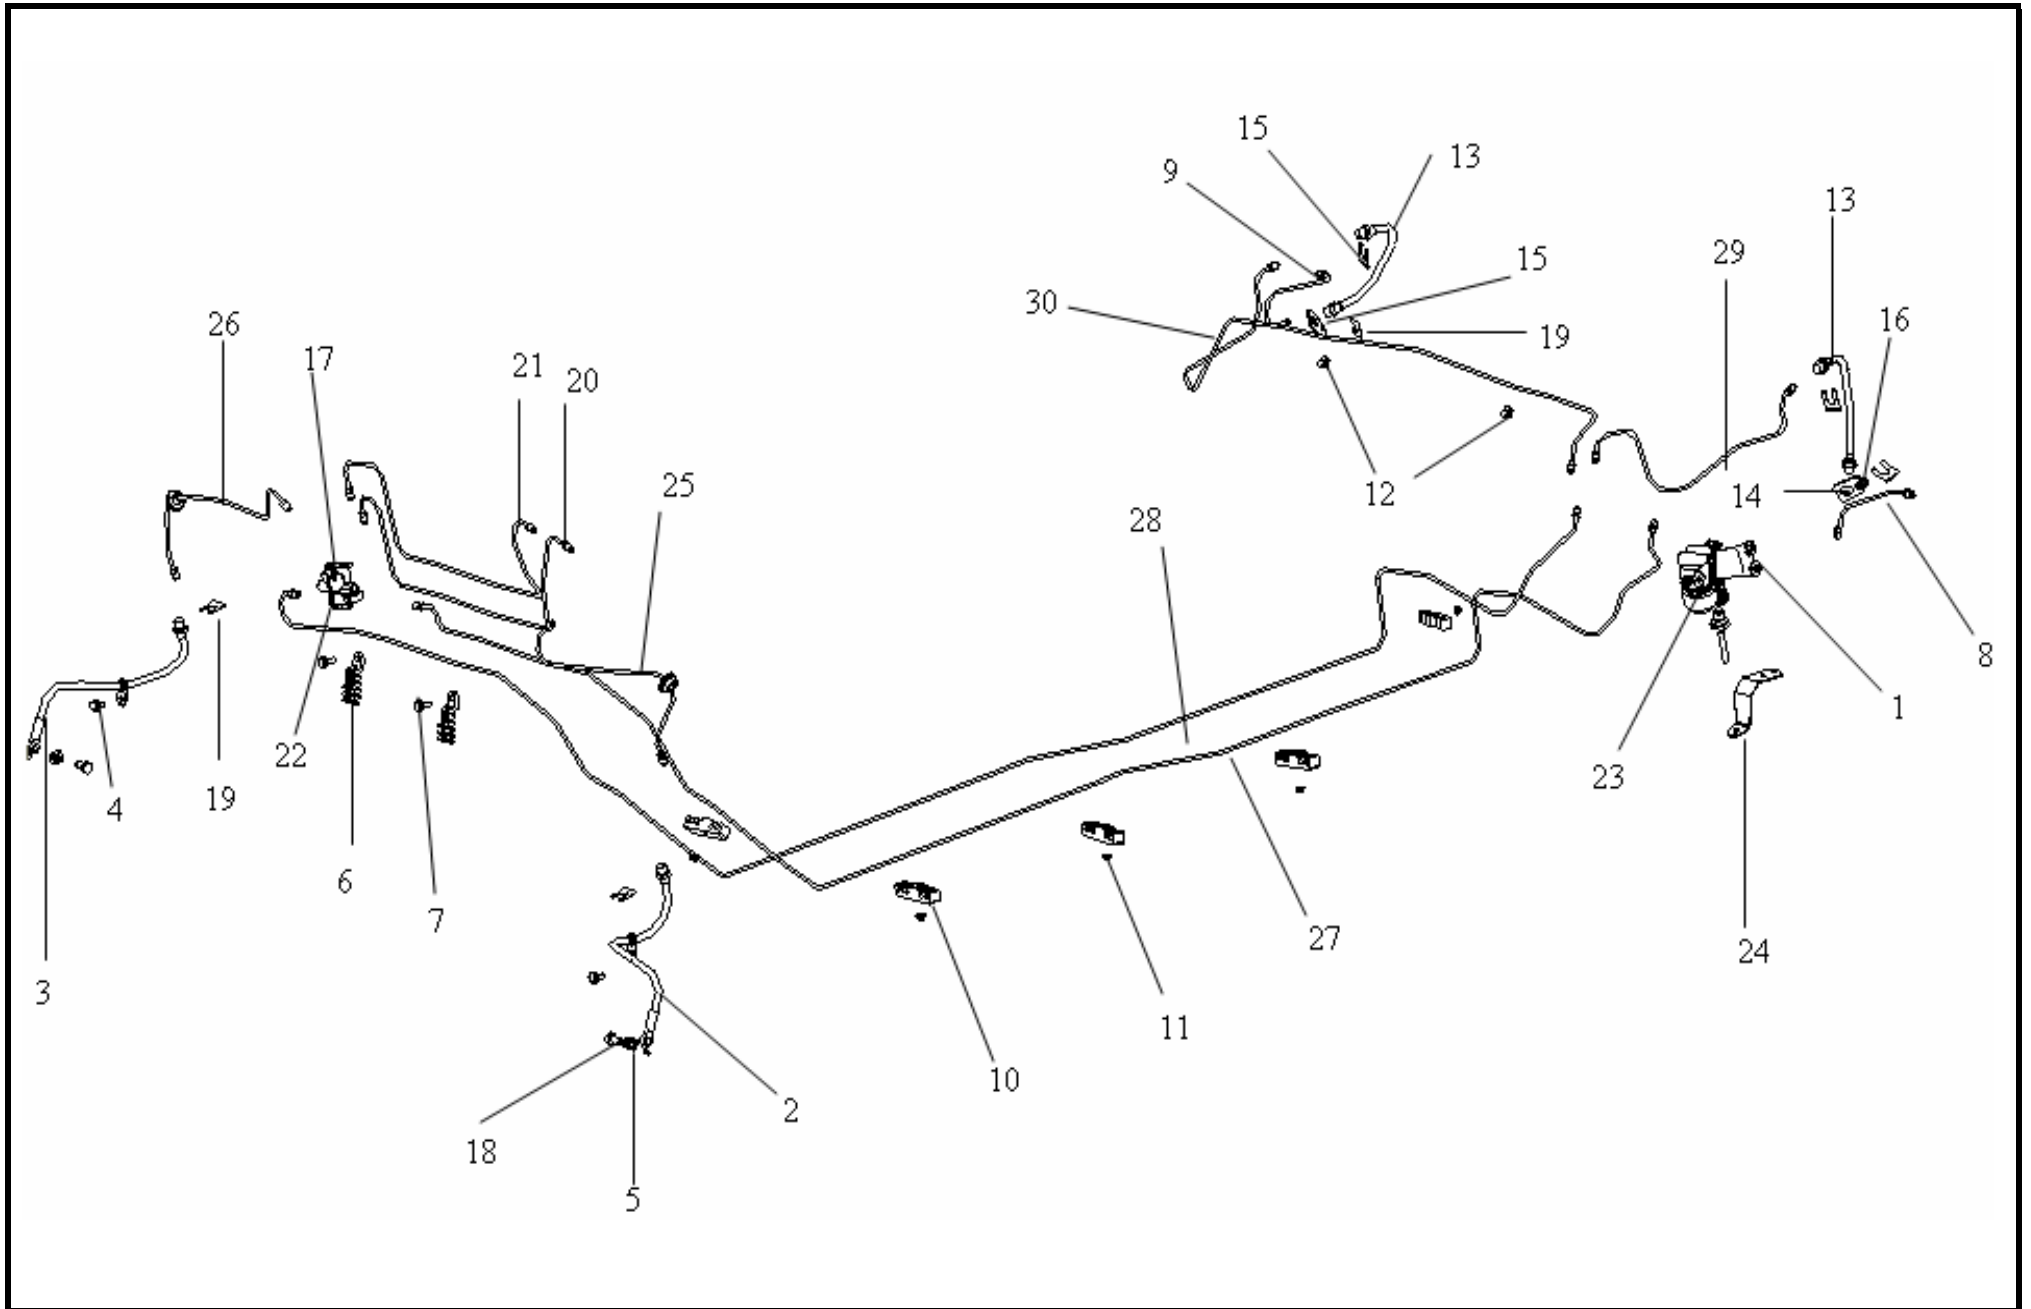

4050 BRAKE PIPELINE(W/O ABS)

NO.	PART NO.	DES.	QTY	REMARK	NO.	PART NO.	DES.	QTY	REMARK
1	Q1460825	HEXAGON BOLT	3		25	1014006370	FRONT BRAKE PIPE, LH	1	
2	1014001648	FRONT BRAKE HOSE, LH	1		26	1014006372	FRONT BRAKE PIPE, RH	1	
3	1014001649	FRONT BRAKE HOSE, RH	1		27	1014006382	REAR PIPE, LH I	1	
4		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	2		28	1014006384	REAR PIPE, RH I	1	
5	1014001950	GASKET	2		29	1014006378	FIVE-WAY VALVE TO PROPORTIONAL VALVE LR BRAKE PIPE ASSY.	1	
6		SEVEN-WAY CLIP	2		30	1014006380	FIVE-WAY VALVE TO PROPORTIONAL VALVE RR BRAKE PIPE ASSY.	1	
7	Q1460620	HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	2						
8	1014001738	REAR PIPE, LH II	1						
9	1014001739	REAR PIPE, RH II	1						
10		FIVE-WAY CLIP II	5						
11	Q32006	HEXAGON FLANGE NUT	7						
12	1014001737	SINGLE-WAY CLIP	2						
13	1014001650	REAR BRAKE HOSE	2						
14		REAR HOSE FIXING PLATE, LH	1						
15		REAR HOSE FIXING PLATE, RH	1						
16		HEXAGON BOLT	2						
17	Q1840645	HEXAGON FLANGE BOLT	1						
18	1014001765	BRAKE HOSE CONNECTING BOLT	2						
19		"L" TYPE CIRCLIP	4						
20	1014006374	1# BRAKE PIPE-BRAKE MASTER CYLINDER	1						
21	1014006376	2# BRAKE PIPE-BRAKE MASTER CYLINDER	1						
22	1014003882	FIVE-WAY VALVE	1						
23	1014001920	PROPORTIONAL VALVE	1						
24	1014001922	PROPORTIONAL VALVE BRACKET	1						

4060 FRONT DISC BRAKE & STEERING KNUCKLE ASSY.

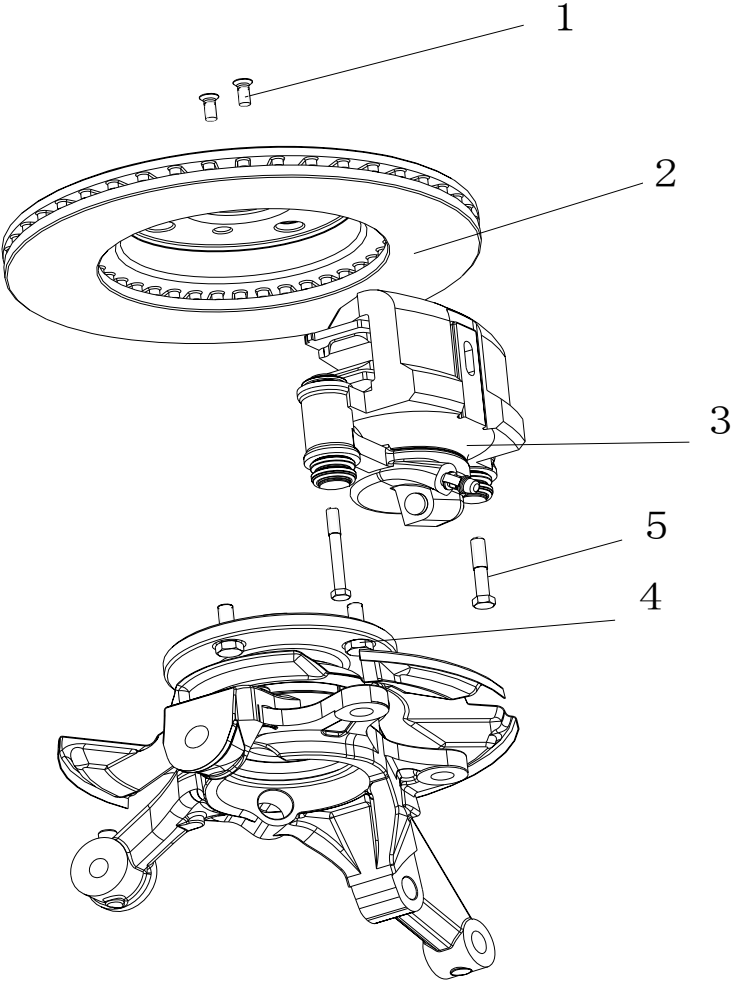


NO.	PART NO.	DES.	QTY	REMARK
	1014001602	LF DISC BRAKE & STEERING KNUCKLE ASSY.	1	W/O ABS
	1014003281	LF DISC BRAKE & STEERING KNUCKLE ASSY.	1	ABS
	1014001601	RF DISC BRAKE & STEERING KNUCKLE ASSY.	1	W/O ABS
	1014003283	RF DISC BRAKE & STEERING KNUCKLE ASSY.	1	ABS
1		CROSS SLOT HEAD SCREW	2	
2	1014001811	BRAKE DISC	1	
3	1014001809-01	LEFT BRAKE CALIPER ASSY.	1	
	1014001810-01	RIGHT BRAKE CALIPER ASSY.	1	
4		LEFT STEERING KNUCKLE & WHEEL HUB ASSY.	1	
		RIGHT STEERING KNUCKLE & WHEEL HUB ASSY.	1	
5		BRACKET MOUNTING BOLT	4	
	1017009293	LF WHEEL SPEED SENSOR ASSY.	1	
	1017009294	RF WHEEL SPEED SENSOR ASSY.	1	

4070 FRONT STEERING KNUCKLE & FRONT WHEEL HUB ASSY.


	NO.	PART NO.	DES.	QTY	REMARK
	1	1014001997	LEFT STEERING KNUCKLE	1	ABS
		1014001998	RIGHT STEERING KNUCKLE	1	ABS
		1014001807	LEFT STEERING KNUCKLE	1	W/O ABS
		1014001808	RIGHT STEERING KNUCKLE	1	W/O ABS
	3	1014003153	LEFT SPLASH GUARD	1	
		1014003154	RIGHT SPLASH GUARD	1	
			M6 HEXAGON HEAD BOLT	3	
	6	1014003218	FRONT WHEEL HUB BOLT	4	
	7	1014003148	FRONT WHEEL HUB	1	
8	1014003273	DUAL ROW BALL BEARING	1		
9	1014003150	HOLE CIRCLIP	1		

4080 REAR DRUM BRAKE & WHEEL HUB ASSY.

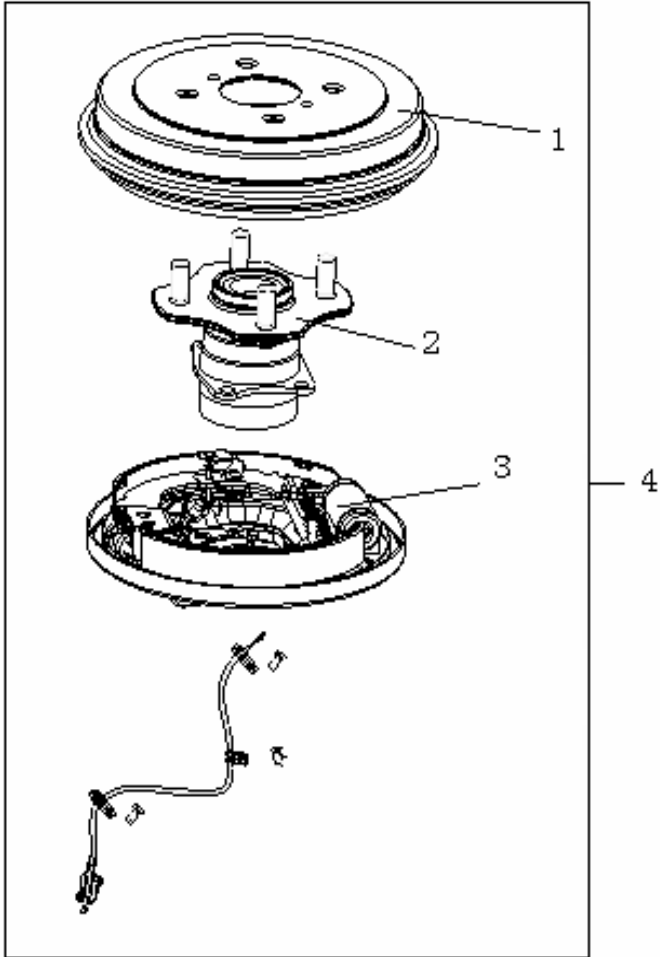


NO.	PART NO.	DES.	QTY	REMARK
1	1014001815	REAR BRAKE DRUM	1	
2	1014001814	REAR WHEEL HUB	1	W/O ABS
	1014003295	REAR WHEEL HUB	1	ABS
3	1014003873	LR BRAKE ASSY.	1	
	1014003874	RR BRAKE ASSY.	1	
4	1014001603	LR DRUM BRAKE & WHEEL HUB ASSY.	1	W/O ABS
	1014003291	LR DRUM BRAKE & WHEEL HUB ASSY.	1	ABS
	1014001604	RR DRUM BRAKE & WHEEL HUB ASSY.	1	W/O ABS
	1014003293	RR DRUM BRAKE & WHEEL HUB ASSY.	1	ABS

4090 PARKING BRAKE CONTROL

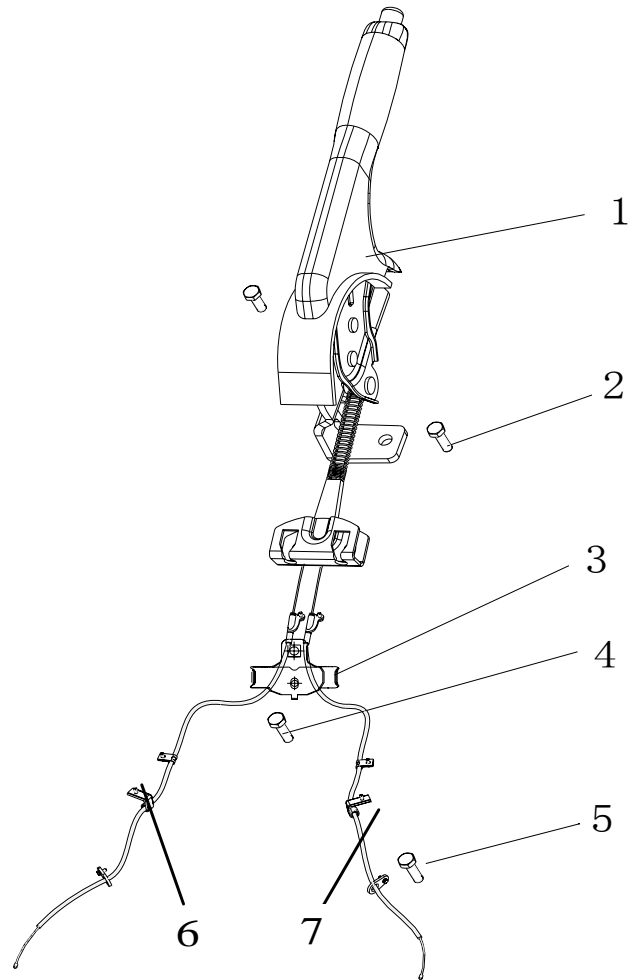


NO.	PART NO.	DES.	QTY	REMARK
1	1014001661	PARKING BRAKE CONTROL LEVER ASSY.	1	
2		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	2	
3		PARKING BRAKE CABLE FIXING BRACKET	1	
4		HEXAGON HEAD BOLT	1	
5		HEXAGON HEAD BOLT	8	
6	1014001818	LEFT PARKING BRAKET CABLE ASSY,	1	
7	1014001819	RIGHT PARKING BRAKET CABLE ASSY,	1	

4100 STEERING GEAR ASSY.

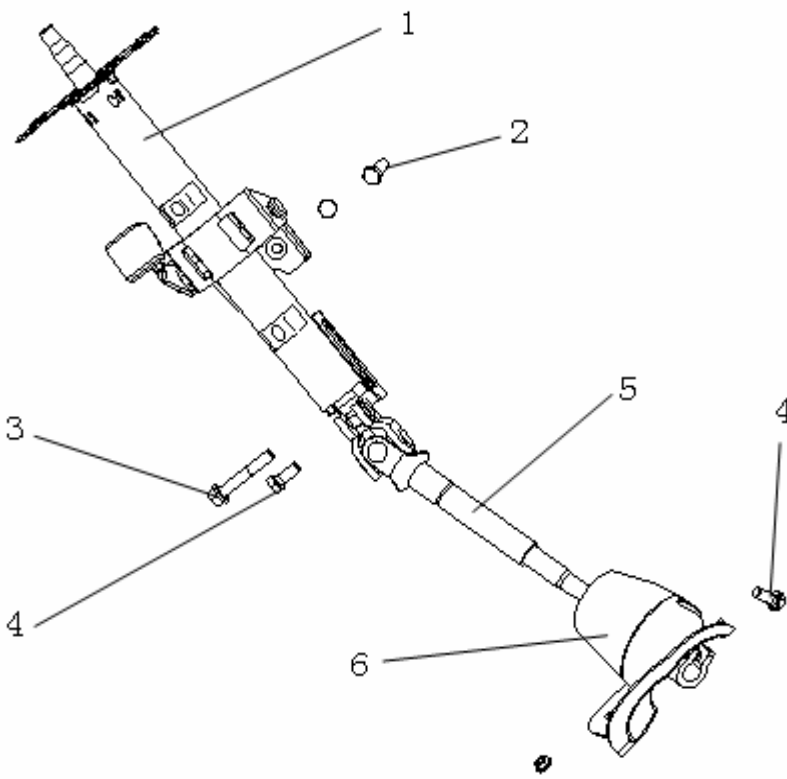	NO.	PART NO.	DES.	QTY	REMARK	
 <p>The diagram shows an exploded view of a steering gear assembly. Callout 1 points to the main steering column. Callout 2 points to a hexagon head bolt and plain washer assembly. Callout 3 points to a hexagon flange bolt. Callout 4 points to hexagon head bolts. Callout 5 points to the universal joint assembly. Callout 6 points to the steering column spline dust boot.</p>	1	1014001698	STEERING COLUMN ASSY.	1		
	2		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	2		
	3		HEXAGON FLANGE BOLT	1		
	4		HEXAGON HEAD BOLT	2		
	5	1014001749	UNIVERSAL JOINT ASSY.	1		
	6	1014001834	STEERING COLUMN SPLINE DUST BOOT	1		
		1018005900	STEERING COLUMN UPPER COVER	1		
		1018005901	STEERING COLUMN LOWER COVER	1		

4110 HEPS ASSY.

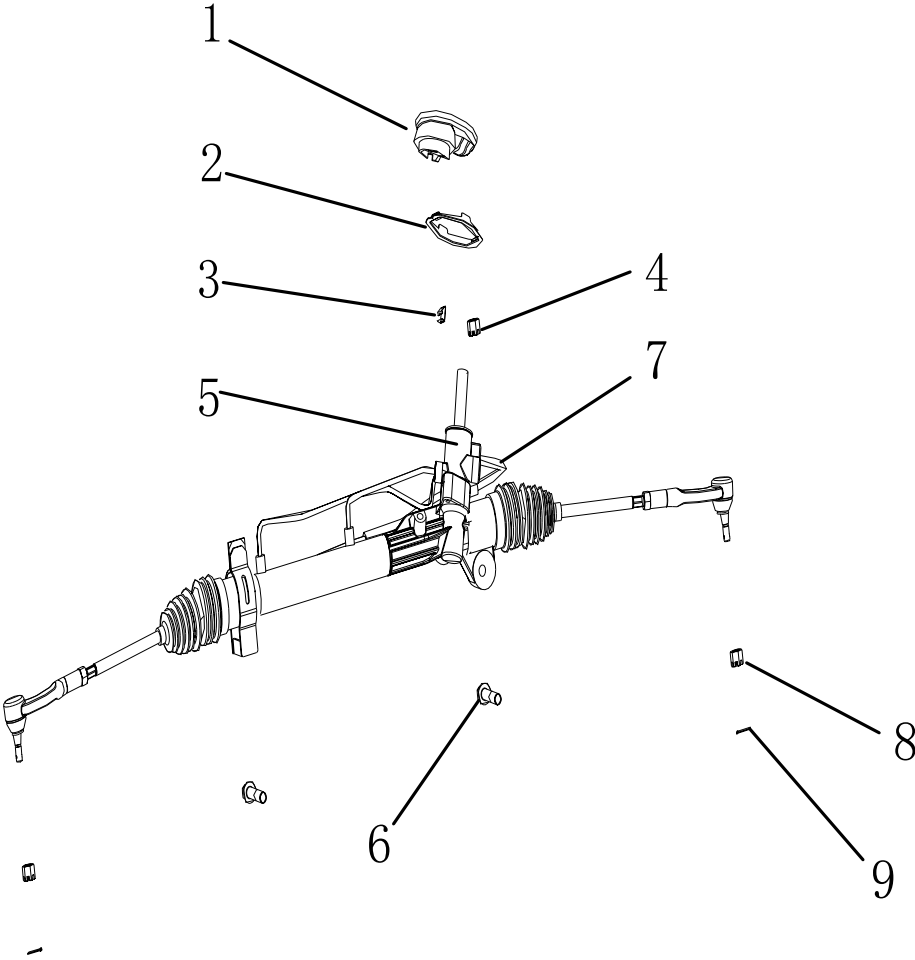	NO.	PART NO.	DES.	QTY	REMARK
	1	1014001831	DUST BOOT	1	
	2	1014001832	DUST BOOT INTERIOR PLATE	1	
	3	1014001833	DUST BOOT CLIP	1	
	4	Q32006	HEXAGON FLANGE BOLT	1	
	5	1014001834	STEERING COLUMN SPLINDE DUST BOOT	1	
	6		HEXAGON FLANGE BOLT	2	
	7	1014001633	HEPS & TIE ROD ASSY.	1	
	8		"2" TYPE HEXAGON SLOTTED NUT	2	
	9		COTTER PIN	2	

4120 STEERING PIPELINE

	NO.	PART NO.	DES.	QTY	REMARK
<p>The diagram shows an exploded view of the steering pipeline assembly. Callout 1 points to the lower pressure pipe to the reservoir assembly. Callouts 2-5 point to various bolts and washers. Callout 6 points to the oil pump mounting bracket. Callout 7 points to a hexagon head bolt and plain washer assembly. Callout 8 points to a gasket. Callout 9 points to a connecting bolt. Callout 10 points to the reservoir connecting pipe. Callout 11 points to a steel spring hoop. Callout 12 points to the reservoir. Callout 13 points to another hexagon head bolt and plain washer assembly. Callout 14 points to a reservoir bracket clip. Callout 15 points to the reservoir bracket assembly. Callout 16 points to another steel spring hoop. Callout 17 points to the oil pump adjuster bracket. Callout 19 points to a belt. Callout 20 points to the Heps pump with bracket assembly (without reservoir). Callout 21 points to the Heps pump. Callout 23 points to the oil pump left bracket. Callout 24 points to the oil pump right bracket. Callout 25 points to the lower pressure pipe to the Heps assembly.</p>	1	1014001794	HIGH PRESSURE PIPE ASSY.	1	
	2		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	3	
	3		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	2	
	4		"2" TYPE HEXAGON NUT	1	
	5		GB97.1Φ10 "A" TYPE PLAIN WASHER	1	
	6	1014001837	OIL PUMP MOUNTING BRACKET	1	
	7		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	1	
	8	1014001836	GASKET	1	
	9	1014001835	CONNECTING BOLT	1	
	10	1014001304	RESERVOIR CONNECTING PIPE	1	
	11		STEEL SPRING HOOP	2	
	12	1014001303-01	RESERVOIR	1	
	13	Q1460620	HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	2	
	14		RESERVOIR BRACKET CLIP	1	
	15	1014001318	RESERVOIR BRACKET ASSY.	1	
	16		STEEL SPRING HOOP	1	
	17	1014001837	OIL PUMP ADJUSTER BRACKET	1	
	19	3PK610	BELT	1	
	20	1014001307	HEPS PUMP WITH BRACKET ASSY.(W/O RESERVOIR)	1	
		1016003906	HEPS PUMP	1	
	21	1096010685	PUMP DRIVE PULLEY	1	
	23		OIL PUMP LEFT BRACKET	1	
	24		OIL PUMP RIGHT BRACKET	1	
	25	1014001891	LOWER PRESSURE PIPE TO RESERVOIR ASSY.	1	
		1014001977	LOWER PRESSURE PIPE TO HEPS ASSY.	1	

4130 MT CONTROL

	NO.	PART NO.	DES.	QTY	REMARK
	1	1014001763	GEARSHIFT LEVER KNOB	1	
	2	1014001747	TRANSMISSION CONTROL LEVER DUST BOOT	1	
	3	1016000019	MANUAL GEARSHIFT ASSY.	1	
	4		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	4	
	5	1014001685	GEARSHIFT CABLE ASSY.	1	
	6		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	3	
	7	1014001762	CLIP	2	
	8		GEARSHIFT BRACKET	1	
	9	Q40208	GASKET	2	
	10	Q50108	LOCKPIN	2	
	11		GEARSHIFT BRACKET	1	
	12		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	4	
	13	Q50110	LOCKPIN	1	

4140 AT CONTROL

	NO.	PART NO.	DES.	QTY	REMARK
	1		AUTO GEARSHIFT CONTROL LEVER	1	
	2		LOCKPIN	4	
	3		"2" TYPE HEXAGON NUT	1	
	4	1014001876	AT GEARSHIFT ASSY.	1	
	5		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	1	
	6	1018005710	"E" TYPE CLIP	1	
	7	1014001937	GEARSHIFT CABLE ASSY.	1	
	8	1014001938	KEY POSITION CABLE	2	
	9		PLAIN WASHER	1	
	10		SPRING WASHER	1	
	11		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	1	


4150 FRONT SUSPENSION

NO.	PART NO.	DES.	QTY	REMARK	NO.	PART NO.	DES.	QTY	REMARK
1	1014001605	FRONT SUSPENSION CROSS MEMBER ASSY.	1		25	1014001707	FRONT COIL SPRING	2	
2	1014001335	HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	2		26	1014001709	FRONT CUSHION	2	
3	1014001336	HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	2		27	1014001708	FRONT SHOCK ABSORBER ASSY.	2	
4	1014001682	FRONT SUSPENSION REINFORCEMENT RAIL	2		30	1014001683	FRONT STABILIZER BAR	1	
5		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	4		31	1014001667	FRONT STABILIZER BAR BRACKET	2	
6	1014001607	LEFT LOWER TRAILING ARM ASSY.	1		32	1014001669	FRONT STABILIZER BAR BUSHING	2	
7	1014001606	RIGHT LOWER TRAILING ARM ASSY.	1		33		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	4	
8	1014001338	HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	2		34	1014001670	FRONT STABILIZER BAR BOLT	2	
9		HEXAGON FLANGE NUT	2		35	1014001671	SNAP RING	8	
10	1014001339	HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	2		36	1014001672	GASKET	8	
11		HEXAGON SLOTTED NUT	2		37	1014001668	BIG WASHER	2	
12		LOCKPIN	2		38		HEXAGON HEAD LOCKING NUT	4	
13		FRONT STABILIZER BAR SET	1						
14		FRONT POLE ASSY.	2						
15	JQ184B1450TF2	HEXAGON FLANGE BOLT	4						
16	Q32014	HEXAGON FLANGE NUT	4						
17	1014001715	SUSPENSION SUPPORT	2						
18		HEXAGON NUT	3						
19	1014001714	UPPER SEAT DUST BOOT	2						
20		HEXAGON LOCKING NUT	2						
21	1014001713	FRONT SUSPENSION UPPER SEAT	2						
22	1014001712	FRONT SUSPENSION UPPER SEAT OIL SEAL	2						
23	1014001711	SPRING UPPER SEAT	2						
24	1014001710	SPRING DUST BOOT	2						

4160 REAR SUSPENSION


	NO.	PART NO.	DES.	QTY	REMARK
	1	1014002428	REAR AXLE ASSY.	1	
	2	1014001675	REAR AXLE BRACKET BUSHING ASSY.	2	
	3	1014001337	HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	2	
	4	1014001681	LOWER CUSHION	2	
	5	1014013916	REAR SPRING	2	
	6	1014001680	UPPER CUSHION	2	
	7	1014001676	REAR SHOCK ABSORBER	2	
	8	1014001724	LOWER SEAT LOWER PRESSURE PLATE	2	
	9	1014001725	REAR SHOCK ABSORBER LOWER SEAT	2	
	10	1014001706	REAR SHOCK ABSORBER UPPER SEAT	2	
	11		UPPER SEAT UPPER PRESSURE PLATE	2	
	12		HEXAGON NUT	4	
	13	1014001723	REAR CUSHION	2	
	14		BIG WASHER	2	
	15		"A" TYPE HEXAGON FLANG NUT M12X1.25	2	
	16	1014002432	REAR SHOCK ABSORBER DUST BOOT	2	
	17	1014001957	BRAKE MOUNTING BOLT	8	
	18	1014017073	REAR SHOCK ABSORBER SLEEVE	2	



4170 CONSTANT VELOCITY DRIVE SHAFT

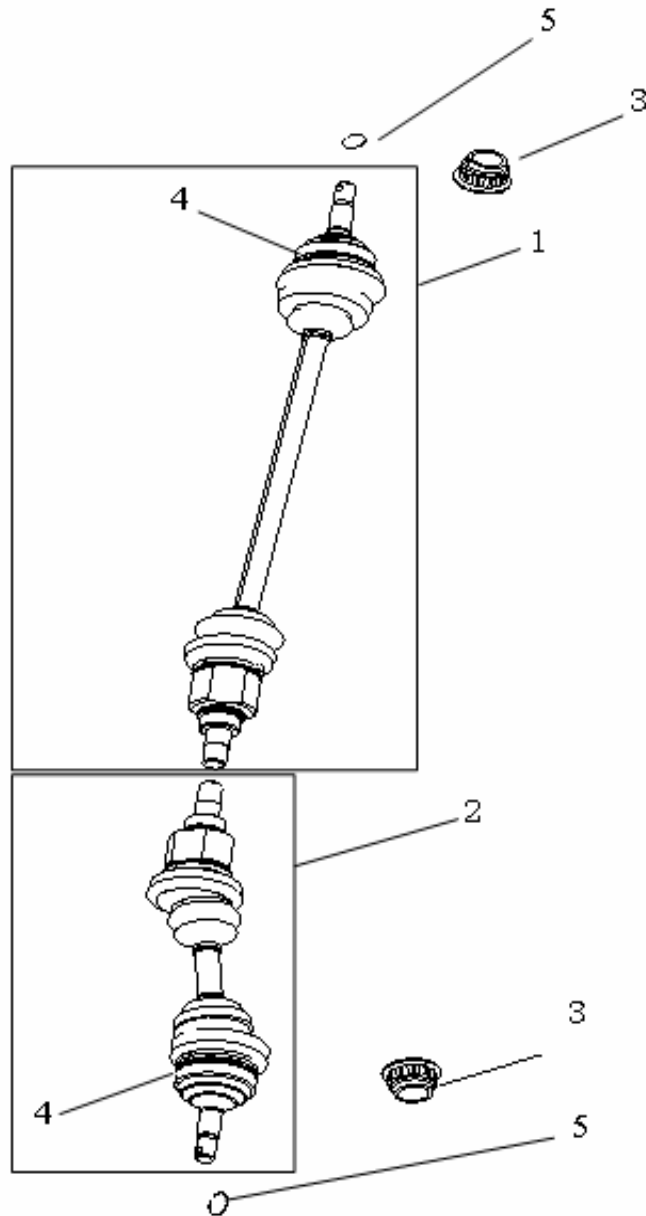


NO.	PART NO.	DES.	QTY	REMARK
1	1014001886	RIGHT CONSTANT VELOCITY DRIVE SHAFT ASSY.	1	S160
	1014001420	RIGHT CONSTANT VELOCITY DRIVE SHAFT ASSY.	1	S160G
	1014001883	RIGHT CONSTANT VELOCITY DRIVE SHAFT ASSY.	1	AT
2	1014001885	LEFT CONSTANT VELOCITY DRIVE SHAFT ASSY.	1	S160/S160G
	1014001884	LEFT CONSTANT VELOCITY DRIVE SHAFT ASSY.	1	AT
3	1014001757	FIXING NUT	2	
4		FRONT GEAR RING	2	

4180 TYRE ASSY.

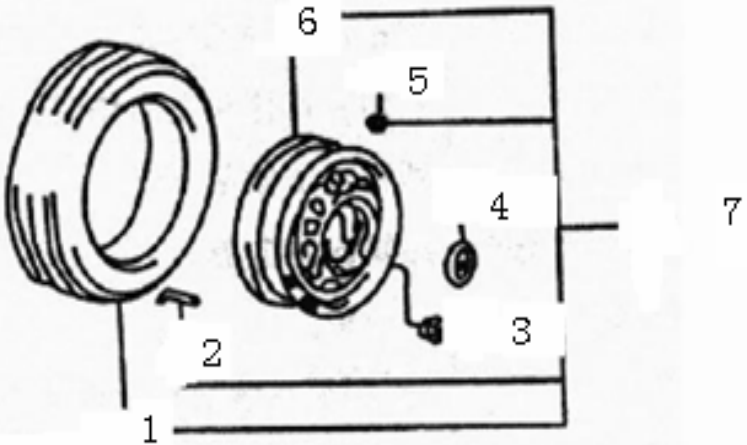
	NO.	PART NO.	DES.	QTY	REMARK
	1	1014002000	TYRE ASSY.	4	
	2	3101615106	TYRE VALVE	4	
	3	1054005001	WHEEL NUT	4	
	4	1408053180	WHEEL HUB TRIM COVER	1	
	5		BALANCE WEIGHT	1	
	6	1014001974	STEEL WHEEL RIM ASSY.	1	
		1014001996	ALUMINUM WHEEL RIM ASSY.	1	
7		WHEEL ASSY.	1		
		1018001968	SPARE TYRE PRESSURE PLATE	1	

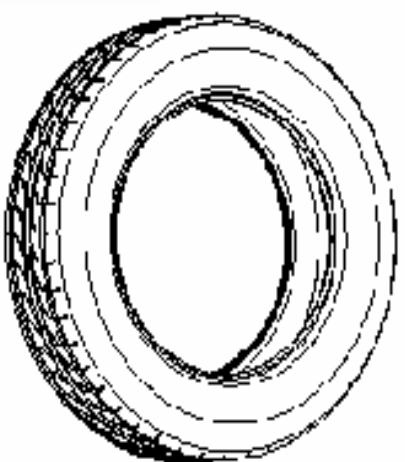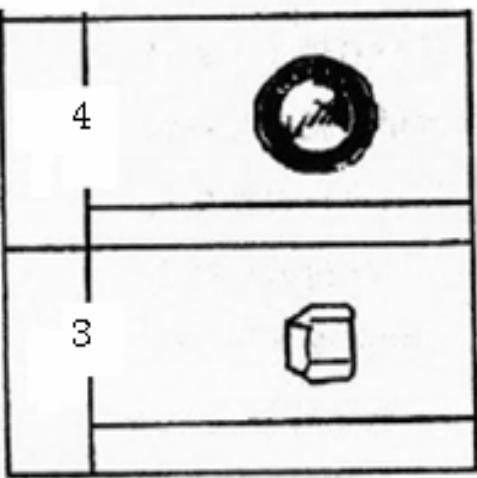

4190 STEERING WHEEL ASSY.

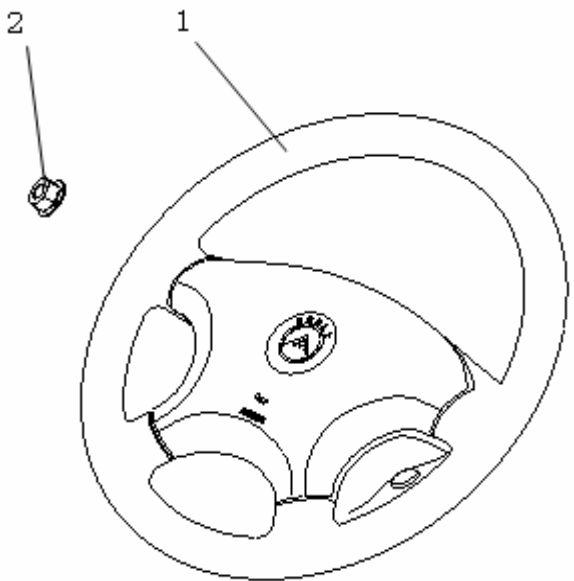	NO.	PART NO.	DES.	QTY	REMARK
	1	1014001744	STEERING WHEEL ASSY.	1	SRS
		1014001745	STEERING WHEEL ASSY.(LEATHER)	1	SRS
		1018011091	STEERING WHEEL ASSY.	1	MK08
		1018009045	STEERING WHEEL COVER	1	
	2		HEXAGON FLANGE NUT	1	


4200 MK CHASSIS REPAIR KIT

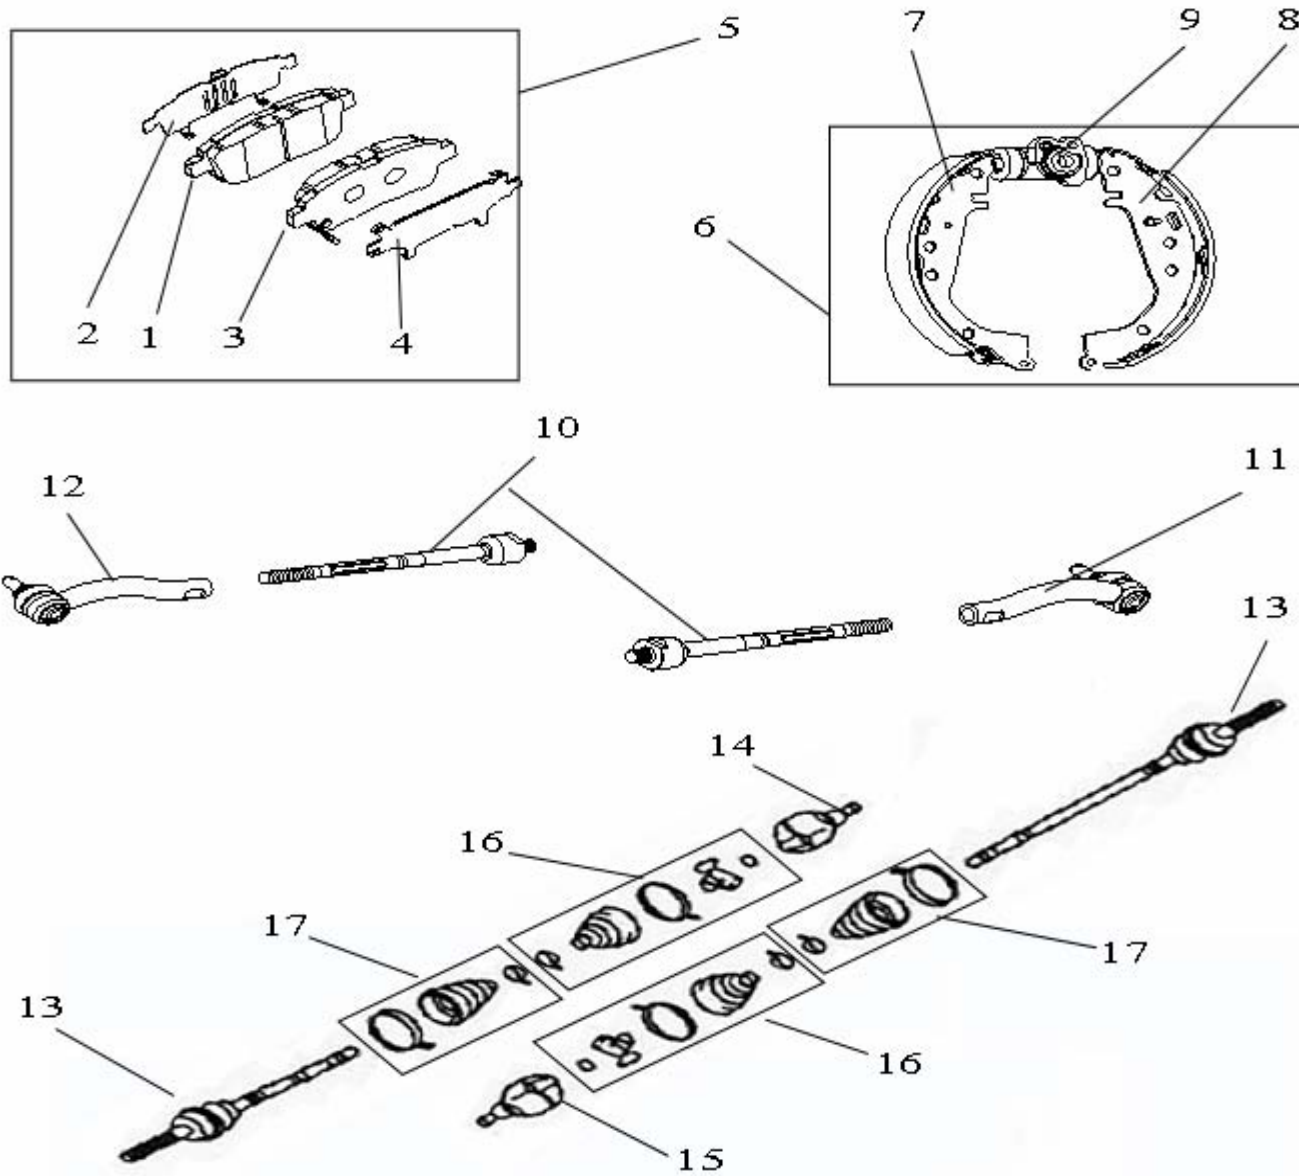

4200 MK CHASSIS REPAIR KIT







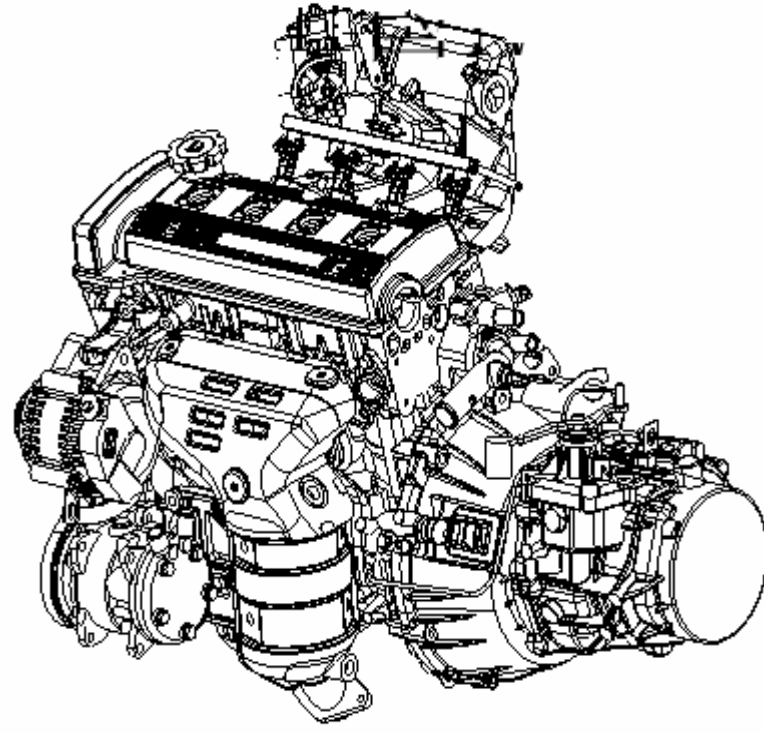


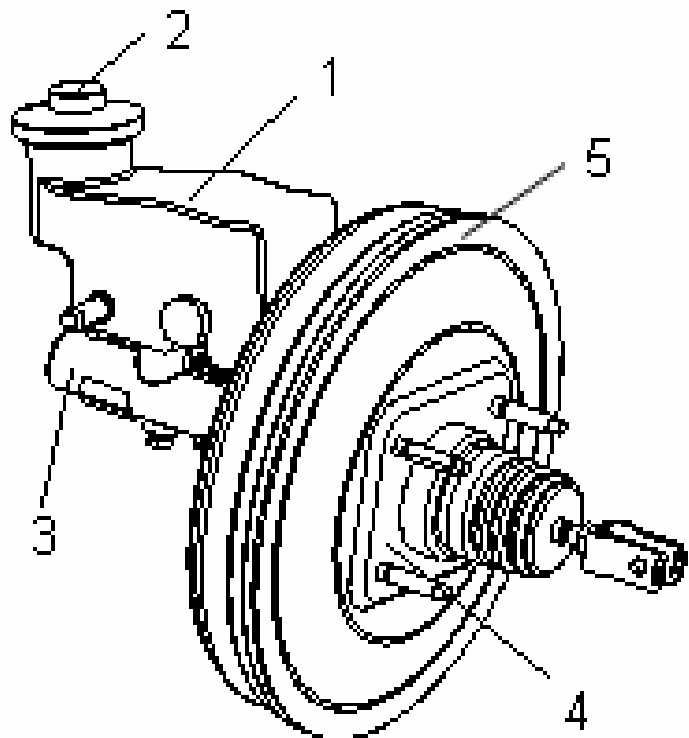






NO.	PART NO.	DES.	QTY	REMARK	NO.	PART NO.	DES.	QTY	REMARK
1		EXTERIOR BRAKE FRICTION PAD	1						
2		EXTERIOR NOISE INSULATOR ASSY.	1						
3		LEFT INTERIOR BRAKE FRICTION PAD	1						
4		RIGHT INTERIOR BRAKE FRICTION PAD	1						
5		INTERIOR NOISE INSULATOR ASSY.	1						
	1014003350	FRONT BRAKE FRICTION PAD	1						
6	1014003351	REAR BRAKE FRICTION PAD	1						
7		BRAKE SHOE ASSY. I	1						
8		LEFT BRAKE SHOE II	1						
		RIGHT BRAKE SHOE II	1						
9	1014003192	LR BRAKE WHEEL CYLINDER	1						
	1014003193	RR BRAKE WHEEL CYLINDER	1						
10	1014001962	STEERING TIE ROD	1						
11	1014001960	LEFT STEERING TIE ROD & BALL JOINT	1						
12	1014001961	RIGHT STEERING TIE ROD & BALL JOINT	1						
13	1014003354	EXTERIOR RZEPPA CONSTANT VELOCITY JOINT	1						
14	1014003356	LEFT INTERIOR RZEPPA CONSTANT VELOCITY JOINT	1	MT					
	1014003358	LEFT INTERIOR RZEPPA CONSTANT VELOCITY JOINT	1	AT					
15	1014003359	RIGHT INTERIOR RZEPPA CONSTANT VELOCITY JOINT	1	AT					
	1014003357	RIGHT INTERIOR RZEPPA CONSTANT VELOCITY JOINT	1	MT					
16	1014003360	INTERIOR RZEPPA REPAIR KIT	1						
17	1014003361	EXTERIOR RZEPPA REPAIR KIT	1						

4210 MK CHASSIS REPAIR KIT



NO.	PART NO.	DES.	QTY	REMARK
1	1014003369	RESERVOIR	1	
2	1014003370	RESERVOIR COVER	1	
3	1014003371	BRAKE MASTER CYLINDER	1	ABS
	1014003386	BRAKE MASTER CYLINDER	1	W/O ABS
4		VACUUM BOOSTER GASKET	1	
5	1014013478	BRAKE MASTER CYLINDER & VACUUM BOOSTER	1	
	1014001975	BRAKE MASTER CYLINDER & VACUUM BOOSTER	1	W/O ABS


PICTURE INDEX

<p style="text-align: center;">6000 POWER</p>	<p>6010 MR479QA ENGINE ASSY.</p>  <p style="text-align: right;">1-1-1</p>	<p>6020 MR481QA ENGINE ASSY.</p>  <p style="text-align: right;">1-1-2</p>	<p>6030 ENGINE MOUNT</p>  <p style="text-align: right;">2-1</p>	<p>6040 ENGINE MOUNT</p>  <p style="text-align: right;">2-2</p>	<p>6050 FUEL TANK</p>  <p style="text-align: right;">3</p>	<p>6060 FUEL LINE</p> 
						<p>6070 FUEL PUMP ASSY.</p> 
						<p>6080 AIR INTAKE SYSTEM</p>  <p style="text-align: right;">7</p>
						<p>6090 AIR CLEANER ASSY.</p>  <p style="text-align: right;">7</p>
						<p>6100 COOLING SYSTEM (MT)</p>  <p style="text-align: right;">8-1</p>
		<p>6120-01 EXHAUST SYSTEM (1.6L)</p>  <p style="text-align: right;">10-2</p>	<p>6120 EXHAUST SYSTEM (1.5L)</p>  <p style="text-align: right;">10-1</p>	<p>6110-01 COOLING SYSTEM (AT)</p>  <p style="text-align: right;">8-2</p>	<p>6100-01 COOLING SYSTEM (MT)</p>  <p style="text-align: right;">8-1</p>	<p>6110 COOLING SYSTEM (AT)</p>  <p style="text-align: right;">8-2</p>

6010 MR479QA ENGINE ASSY.

	NO.	PART NO.	DES.	QTY	REMARK
	1	2000000002	1.5L ENGINE ASSY.	1	
		1086090501	1.5L ENGINE ASSY.	1	OBD
		1016003746	1.5L ENGINE ASSY.	1	ANTI-THEFT
	2		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	2	
	3		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	1	
	4		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	1	
	5		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	3	
	6		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	1	
	7	3000000011	S160G TRANSMISSION	1	
		3000000001	S160 TRANSMISSION	1	
		3000000013	AUTO TRANSMISSION	1	
		2020000003	1.5L ENGINE OVERHAUL KIT	1	

6020 MR481QA ENGINE ASSY.

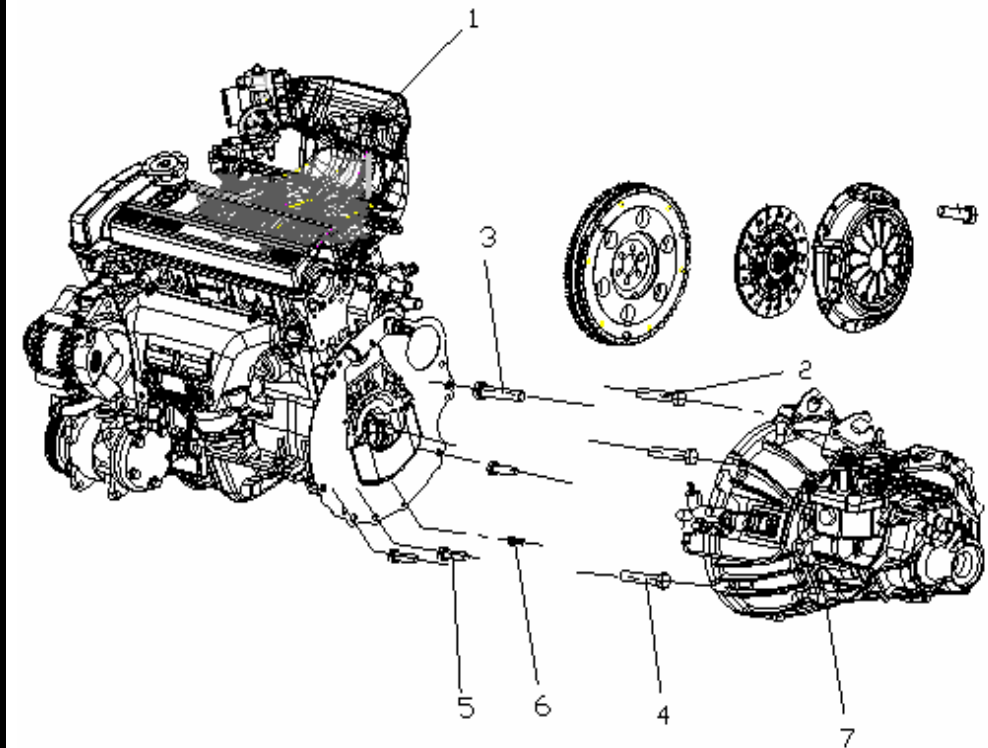	NO.	PART NO.	DES.	QTY	REMARK
	1	2160013901	1.6L ENGINE ASSY.	1	
	2		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	2	
	3		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	1	
	4		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	1	
	5		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	3	
	6		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	1	
	7	3000000005	S160A TRANSMISSION	1	
		3000000013	AUTO TRANSMISSION	1	
		1086000000	1.6L ENGINE OVERHAUL KIT	1	

6030 ENGINE MOUNTING(MT)

	NO.	PART NO.	DES.	QTY	REMARK
	1	1016000631	ENGINE REAR BRACKET	1	S160
		1016001760	ENGINE REAR BRACKET	1	S160G
	2		HEXAGON FLANGE BOLT	4	
	3	1016000632	ENGINE REAR INSULATOR	1	
	4		HEXAGON FLANGE BOLT	1	
	5		HEXAGON FLANGE NUT	3	
	6		HEXAGON FLANGE BOLT	1	
	7	1016000633	ENGINE LEFT BRACKET	1	
	8	JQ184C1030	HEXAGON FLANGE BOLT	7	
	9	1016000634	ENGINE LEFT INSULATOR	1	
	10		HEXAGON FLANGE BOLT	1	
	11	1016000636	ENGINE RIGHT INSULATOR	1	
12		HEXAGON FLANGE BOLT	2		

6040 ENGINE MOUNTING (AT)

	NO.	PART NO.	DES.	QTY	REMARK
	1	1016000648	ENGINE REAR BRACKET	1	
	2		HEXAGON FLANGE BOLT	2	
	3		HEXAGON FLANGE BOLT	1	
	4	1016000632	ENGINE REAR INSULATOR	1	
	5		HEXAGON FLANGE BOLT	1	
	6		HEXAGON FLANGE NUT	3	
	7		HEXAGON FLANGE BOLT	1	
	8	1016000651	ENGINE LEFT BRACKET	1	
	9		HEXAGON FLANGE BOLT	6	
	10	1016000649	ENGINE LEFT INSULATOR	1	
	11	JQ184C1030	HEXAGON FLANGE BOLT	2	
	12		HEXAGON FLANGE BOLT	1	
	13	1016000636	ENGINE RIGHT INSULATOR	1	
	14		HEXAGON FLANGE BOLT	2	

6050 FUEL TANK


	NO.	PART NO.	DES.	QTY	REMARK
	1	1016001331	OIL FILLER CAP ASSY.	1	
	2	1016001506	OIL FILLER SEAL	1	
	3	1016001335	OIL FILLER PIPE	1	
	4		CROSS SLOTTED HEXAGON HEAD BOLT & WASHER ASSY.	4	
	5		CROSS SLOTTED HEXAGON HEAD BOLT & WASHER ASSY.	2	
	6	1016001338	OIL FILLER HOSE	1	
	7		"A" TYPE WORM DRIVE HOSE HOOP	2	
	8	1016001339	OIL FILLER VENT HOSE	1	
	9		"A" TYPE WORM DRIVE HOSE HOOP	2	
	10	1016001859	FUEL TANK ASSY.	1	
	11		CROSS SLOTTED HEXAGON HEAD BOLT & WASHER ASSY.	4	

6060 FUEL LINE & FUEL EVAPORATOR

	NO.	PART NO.	DES.	QTY	REMARK
	1	1016001494	CONTROL VALVE TO ENGINE HOSE	1	
	2		STEEL HOOP	3	
	3		STEEL HOOP	3	
	4	1036000974	CANISTER CONTROL VALVE	1	
	5		CROSS HEXAGON HEAD BOLT & SPRING WASHER ASSY.	3	
	6	1016001495	CONTROL VALVE TO CANISTER HOSE	1	
	7	1016001355	CANISTER(VERTICAL)	1	
	8	1016001354	CANISTER AIR INTAKE PIPE	1	
	9		STEEL HOOP	2	
	10	1016001352	METAL VENT PIPE	1	
	11	1016001351	METAL FUEL PIPE	1	
	12	1016001353	METAL FUEL RETURN PIPE	1	
	13		FIVE- WAY CLIP	2	
	14		FUEL RETURN HOSE	1	
	15		"A" TYPE WORM DRIVE HOSE HOOP	4	
	16	1016001507	FUEL HOSE	1	
	17		CANISTER CONTROL VALVE MOUNTING BRACKET	1	
	18	1016001503	CANISTER MOUNTING BRACKET	1	
	19		PIPE CLIP	1	

6070 FUEL PUMP ASSY.

NO.	PART NO.	DES.	QTY	REMARK
1		FUEL TANK BODY	1	
2	1016001861	FUEL PUMP ASSY.	1	
3	1016001523	FUEL TANK COVER	1	
4	1016001512	INLET FUEL FILTER HOSE	1	
5	1016001864	OIL RETURN HOSE	1	
6	1016001511	VENT HOSE	1	
7	1016001512	OUTLET FUEL FILTER HOSE	1	
8	10160001520	FUEL FILTER ASSY.	1	
9		FUEL TANK BAFFLE PLATE	1	
10	1016001526	SEAL	1	
11		CROSS SLOTTED HEAD SELF-TAPPING SCREW	3	

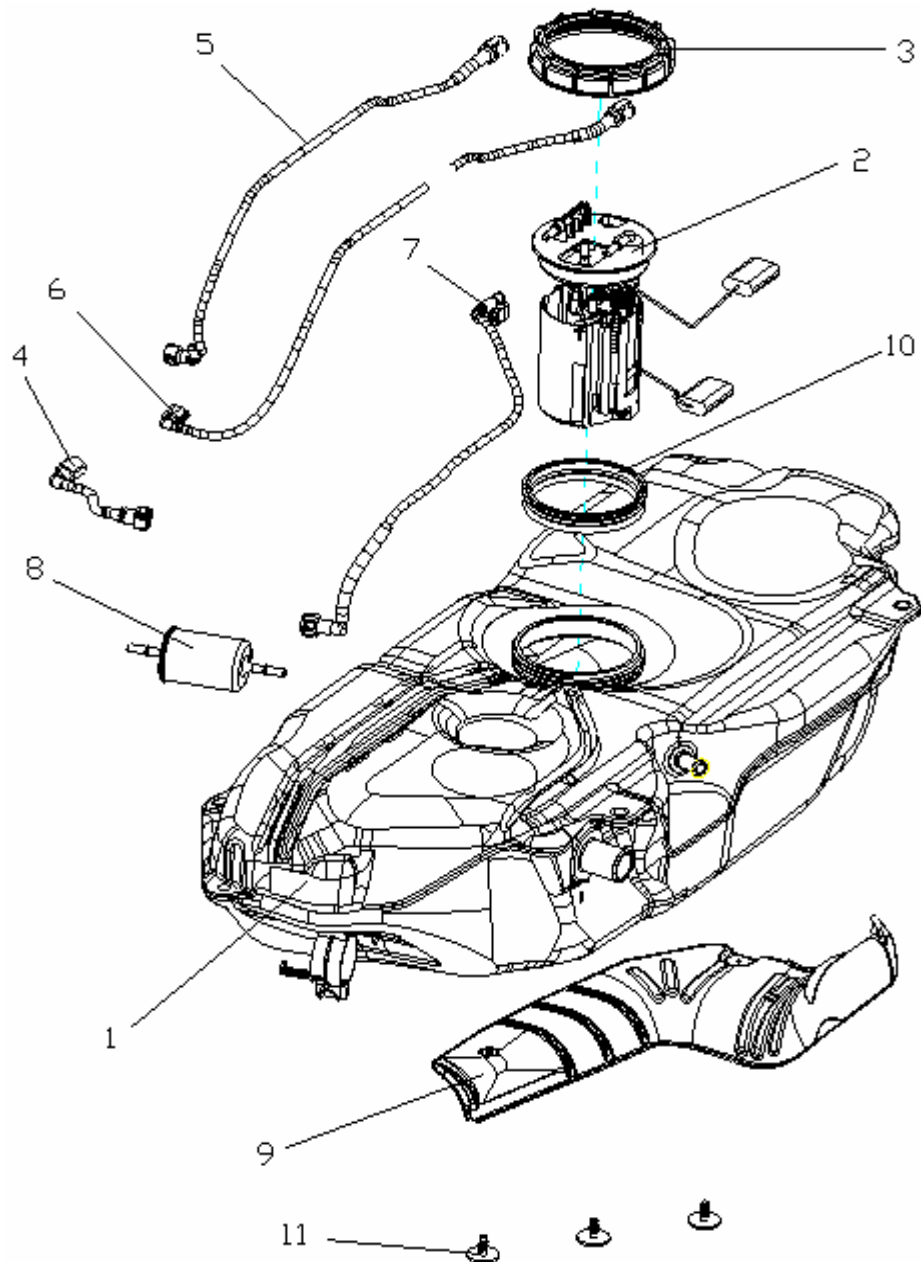

6080 AIR INTAKE SYSTEM


	NO.	PART NO.	DES.	QTY	REMARK
	1	1016000585	AIR CLEANER ASSY.	1	
	2		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	3	
	3	1018004652	PLASTIC EXPANSION CLIP(φ7)	1	
	4	1016000588	AIR CLEANER INTAKE HOSE	1	
	5		WORM DRIVE HOSE HOOP	2	
	6		PCV HOSE	1	
	7		WARMING GUIDE PIPE	1	
	8		STEEL HOOP	2	
	9		BRACKET	1	

6090 AIR CLEANER ASSY.

	NO.	PART NO.	DES.	QTY	REMARK
	1	1016000574	AIR CLEANER INTAKE PIPE ASSY.	1	
	2		AIR CLEANER UPPER BODY	1	
	3		AIR CLEANER LOWER BODY	1	
	4	1016000577	AIR CLEANER FILER	1	
	5		RUBBER CUSHION	3	
	6		BOLT BUSHING	3	
	7		CLIP	2	

6100 COOLING SYSTEM (MT)

NO.	PART NO.	DES.	QTY	REMARK
1	1016001409	RADIATOR ASSY.(MT)	1	
2	1016002191	COOLING FAN ASSY.	1	
3		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	4	
4	1016001407	RADIATOR LOWER CUSHION	2	
5	1016001408	RADIATOR UPPER CUSHION	2	
6	1016001401	RADIATOR WATER INLET PIPE	1	
7	1016001398	RADIATOR WATER OUTLET PIPE	1	
8		"A" TYPE WORM DRIVE HOSE HOOP	4	
9	1016001414	RADIATOR LEFT BAFFLE PLATE	1	
10	1016001415	RADIATOR RIGHT BAFFLE PLATE	1	
11	1601457180	RADIATOR CAP	1	
12		DRAIN SWITCH	1	
13	1016002045-01	EXPANSION TANK WITH OVERFLOW PIPE ASSY.	1	

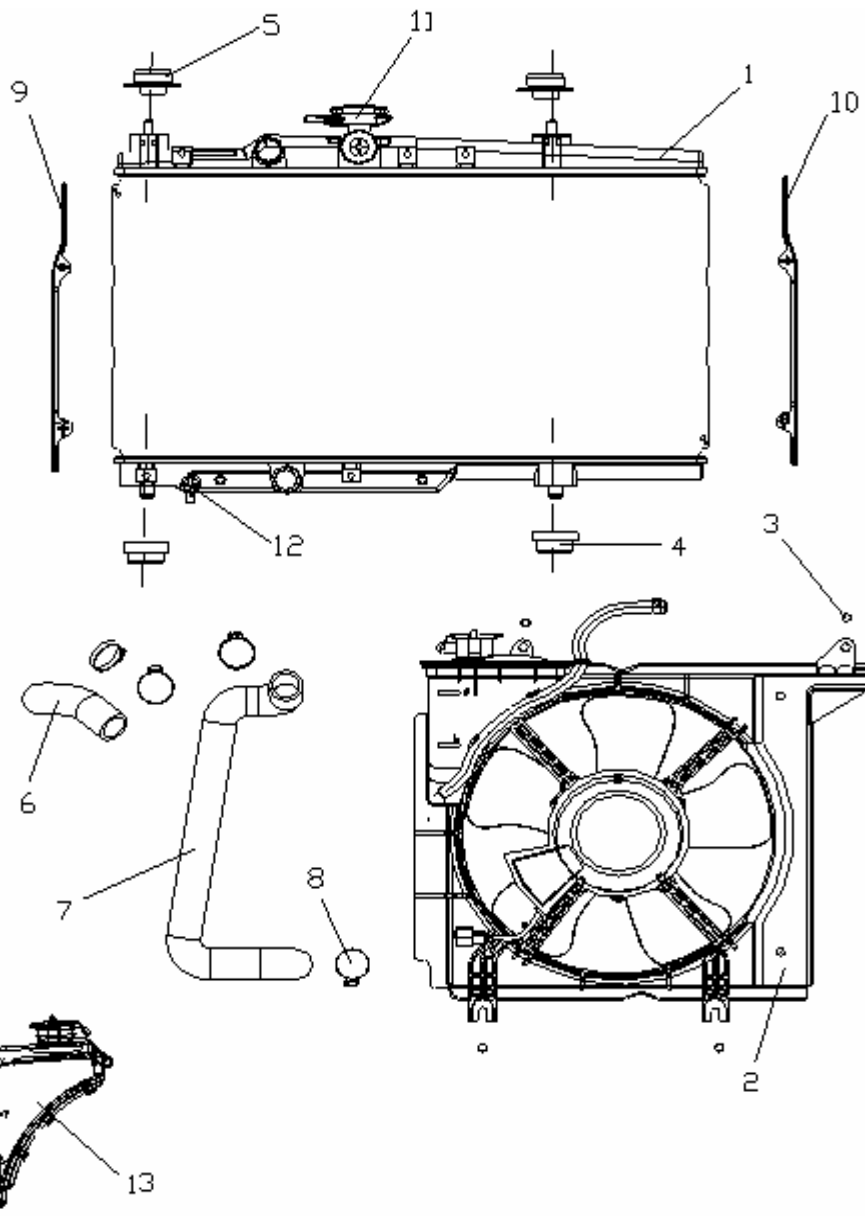


6110 COOLING SYSTEM (AT)


	NO.	PART NO.	DES.	QTY	REMARK
	1	1016000763	RADIATOR ASSY.(AT)	1	
	2	1016002191	COOLING FAN & MOTOR ASSY. I	1	
	3		HEXAGON BOLT, SPRING WASHER & PLATE WASHER SET	4	
	4	1016001407	RADIATOR LOWER CUSHION	2	
	5	1016001408	RADIATOR UPPER CUSHION	2	
	6	1016001401	RADIATOR WATER INLET PIPE	1	
	7	1016001398	RADIATOR WATER OUTLET PIPE	1	
	8		TYPE A WORM DRIVEN HOSE CIRCLIP	4	
	9	1016001412	ATF INLET PIPE	1	
	10	1016001413	ATF OUTET PIPE	1	
	11		STEEL BAND ELASTIC CIRCLIP	4	
	12	1016001414	RADIATOR LEFT BAFFLE PLATE	1	
	13	1016001415	RADIATOR RIGHT BAFFLE PLATE	1	
	14	1601457180	RADIATOR CAP	1	
	15		DRAIN SWITCH	1	
	16	1016002045-01	EXPANSION TANK WITH OVERFLOW TUBE ASSY.	1	

6100-1 COOLING SYSTEM (MT/RADIATOR FORWARD)

NO.	PART NO.	DES.	QTY	REMARK
1	1602041180-01	RADIATOR ASSY.(MT)	1	RADIATOR FORWARD
2	1602197180	RADIATOR LOWER CUSHION	2	RADIATOR FORWARD
3	1016001408	RADIATOR UPPER CUSHION	2	
4	1016002191	COOLING FAN & MOTOR ASSY. I	1	RADIATOR FORWARD
5	1016002192	COOLING FAN & MOTOR ASSY. II	1	
6		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	2	
7	1016003339	RADIATOR WATER INLET PIPE	1	RADIATOR FORWARD
8	1602200180	RADIATOR WATER OUTLET PIPE	1	RADIATOR FORWARD
9		"A" TYPE WORM DRIVE HOSE HOOP	4	
10	1016002045-01	EXPANSION TANK WITH OVERFLOW PIPE ASSY.	1	
11		CROSS SLOT SCREW & PLAIN WASHER ASSY.	3	

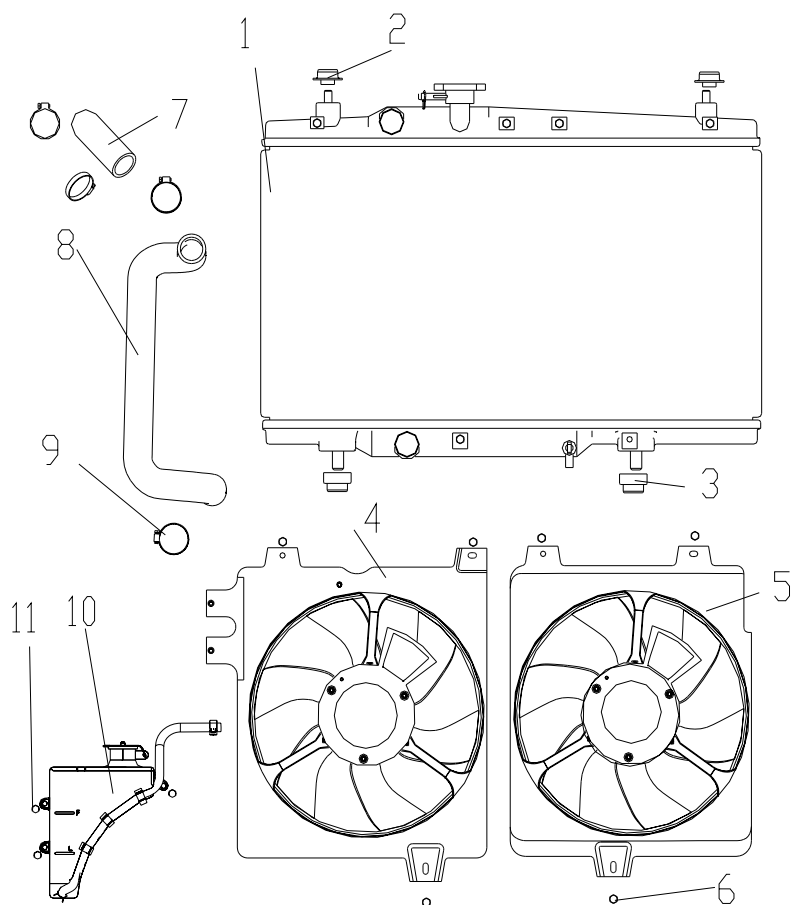

6110-1 COOLING SYSTEM (AT/RADIATOR FORWARD)

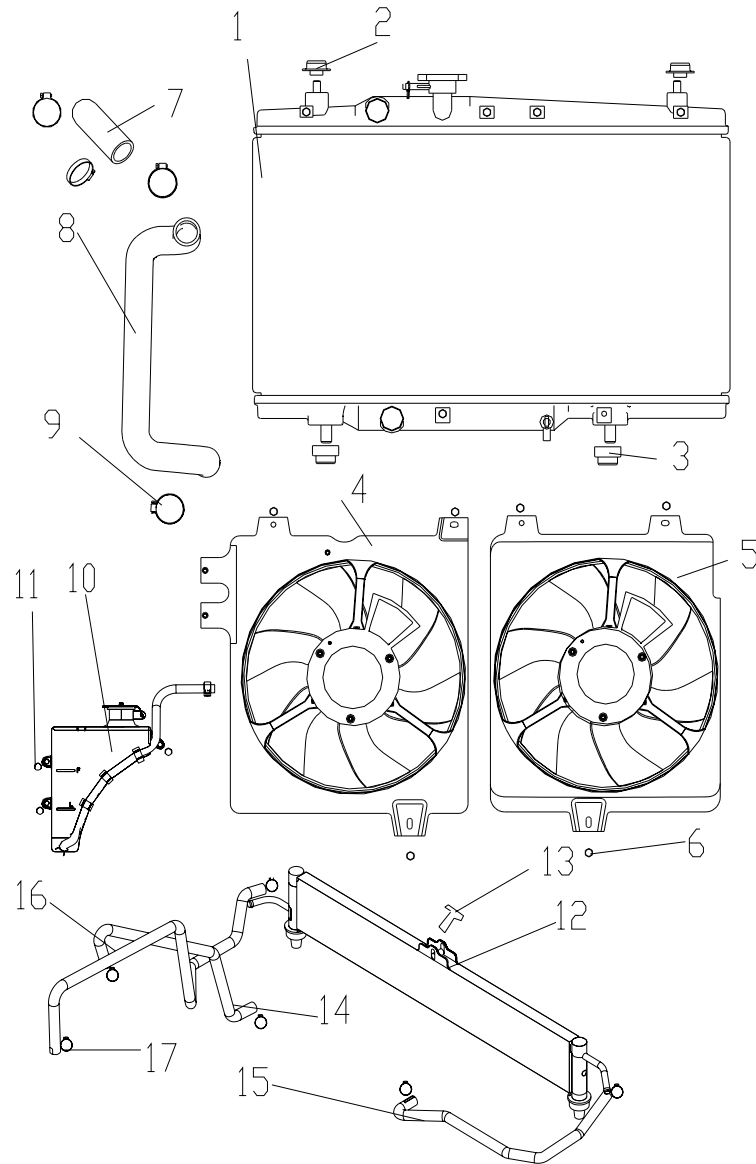

NO.	PART NO.	DES.	QTY	REMARK
1	1016000231	RADIATOR ASSY.(AT)	1	RADIATOR FORWARD
2	1602197180	RADIATOR LOWER CUSHION	2	RADIATOR FORWARD
3	1016001408	RADIATOR UPPER CUSHION	2	RADIATOR FORWARD
4	1016002191	COOLING FAN & MOTOR ASSY. I	1	RADIATOR FORWARD
5	1016002192	COOLING FAN & MOTOR ASSY. II	1	RADIATOR FORWARD
6		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	2	RADIATOR FORWARD
7	1016003339	RADIATOR WATER INLET PIPE	1	RADIATOR FORWARD
8	1602200180	RADIATOR WATER OUTLET PIPE	1	RADIATOR FORWARD
9		"A" TYPE WORM DRIVE HOSE HOOP	4	RADIATOR FORWARD
10	1016002045-01	EXPANSION TANK WITH OVERFLOW PIPE ASSY.	1	RADIATOR FORWARD
11		CROSS SLOT SCREW & PLAIN WASHER ASSY.	3	RADIATOR FORWARD
12	1016000177	OIL COOLER WITH MOUNTING BRACKET ASSY.	1	RADIATOR FORWARD
13		HEXAGON HEAD BOLT & SPRING WASHER ASSY.	1	RADIATOR FORWARD
14	1016000179	ATF OUTLET HOSE	1	RADIATOR FORWARD
15	1016000180	OIL COOLER OUTLET HOSE	1	RADIATOR FORWARD
16	1016000182	ATF INLET HOSE	1	RADIATOR FORWARD
17		"C" TYPE WORM DRIVE HOSE HOOP	6	RADIATOR FORWARD



















6120 EXHAUST SYSTEM(1.5L)

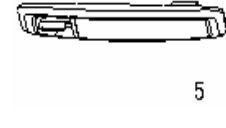	NO.	PART NO.	DES.	QTY	REMARK
	1	1016001384	FRONT EXHAUST PIPE ASSY.(TWC)	1	
	2	1016002020	EXHAUST PIPE GASKET	2	
	3		SPRING	4	
	4	1203131101	EXHAUST PIPE CONNECTING BOLT	4	
	5	1016001678	CENTER MUFFLER ASSY.	1	
	6	1016001444	FRONT EXHAUST SEAL IV	1	
	7		HEXAGO HEAD BOLT & SPRING WASHER ASSY.	2	
	8	1016001449	REAR MUFFLER ASSY.	1	
	9	1016001388	REAR RUBBER SEAT	2	
	10	1016001399	FRONT RUBBER SEAT	2	
	11	1016001389	FRONT FLOOR HEAT INSULATOR	1	
	12		HEXAGON HEAD BOLT & SPRING WASHER ASSY.	5	
	13	1016001390	FRONT EXHAUST PIPE BRACKET	1	
	14		HEXAGON HEAD BOLT & SPRING WASHER ASSY.	2	
	15	1016001391	REAR FLOOR HEAT INSULATOR	1	
	16	1016002495	EXHAUST MANIFOLD ASSY.(TWC)(OBD)	1	
	17	1017007963	REAR OXYGEN SENSOR WIRING HARNESS BRACKET	1	RUSSIA

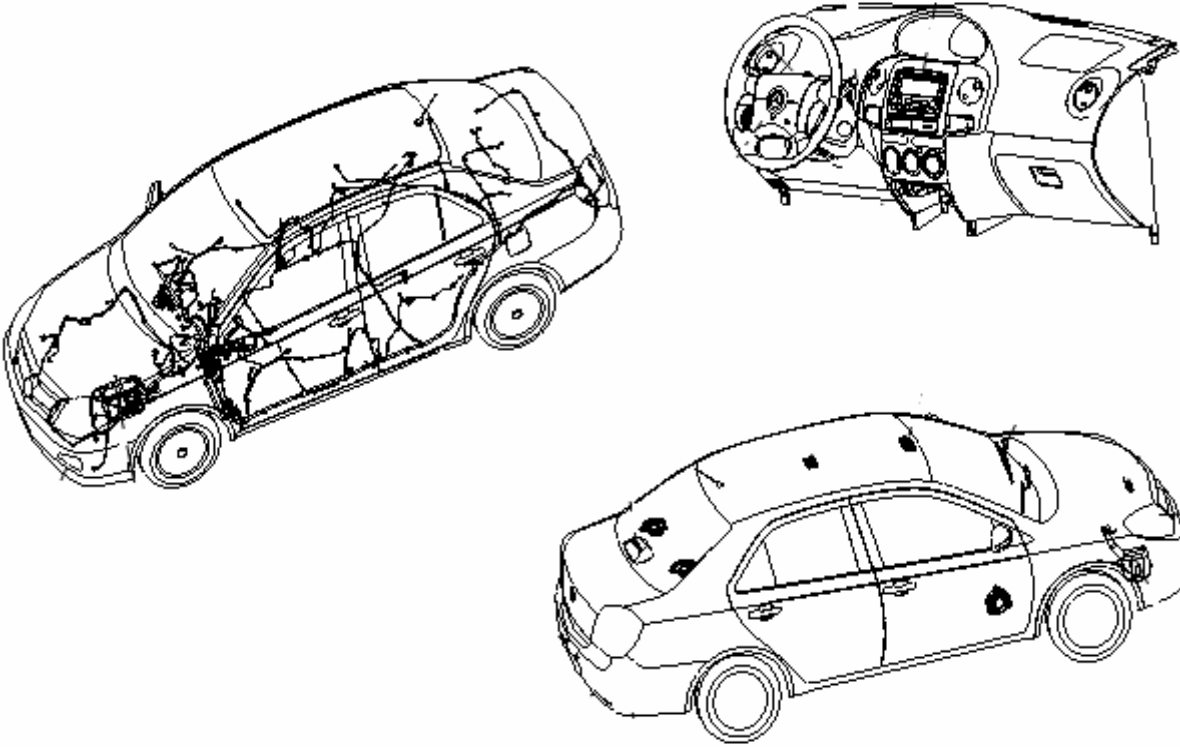
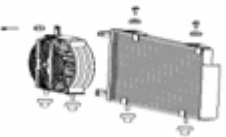
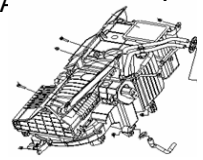



6130 EXHAUST SYSTEM(1.6L)

	NO.	PART NO.	DES.	QTY	REMARK
	1	1016001447	FRONT EXHAUST PIPE ASSY.	1	
	2	1016002020	EXHAUST PIPE GASKET	2	
	3		SPRING	4	
	4	1203131101	EXHAUST PIPE CONNECTING BOLT	4	
	5	1016001448	CENTER MUFFLER ASSY.	1	
		1016002496	CENTER MUFFLER ASSY.(OBD)	1	
	6	1016001444	FRONT EXHAUST SEAL IV	1	
	7		HEXAGO HEAD BOLT & SPRING WASHER ASSY.	2	
	8	1016001449	REAR MUFFLER ASSY.	1	
	9	1016001388	REAR RUBBER SEAT	2	
	10	1016001399	FRONT RUBBER SEAT	2	
	11	1016001389	FRONT FLOOR HEAT INSULATOR	1	
	12		HEXAGON HEAD BOLT & SPRING WASHER ASSY.	5	
	13	1016001390	FRONT EXHAUST PIPE BRACKET	1	
	14		HEXAGON HEAD BOLT & SPRING WASHER ASSY.	2	
	15	1016001391	REAR FLOOR HEAT INSULATOR	1	
	16	2160141901	EXHAUST MANIFOLD ASSY.(TWC)	1	
	1086001113	EXHAUST MANIFOLD ASSY.(TWC)(OBD)	1		
17	1017007963	REAR OXYGEN SENSOR WIRING HARNESS BRACKET	1	RUSSIA	

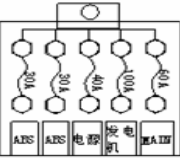PICTURE INDEX

<p>7000 BODY ELECTRICS</p>	<p>7010 COMBINATION METER</p>  <p>1-1</p>	<p>7020 ELECTRIC SWITCH</p>  <p>2-1</p>	<p>7030 COMBINATION LIGHT</p>  <p>3</p>	<p>7040 EXTERIOR LAMP</p>  <p>4</p>	<p>7050 INTERIOR LAMP</p>  <p>5</p>	<p>7060 FRONT WINDSHIELD WIPER</p>  <p>10</p>
<p>7210 COMPRESSOR FIXING</p> 					<p>7070 FRONT WINDSHIELD WASHER</p> 	
<p>7200 ENGINE ECU BRACKET</p> 					<p>7080 AUDIOR SYSTEM</p> 	
<p>7190 FRONT WIRING HARNESS</p> 					<p>7090 CIGARETTE LIGHTER & HORN</p>  <p>14</p>	
<p>7180 PARKING SENSOR</p> 					<p>7100 BATTERY</p>  <p>15</p>	
<p>7170 ELECTRONIC CONTROL SET(REMOTE CONTROL)</p> 					<p>7160 FUSE BLOCK BODY</p> 	<p>7150 ABS WIRING HARNESS</p> 

PICTURE INDEX

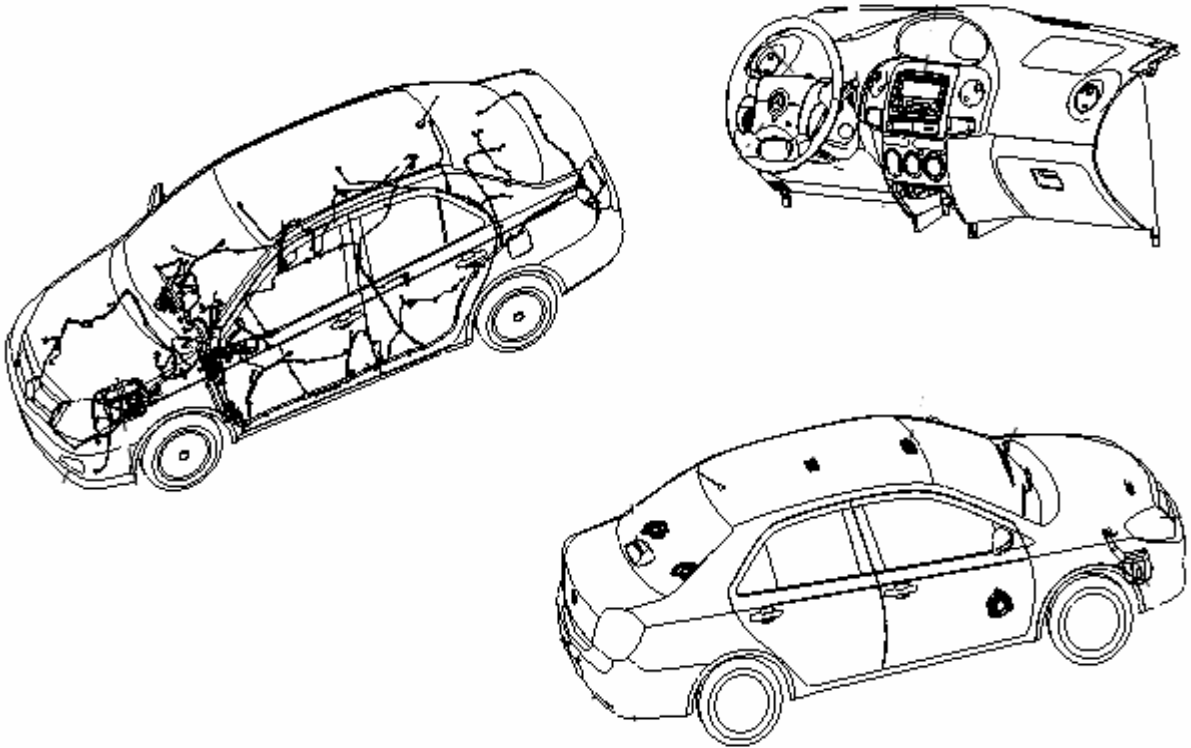7000 BODY ELECTRICS	7220 COMPRESSOR HOSE ASSY. 	7230 CONDENSER 	7240 A/C HEADFRAME 	7250 A/C HEADUNIT ASSY. 	7260 CONTROL SYSTEM ASSY. 	
						

7010 COMBINATION METER

	NO.	PART NO.	DES.	QTY	REMARK
	1	1017000176	POINTER COMBINATION METER & BRACKET ASSY.	1	MT
		1017000173	POINTER COMBINATION METER & BRACKET ASSY.	1	AT
		1017000156	DIGITAL COMBINATION METER & BRACKET ASSY.	1	
		1017010410	COMBINATION METER ASSY.	1	ANTI-THEFT
		1017000187	COMBINATION METER ASSY.	1	MK08
	2		DIGITAL COMBINATION METER ASSY.	1	
	3		DIGITAL COMBINATION METER LEFT BRACKET	1	
4		DIGITAL COMBINATION METER RIGHT BRACKET	1		
5		CROSS SLOTTED HEAD SCREW	2		
6		HEXAGON FLANGE SELF-TAPPING SCREW	4		
7		REED NUT	2		


7020 ELECTRIC SWITCH

	NO.	PART NO.	DES.	QTY	REMARK
	1	1017000941	ELECTRIC REARVIEW MIRROR SWITCH & PANEL ASSY.(WITH THEFT-DETERRENT INDICATOR & LIGHT ADJUSTER)	1	
	2	1017000942	ELECTRIC REARVIEW MIRROR SWITCH & PANEL ASSY.	1	MK08
	3	1017000989	ELECTRIC REARVIEW MIRROR SWITCH & PANEL ASSY.(WITH THEFT-DETERRENT INDICATOR)	1	
	4		SWITCH PLUG	1	
	5	1017003866	ANTI-THEFT COIL	1	
		1017003865	ANTI-THEFT CONTROL	1	
		1017003868	TRANSMITTER	1	
	6	1017000635	RIGHT COMBINATION SWITCH ASSY.	1	
	7	1017000636	LEFT COMBINATION SWITCH ASSY.	1	
	8	3720100001	BRAKE LIGHT SWITCH	1	
	9	1017002540	RF DOOR REGULATOR SWITCH & PANEL ASSY.	1	
		1017002564	RF DOOR REGULATOR SWITCH & PANEL ASSY.	1	MK08
	10	1017002541	REAR DOOR REGULATOR SWITCH & PANEL ASSY.	1	
		1017002565	REAR DOOR REGULATOR SWITCH & PANEL ASSY.	1	MK08
	11	1017003539	CLOCK SPRING	1	
	13		IGNITION SWITCH	1	
		1017000705	IGNITION SWITCH LOCKING BOLT	1	
	14		IGNITION SWITCH LOCK CYLINDER ASSY.	1	
15	1017000707	IGNITION SWITCH UPPER BRACKET	1		
16	1017000703	IGNITION SWITCH LOWER BRACKET	1		
17		LOCKING BOLT	1		
18	1017000917	INSTRUMENT PANEL CENTER SWITCH ASSY.	1		

7020 ELECTRIC SWITCH

	NO.	PART NO.	DES.	QTY	REMARK
	19	1017000918	INSTRUMENT PANEL ADJUSTING SWITCH	1	
	20	1017002539	LF DOOR REGULATOR SWITCH & PANEL ASSY.	1	
		1017002563	LF DOOR REGULATOR SWITCH & PANEL ASSY.	1	MK08
	21	1017000872	DOOR CONTROL SWITCH	1	

7030 COMBINATION LIGHT

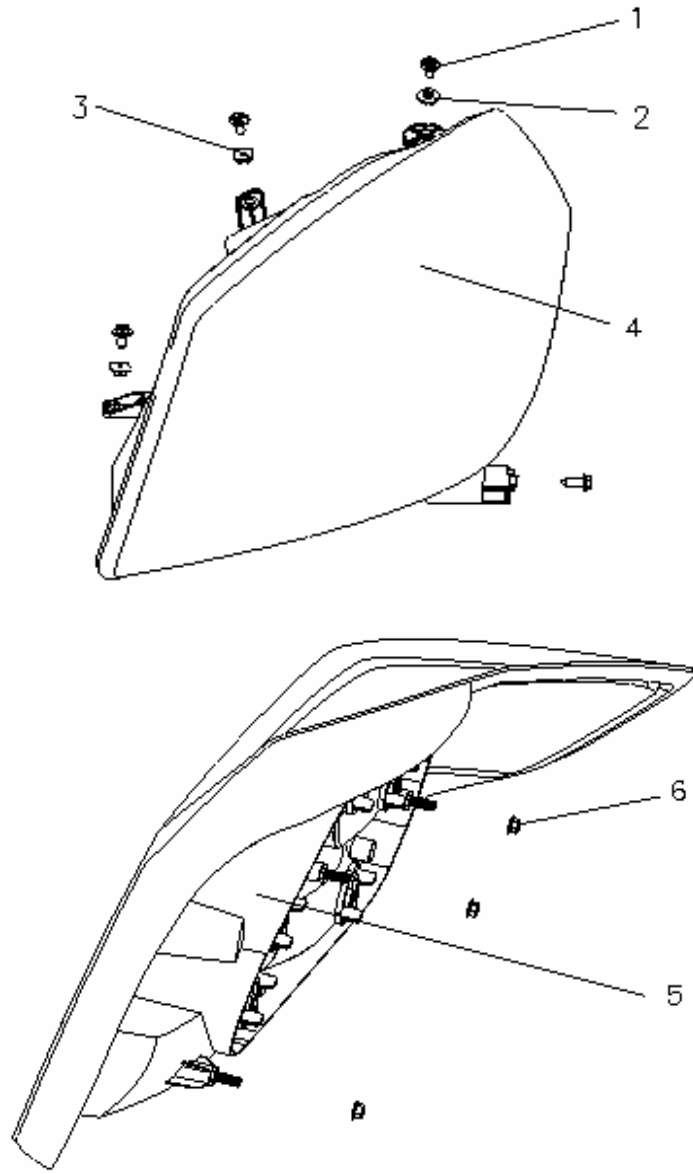


NO.	PART NO.	DES.	QTY	REMARK
1		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	8	
2	1018005273	HEADLIGHT FIXING CLIP	2	
3	JQ398M85	PLASTIC NUT	4	
4	1017001057	LF COMBINATION HEADLIGHT ASSY.	1	
	1017001058	RF COMBINATION HEADLIGHT ASSY.	1	
	1017001093	LF COMBINATION HEADLIGHT ASSY.	1	MK08
	1017001094	RF COMBINATION HEADLIGHT ASSY.	1	MK08
	1017001105	LF COMBINATION HEADLIGHT ASSY.	1	ELECTRIC ADJUSTER
	1017001106	RF COMBINATION HEADLIGHT ASSY.	1	ELECTRIC ADJUSTER
	1017010345	ADJUSTER MOTOR	2	
5	1017001557	LR COMBINATION LAMP ASSY.	1	
	1017001558	RR COMBINATION LAMP ASSY.	1	
6		HEXAGON FLANGE NUT	6	

7040 EXTERIOR LAMP


	NO.	PART NO.	DES.	QTY	REMARK
	1		HEXAGON FLANGE BOLT	4	
	2		"B" TYPE REED NUT	4	
	3	1017001245	LF FOGLIGHT	1	
		1017001246	RF FOGLIGHT	1	
	4	1058000023	RIGHT TURNING SIGNAL LIGHT COVER	1	
		1058000021	LEFT TURNING SIGNAL LIGHT COVER	1	
	5	3717010028	REAR LICENSE PLATE LIGHT	1	
6	1017001562	LR RETROREFLECTOR	1		
	1017001563	RR RETROREFLECTOR	1		
7		HEXAGON FLANGE NUT	4		

7050 INTERIOR LAMP

NO.	PART NO.	DES.	QTY	REMARK
1	1017001445	SUNROOF SWITCH ASSY.	1	
2	1017001444	FRONT READING LIGHT ASSY.	1	
3		CROSS SLOTTED HEAD SELF-TAPPING SCREW	2	
4	1017001443	REAR READING LIGHT ASSY.	1	
	1018005496	SUNROOF DOME LIGHT BRACKET	1	
5	1017001942	HIGH-MOUNTED BRAKE LIGHT	1	

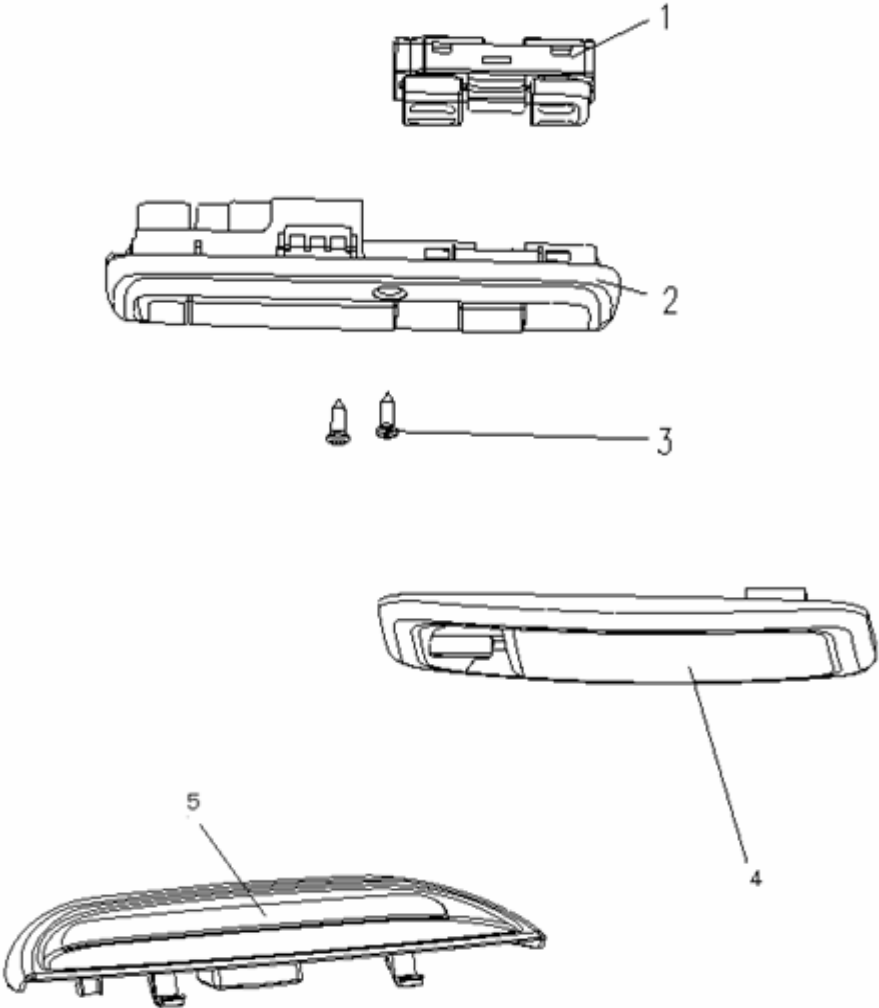


7060 FRONT WINDSHIELD WIPER

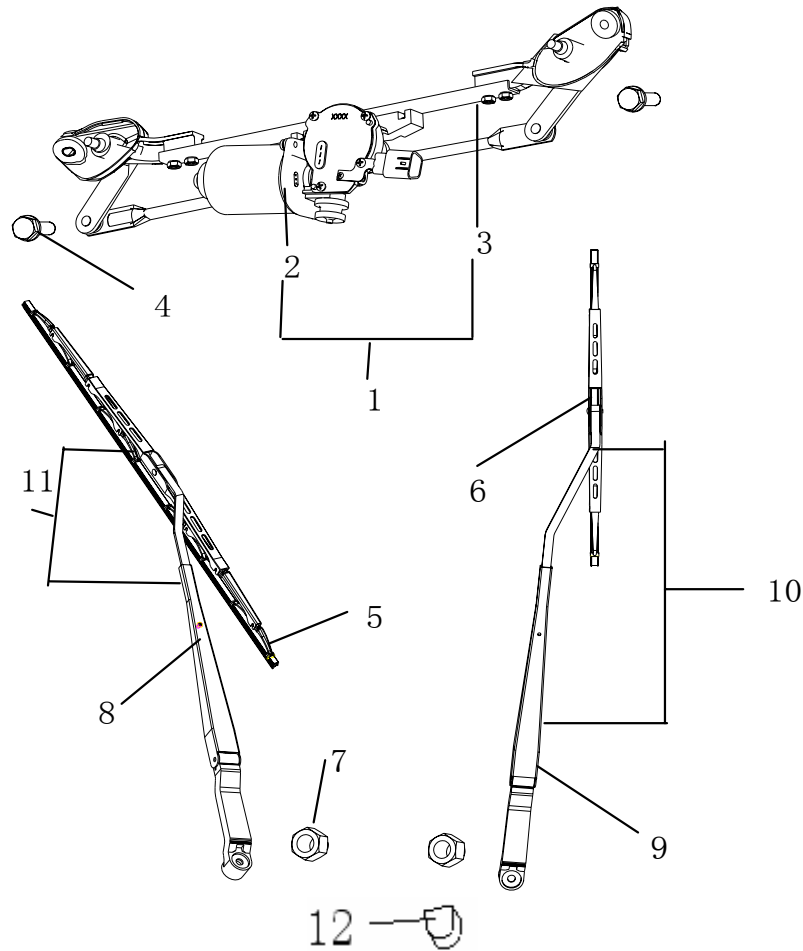

NO.	PART NO.	DES.	QTY	REMARK
1	1017002049	WIPER MOTOR & CONNECTING ROD ASSY.	1	
2	1017002075	WIPER MOTOR	1	
3	1017015254	CONNECTING ROD	1	
4		HEXAGON HEAD BOLT & WASHER ASSY.	2	
5	1017002069	LEFT WIPER BLADE	1	
6	1017002070	RIGHT WIPER BLADE	1	
7		HEXAGON HEAD NUT & WASHER ASSY.	2	
8	1017002071	LEFT WIPER ARM	1	
9	1017002072	RIGHT WIPER ARM	1	
10	1017002052	RIGHT WIPER BLADE & ARM ASSY.	1	
11	1017002051	LEFT WIPER BLADE & ARM ASSY.	1	
12	1017002077	NUT COVER	2	

7070 FRONT WINDSHIELD WASHER

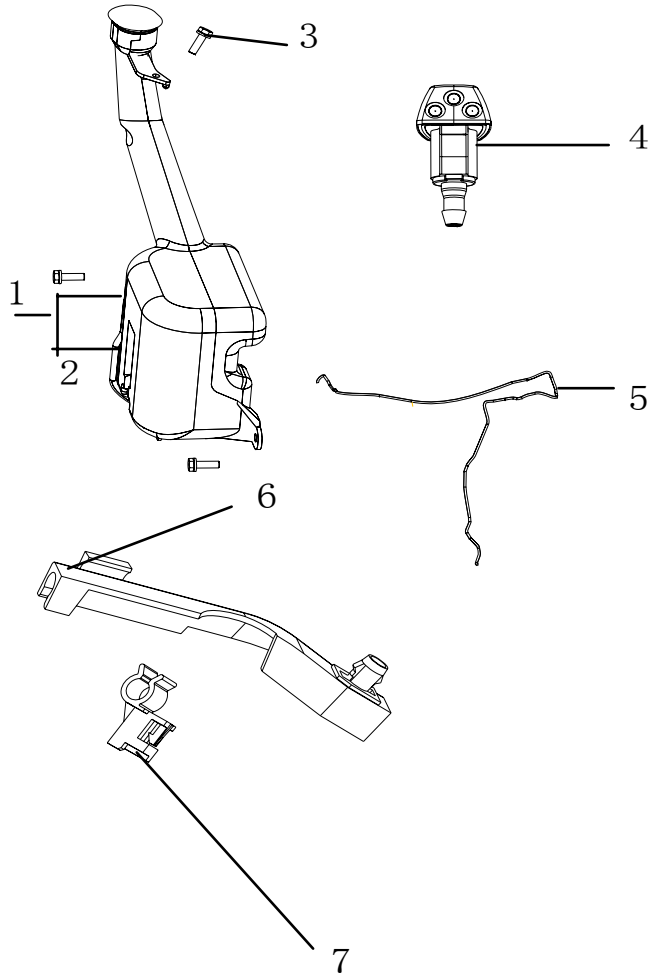


NO.	PART NO.	DES.	QTY	REMARK
1	1017002184	WATER RESERVIOR & WASHER MOTOR	1	
	1017002192	WASHER MOTOR	1	
2		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	1	
3	1017002185	WASHER NOZZLE	1	
4		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	3	
5	1017002187	WASHER HOSE	1	
6		WASHER HOSE CLIP I	1	
7		WASHER HOSE CLIP II	1	

7080 AUDIOR SYSTEM

	NO.	PART NO.	DES.	QTY	REMARK
	1	1017002787	ANTENNA WIRING HARNESS ASSY.	1	
	2		MULTIPLE CD WIRING HARNESS	1	
	3	1017002755	REAR SPEAKER	2	
	4		HEXAGON FLANGE SCREW	6	
	5		HEXAGON FLANGE BOLT	3	
	6		CROSS CLOTTED HEAD SCREW	6	
	7		MULTIPLE CD BOX LEFT BRACKET	1	
	8	1017002756	MULTIPLE CD BOX	1	
	9		CROSS SLOTTED HEAD SELF-TAPPING SCREW	4	
	10	1017002752	MULTIPLE CD-ROM & BRACKET ASSY.	1	
		1017002751	SINGLE CD-ROM & BRACKET ASSY.	1	
		1017002783	SINGLE CD-ROM & MP3 ASSY.	1	
		1017002806	SINGLE CD-ROM & MP3 ASSY.	1	MK08
		1017010397	RADIO ASSY.	1	
	11	1017002768	FRONT ALT SPEAKER	2	
	12		CROSS SLOTTED HEAD SELF-TAPPING SCREW	4	
	13		LACE	5	
	14		MULTIPLE CD BOX RIGHT BRACKET	1	
15	1017002754	FRONT SPEAKER	2		
16		BIG WASHER	6		
17		RIVET	6		
18	1017002759	ANTENNA WIRING HARNESS	1		


7090 CIGARETTE LIGHTER & HORN

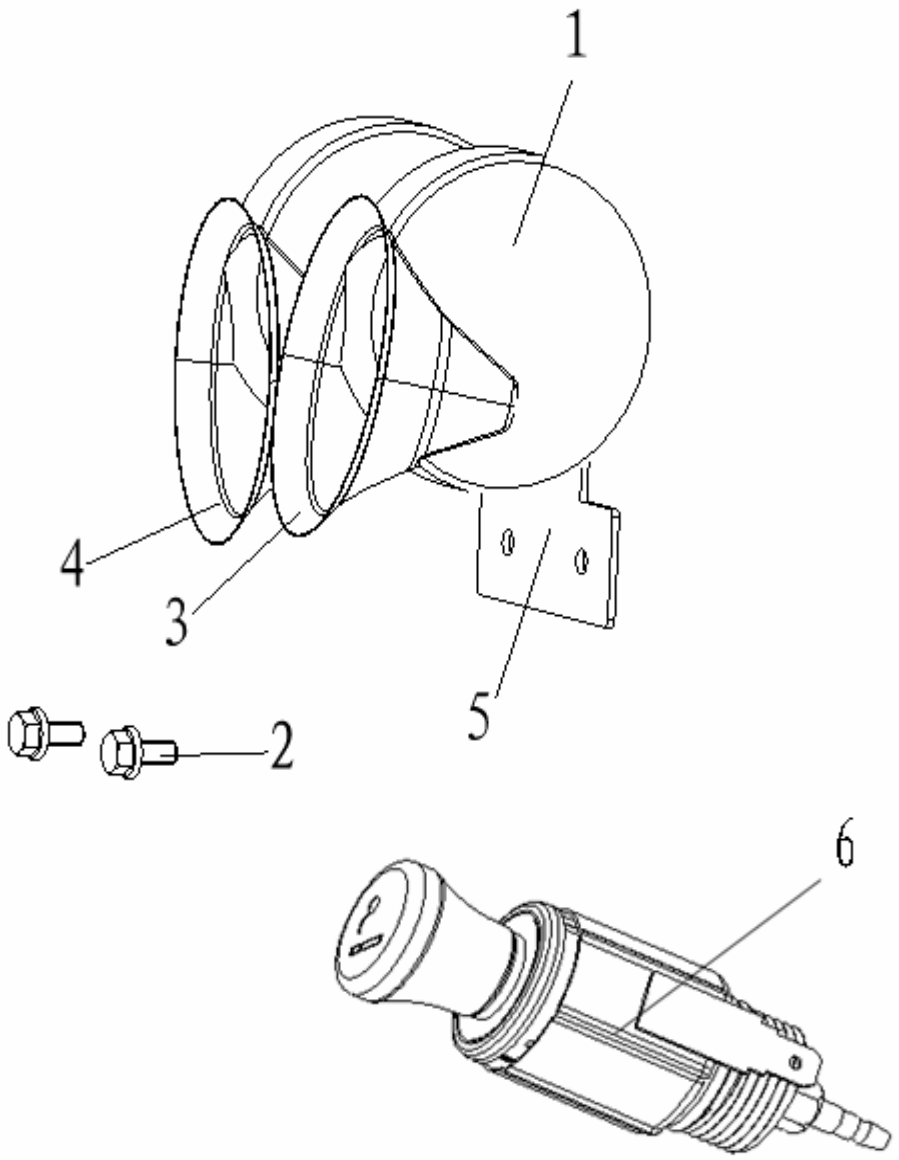	NO.	PART NO.	DES.	QTY	REMARK
	1		HORN ASSY.	1	
	2	Q1840612	HEXAGON FLANGE BOLT	2	
	3	1067000216	ALT FREQUENCY HORN	1	
	4	1067000045	BOURDON FREQUENCY HORN	1	
	5		HORN BRACKET	1	
	6	372510000205-01	LIGHTER	1	

7100 BATTERY

	NO.	PART NO.	DES.	QTY	REMARK
	1	1017003338	BATTERY BRACKET	1	
	2	1017003336	BATTERY PRESSURE PLATE ASSY.	1	
	3	3703100001	BATTERY	1	
	4	1017003337	BATTERY PULL ROD	1	
	5		HEXAGON FLANGE LOCKING NUT	2	
	6	3703240005	BATTERY TERMINAL SUB-ASSY.	1	
	7	1017005953	BATTERY NEGATIVE GROUND WIRE	1	

7110 ON-VEHICLE HANDSFREE PHONE

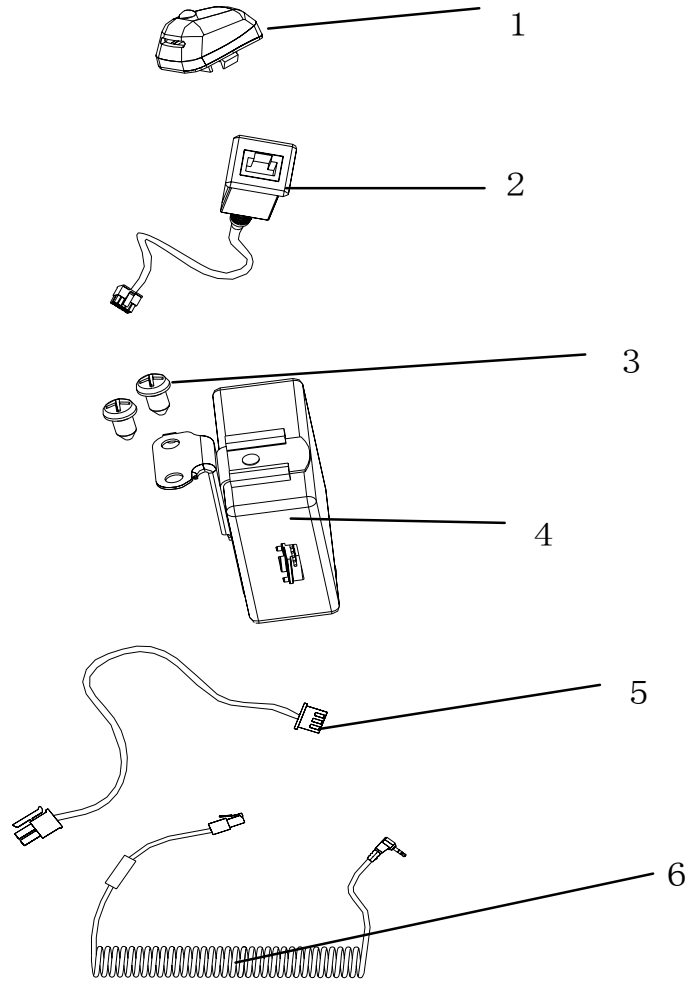

NO.	PART NO.	DES.	QTY	REMARK
1		MIC JACK	1	
2	1017003922-01	ON-VEHICLE HANDSFREE PHONE	1	
	1057003922	ON-VEHICLE HANDSFREE PHONE	1	BLUE TEETH
3		CROSS SLOTTED HEAD SELF-TAPPING SCREW	2	
4		ON-VEHICLE HANDSFREE PHONE PANEL	1	
5	1017003924	ON-VEHICLE HANDSFREE PHONE WIRE (MOTOLORA)	1	
6	1017003925	ON-VEHICLE HANDSFREE PHONE WIRE (NOKIA)	1	
	1017003926	ON-VEHICLE HANDSFREE PHONE WIRE (SIMENS)	1	

7120 SRS ASSY.

	NO.	PART NO.	DES.	QTY	REMARK
	1	1017003537	SRS ECU	1	
	2	Q32006	HEXAGON FLANGE NUT	5	
	3	1017003538	DAB MODULE ASSY.	1	
		1018011092	DAB MODULE ASSY.	1	MK08
	4		INNER HEXAGON FLOWER COLUMN HEAD SCREW	2	
	5	1017003536	PAB MODULE ASSY.	1	
		1017003546	PAB MODULE ASSY.	1	MK08
7	Q1840816	HEXAGON FLANGE BOLT	1		


7130 INSTRUMENT PANEL WIRE HARNESS

	NO.	PART NO.	DES.	QTY	REMARK
	1	1017004434	INSTRUMENT PANEL WIRING HARNESS ASSY.	1	DOUBLE SRS
		1057004410	INSTRUMENT PANEL WIRING HARNESS ASSY.	1	W/O SRS
		1017004453	INSTRUMENT PANEL WIRING HARNESS ASSY.	1	AT
		1017004252	INSTRUMENT PANEL WIRING HARNESS ASSY.	1	RUSSIA
		1057004532	INSTRUMENT PANEL WIRING HARNESS ASSY.	1	GB
		1017004494	INSTRUMENT PANEL WIRING HARNESS ASSY.	1	MK08
	2		INSTRUMENT PANEL WIRING HARNESS SUB-ASSY.	1	
	3		FUSE BLOCK	1	
	4		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	2	
	5		HEXAGON FLANGE SELF-TAPPING SCREW	1	
6		FRONT DOOR WIRING HARNESS BRACKET	2		
7		INSTRUMENT PANEL WIRE HARNESS BRACKET	1		
8		INSTRUMENT PANEL WIRE HARNESS BRACKET	1		
9		CROSS SLOTTED HEAD SELF-TAPPING SCREW	2		
10		LABEL	1		

7140 BODY WIRING HARNESS


	NO.	PART NO.	DES.	QTY	REMARK
	1	1017004845	FLOOR WIRING HARNESS ASSY.	1	RUSSIA AFTER 2009.4
		1057004845	FLOOR WIRING HARNESS ASSY.	1	
		1017015159	FLOOR WIRING HARNESS ASSY.(GL)	1	
	2		BOOT(OIL PUMP)	1	
	3		BOOT(LICENSE PLATE LIGHT)	1	
	4	1017004846	DEFROST GROUND WIRE	1	
5	1017005623	REAR DOOR WIRING HARNESS ASSY.	1		
		1017005333	DRIVER SIDE DOOR WIRING HARNESS ASSY.	1	
		1017005484	PASSENGER SIDE DOOR WIRING HARNESS ASSY.	1	
6			ADHESIVE	3	

7150 ABS WIRING HARNESS

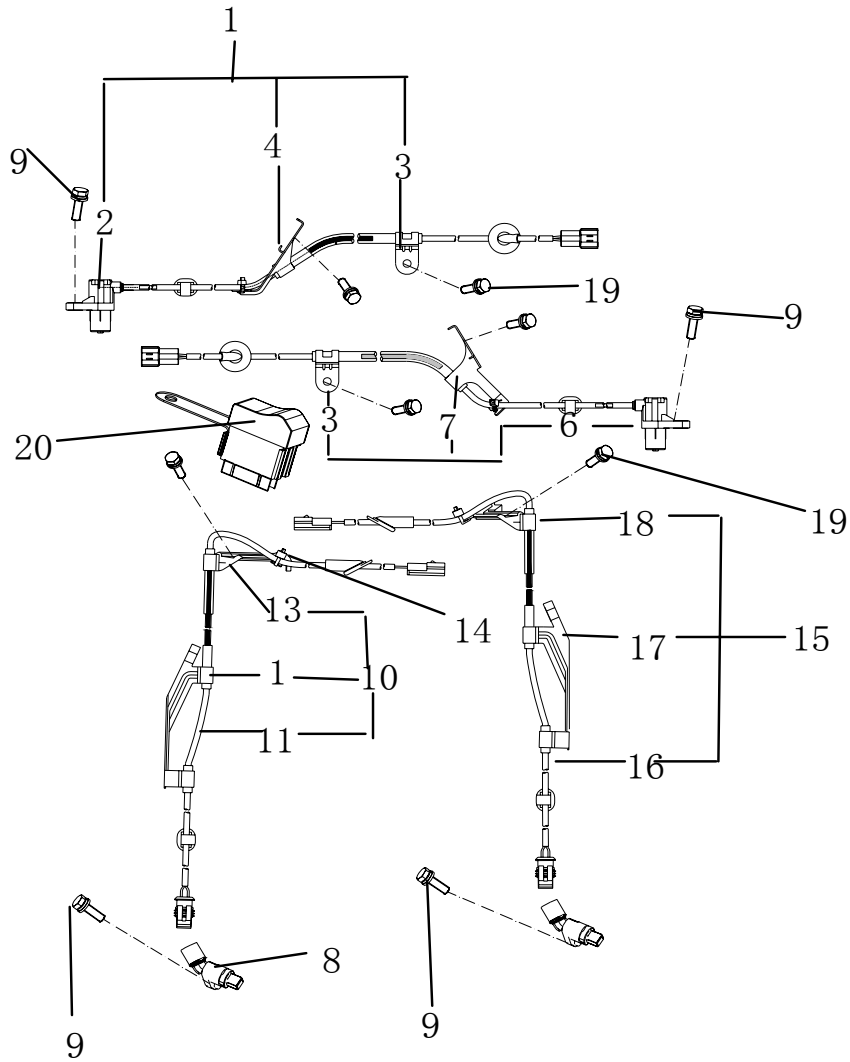


NO.	PART NO.	DES.	QTY	REMARK
1	1017009293	LF WHEEL SPEED SENSOR ASSY.	1	
2	1017009293	LF WHEEL SPEED SENSOR ASSY.	1	OBD
3		FRONT CLIP	2	
4		LF WIRING HARNESS CLIP	1	
6	1017009294	RF WHEEL SPEED SENSOR ASSY.	1	
	1017009294	RF WHEEL SPEED SENSOR ASSY.	1	OBD
	1014004119	RF WHEEL SPEED SENSOR ASSY.(W/O ABS)	1	OBD
7		RF WIRING HARNESS CLIP	1	
8	1017009296	REAR WHEEL SPEED SENSOR	2	
	1017009301	LR WHEEL SPEED SENSOR	1	OBD
	1017009302	RR WHEEL SPEED SENSOR	1	OBD
9		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	4	
10	1017009299	LR WHEEL SPEED SENSOR WIRING HANRESS	1	
11		LR WHEEL SPEED SENSOR WIRING HANRESS	1	
12		LR CLIP I	1	
13		LR CLIP II	1	
14		LACE	2	
15	1017009300	RR WHEEL SPEED SENSOR WIRING HARNESS	1	
16		RR WHEEL SPEED SENSOR WIRING HARNESS	1	
17		RR CLIP I	1	
18		RR CLIP II	1	
19		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	6	
20	1017009279	WARNING LIGHT DRIVE MODULE	1	

7160 FUSE BLOCK BODY

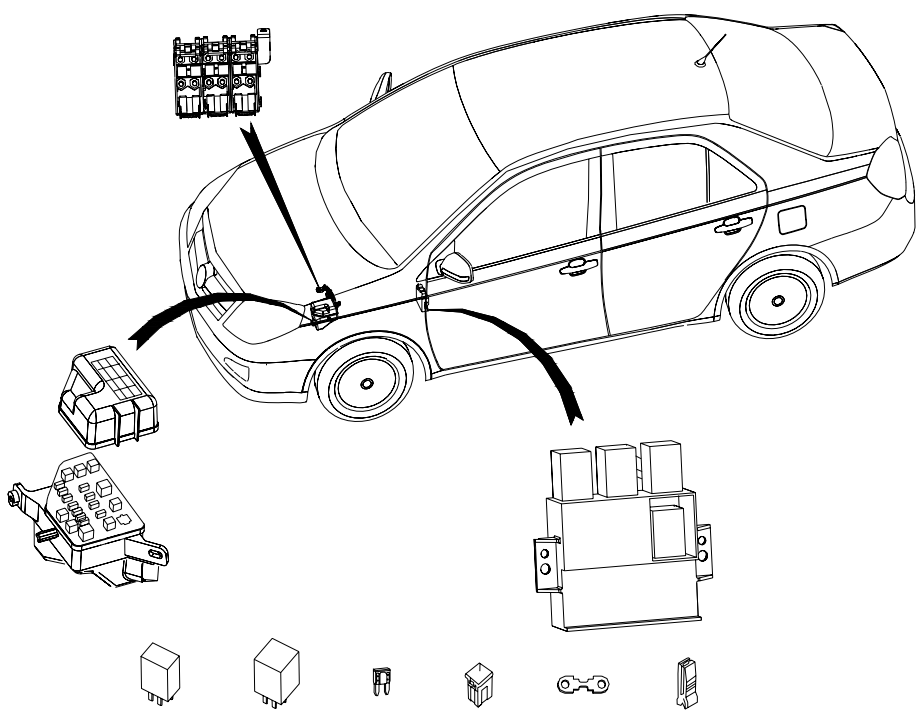	NO.	PART NO.	DES.	QTY	REMARK
		1017004249	FUSE BOX(BATTERY)	1	
		1017004439	FUSE BOX ASSY.(INSTRUMENT PANEL)	1	
		1017004245	FUSE BOX COVER	1	
		1017004246	FUSE BOX BODY	1	
		JQDJDQ-B	RELAY	1	
		JQDJDQ-C	RELAY(HEADLIGHT,FOGLIGHT,STARTER)	1	
		1057004472	WIPER RELAY	1	
		1057004744	FLASH RELAY	1	
		JQDCAL30	INSERT FUSE 30A	1	
		JQDCAL20	INSERT FUSE 20A	1	
		JQDPDL10	SHIM FUSE 10A	1	
		JQDPDL15	SHIM FUSE 15A	1	
		JQDPDL20	SHIM FUSE 20A	1	
		JQDPDL30	SHIM FUSE 30A	1	
		JQDPDL7.5	SHIM FUSE 7.5A	1	
		JQDBL30	PLATE FUSE 30A	1	
		JQDBL40	PLATE FUSE 40A	1	
		JQDBL60	PLATE FUSE 60A	1	
		JQDBL110	PLATE FUSE 110A	1	

7170 CENTER CONTROL ASSY.

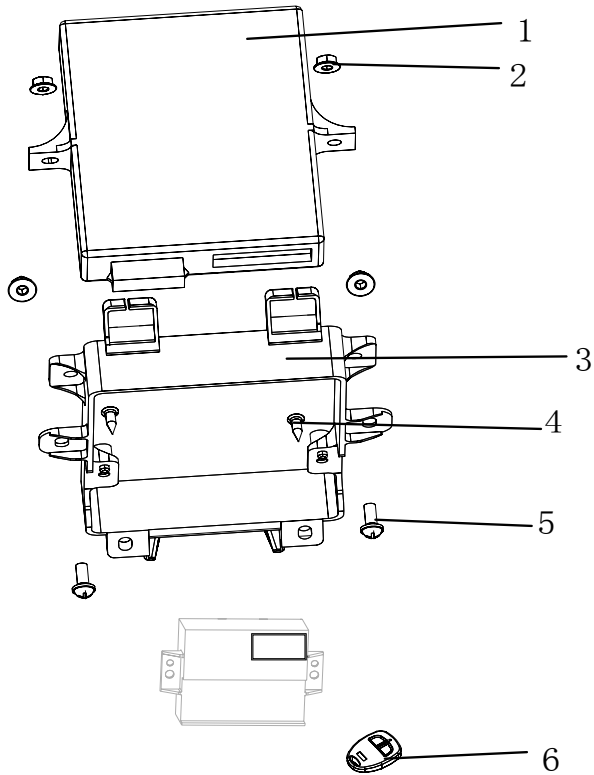

NO.	PART NO.	DES.	QTY	REMARK
1	1017002356-01	CENTER CONTROL ASSY.	1	
2	Q32006	HEXAGON FLANGE NUT	4	
3	1017003351	CENTER CONTROL BRACKET	1	
4		CROSS BIG SEMI-ROUND HEAD TAPPING SCREW	2	
5		CROSS HEAD SCREW & PLATE WASHER SET	2	
6	1017003349	REMOTE CONROL	2	


7180 PARKING SENSOR

	NO.	PART NO.	DES.	QTY	REMARK
	1	1017003436	PARKING SENSOR DISPLAY	1	
		1017010155	PARKING SENSOR DISPLAY(DIGITAL)	1	AFTER 2008.6
	2	1017003432	PARKING SENSOR	4	
		1017010154	PARKING SENSOR(DIGITAL)	4	AFTER 2008.6
	3	1017003433	PARKING SENSOR BRACKET	4	
	4		CROSS HEXAGON HEAD BOLT & SPRING WASHER ASSY.	1	
	5	1017003431	PARKING SENSOR HOST	1	
		1017010153	PARKING SENSOR HOST(DIGITAL)	1	AFTER 2008.6
	6	1017003437	PARKING SENSOR WIRING HARNESS	1	
		1017010156	PARKING SENSOR WIRING HARNESS(DIGITAL)	1	AFTER 2008.6

7190 FRONT WIRING HARNESS

	NO.	PART NO.	DES.	QTY	REMARK
	1	1017004244	ENGINE COMPARTMENT WIRING HARNESS ASSY.	1	
		1017004475	ENGINE COMPARTMENT WIRING HARNESS ASSY.	1	RUSSIA
		1017004268	ENGINE COMPARTMENT WIRING HARNESS ASSY.	1	OBD
		1017009854	ENGINE COMPARTMENT WIRING HARNESS ASSY.(ABS)	1	RADIATOR FORWARD
		1017009856	ENGINE COMPARTMENT WIRING HARNESS ASSY.(W/O ABS)	1	
		1057004290	ENGINE COMPARTMENT WIRING HARNESS(EOBD+ADJUSTABLE HEADLIGHT)	1	
		1017017006	ENGINE COMPARTMENT WIRING HARNESS ASSY.	1	MK70
		2	HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	2	
		3	Q32006 HEXAGON FLANGE NUT	1	
		4	Q1460625 HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	1	
		5	BOOT 1# (COWL PANEL)	1	
	6	BOOT 2# (WIPER MOTOR)	1		
	7	FUSE BLOCK ASSY.	1		
	8	1017004245 FUSE BLOCK COVER	1		
	9	1017004246 FUSE BLOCK BODY	1		
	10	FUSE BLOCK LOWER COVER	1		
	11	LABEL	1		

7200 ENGINE ECU BRACKET

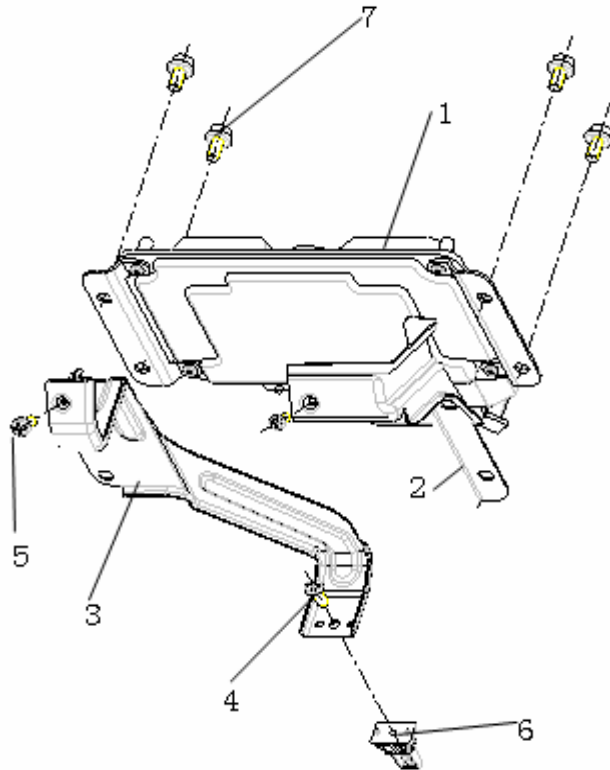

NO.	PART NO.	DES.	QTY	REMARK
1	1086001116	ENGINE ECU(OBD)(M7.9)	1	EURO III
	2150110008-01	ENGINE ECU(M7.9)	1	EURO III
	1016003479	ENGINE ECU(OBD)(M7.8)	1	EURO III
	1016000619	ENGINE ECU	1	EURO IV
	1016003881	ENGINE ECU(ANTI-THEFT)	1	EURO IV
2	1017007059	ECU LEFT BRACKET ASSY.	1	
3	1017007056	ECU RIGHT BRACKET ASSY.	1	
4		CROSS SLOTTED HEAD SELF-TAPPING SCREW	1	
5		"C" TYPE CROSS SLOTTED HEAD SELF-TAPPING SCREW	2	
6		CLIP	1	
7		HEXAGON FLANGE BOLT	4	

7210 COMPRESSOR

	NO.	PART NO.	DES.	QTY	REMARK
	1	1018002690	COMPRESSOR ASSY.	1	
	2	Q150B08105	HEXAGON HEAD BOLT	4	
	3		PLAIN WASHER	4	
	4		SPRING WASHER	4	
	5	1018002691	COMPRESSOR BRACKET	1	
	6		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	3	
	7		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	1	
	8	1018002692	TENSIONER ASSY.	1	
	9	1018002703	A/C BELT 4PK-810	1	

7220 A/C PIPELINE

	NO.	PART NO.	DES.	QTY	REMARK
	1	1018002699	COMPRESSOR DISCHARGE HOSE	1	RADIATOR BACKWARD
		1017009661	COMPRESSOR DISCHARGE HOSE	1	RADIATOR FORWARD
		1017010291	COMPRESSOR SIDE SEAL	1	φ10.8×1.9
		1067000232	LIQUID PIPE SIDE SEAL	1	φ10.8×2.4
	2	1018002700	COMPRESSOR SUCTION HOSE	1	
		1017010292	COMPRESSOR SIDE SEAL	1	φ14×1.9
		1067000233	LOWER PRESSURE SIDE SEAL	1	φ13.8×2.4
	3		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	2	
	4		SINGLE PIPE CLIP	1	
	5		CROSS SLOTTED HEAD BOLT & PLAIN WASHER ASSY.	5	M6×30
6	1018002701	LIQUID PIPE	1		
	1067000232	CONDENSER SIDE SEAL	1	φ10.8×2.4	
7	1018002702-01	HIGH & LOWER PRESSURE PIPE ASSY.	1	RADIATOR BACKWARD	
	1017009660	HIGH & LOWER PRESSURE PIPE ASSY.	1	RADIATOR FORWARD	
	1017010295	CONDENSER SIDE SEAL	1	φ6.8×1.9	
	1067000233	LOWER PRESSURE SIDE SEAL	1	φ13.8×2.4	
8		DUAL-WAY CLIP	1		
9		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	2		
10	1018002714	A/C PRESSURE SWITCH	1		

7230 CONDENSER

	NO.	PART NO.	DES.	QTY	REMARK
	1	1017009659	CONDENSOR ASSY.	1	
	2		HEXAGON FLANGE COLUMN SCREW M8x32	2	
	3	1018002727	CONDENSOR UPPER CUSHION	2	
	4	1018002726	CONDENSOR LOWER CUSHION	2	
	5	1018002718	CONDENSOR FAN MOTOR ASSY.	1	
	6		CROSS SLOTTED HEAD BOLT & PLAIN WASHER ASSY.	1	M6x30
	7	1018002726	CONDENSOR FAN UPPER CUSHION	1	
	8	1018002727	CONDENSOR FAN LOWER CUSHION	1	


7240 HVAC

	NO.	PART NO.	DES.	QTY	REMARK
	1	1018002725	HVAC ASSY.	1	
	2		HEXAGON BOLT, SPRING WASHER & BIG PLATE WASHER	5	
	3		HEXAGON BOLT, SPRING WASHER & BIG PLATE WASHER	2	
	4	1016001526	SEAL	1	
	5		WATER OUTLET PIPE SEAL	1	
	6	1017008027	1# WATER PIPE	1	
	7	1017008028	2# WATER PIPE	1	
	8	8101702005	HEATER WATER PIPE	1	
	9		DUAL STEEL HOOP	4	
9	1018002622	WATER OUTLET PIPE	1		

7250 HVAC ASSY.








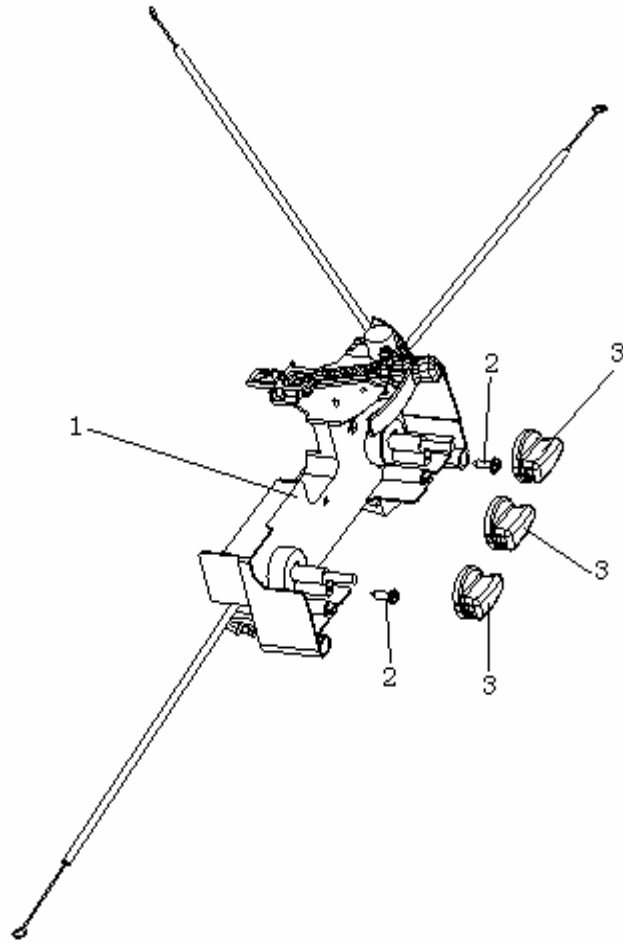





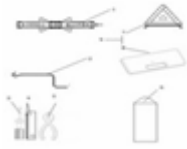

	NO.	PART NO.	DES.	QTY	REMARK
	1		A/C UPPER BODY	1	
	2		A/C LOWER BODY	1	
	3		AIR INTAKE BODY	1	
	4		CROSS SLOTTED HEAD SELF-TAPPING SCREW ST3.8x16	14	
	5	1018002732	EVAPORATOR ELEMENT	1	
	6	1018002733	THERMISTOR	1	
	7	1018002734	"H" TYPE EXPANSION VALVE	1	
	8		INNER HEXAGON COLUMN HEAD SCREW M5x35	2	
	9	1018002735	HEATER ELEMENT	1	
	10		HEATER ELEMENT FIXING CLIP	1	
	11		CROSS SLOTTED HEAD SELF-TAPPING SCREW ST3.8x14	1	
	12	1018002736	BLOWER MOTOR & BLADE ASSY.	1	
	13		CROSS SLOTTED HEAD SELF-TAPPING SCREW ST5.0x16	3	
	14	1018002760	ADJUSTMENT RESISTOR	1	
	15		REAR AIR OUTLET BODY	1	
	16		SCREEN BRACKET	1	
	17	1018002773	AIR SCREEN	1	

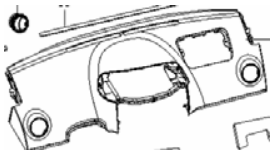7260 CONTROL SYSTEM ASSY.

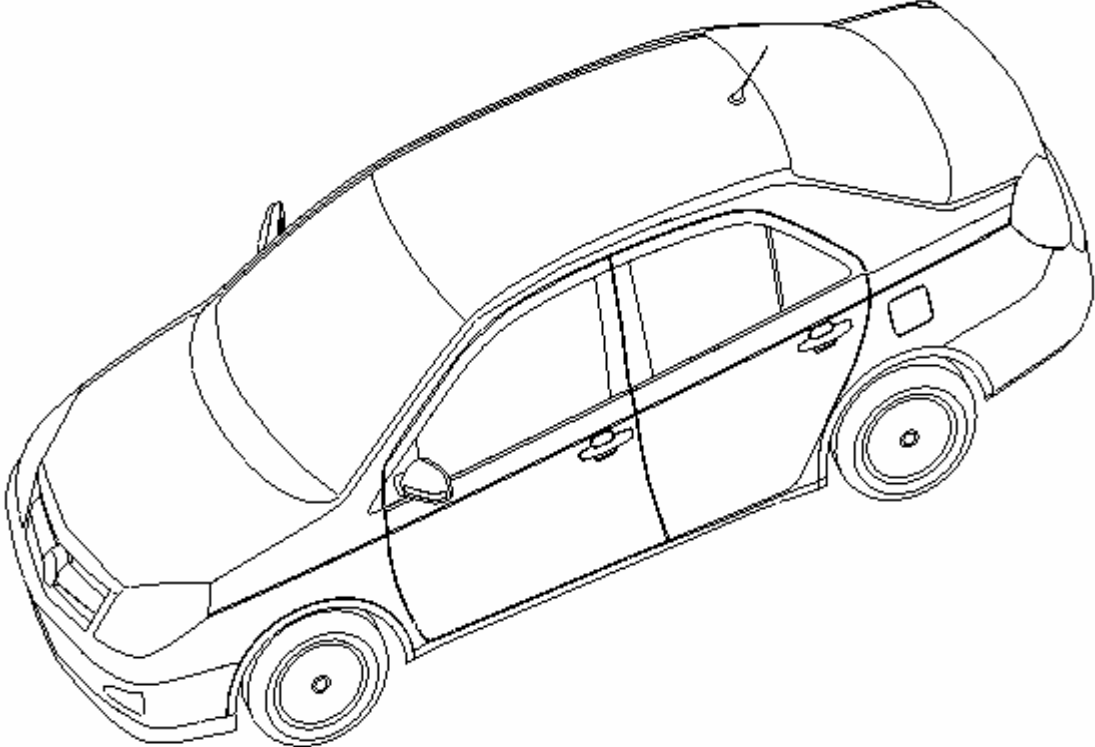

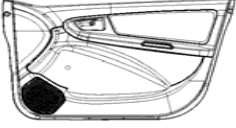













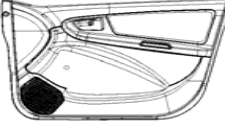

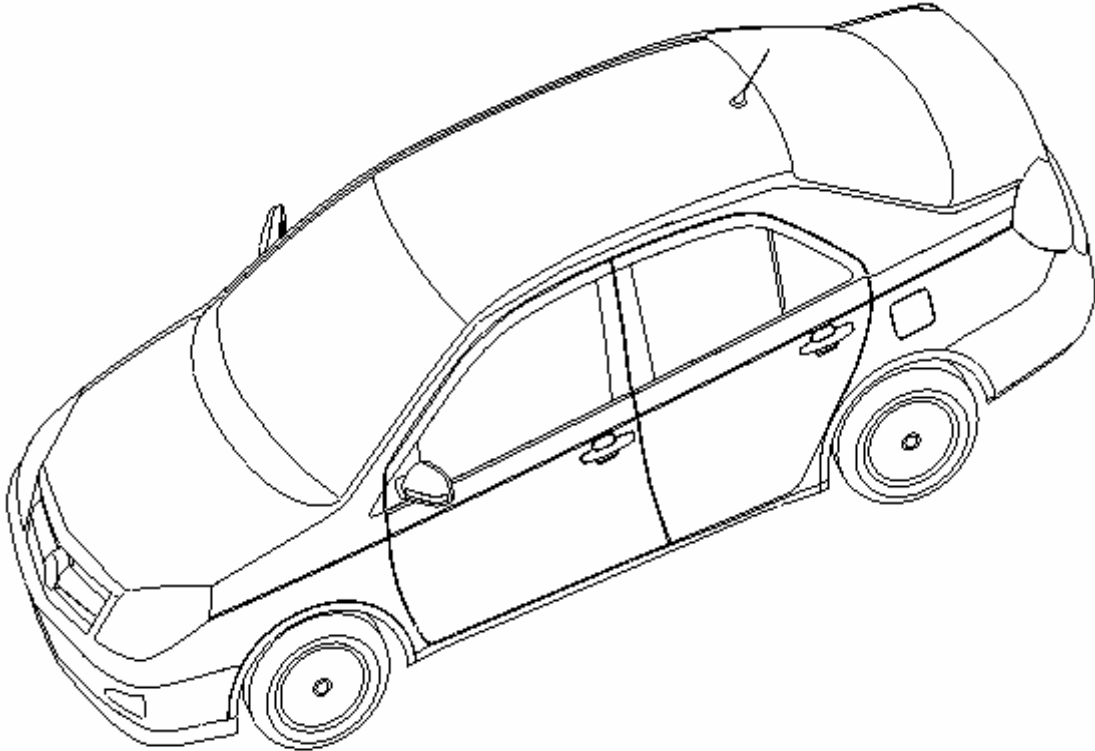NO.	PART NO.	DES.	QTY	REMARK
1	1018002628	A/C CONTROL ASSY.	1	
	1017008211	A/C CONTROL ASSY.	1	MK08
2		CROSS SLOTTED HEAD SELF-TAPPING SCREW & PLAIN WASHER ASSY.	2	
3	1018002705	KNOB	3	


PICTURE INDEX
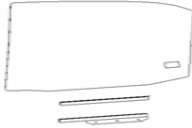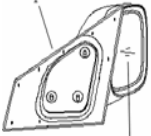
<p>8000 TRIM</p>	<p>8010 TOOLS & ACCESSORIES</p> 	<p>8020 FLOOR INTERIOR TRIM & A</p> 	<p>8030 INSTRUMENT PANEL</p> 	<p>8040 I/PUPPER PART</p> 	<p>8050 INSTRUMENT PANEL LOWER PART</p> 	<p>8060 GLOVE COMPARTMENT</p> 
<p>8210 RF DOOR LOCK & HANDLE</p> 						<p>8070 CONSOLE ASSY.</p> 
<p>8200 RF DOOR INTERIOR TRIM PLATE ASSY.</p>						<p>8080 INSTRUMENT PANEL FRAME</p> 
<p>8190 RF DOOR INTERIOR TRIM</p> 						<p>8090 FRONT PILLAR TRIM BOARD</p> 
<p>8180 LF DOOR LOCK & HANDLE</p> 						<p>8100 REAR PILLAR TRIM BOARD</p> 
<p>8170 LF DOOR INTERIOR TRIM BOARD ASSY.</p> 						<p>8160 LF DOOR INTERIOR TRIM</p>

PICTURE INDEX

<p style="text-align: center;">8000 TRIM</p>	<p>8220 LR DOOR INTERIOR TRIM</p> 	<p>8230 LR DOOR INTERIOR TRIM PLATE ASSY.</p>	<p>8240 LR DOOR LOCK & HANDLE</p> 	<p>8250 RR DOOR INTERIOR TRIM</p> 	<p>8260 RR DOOR INTERIOR TRIM BOARD SUB-ASSY.</p>	<p>8270 RR DOOR LOCK & HANDLE</p> 
<p>8420 ENGINE HOOD INTERIOR TRIM</p>  <p style="text-align: right;">8</p>					<p>8280 FRONT DOOR WEATHERSTRIP</p> 	
<p>8410 SUNROOF FIXING</p>  <p style="text-align: right;">7</p>					<p>8290 REAR DOOR WEATHERSTRIP</p> 	
<p>8400 EXTERIOR TRIMS & ACCESSORY</p>  <p style="text-align: right;">6</p>					<p>8300 FRONT DOOR GLASS REGULATOR</p> 	
<p>8390 REARVIEW MIRROR</p> 					<p>8310 REAR DOOR GLASS REGULATOR</p> 	
<p>8380 REAR WINDSHIELD</p>  <p style="text-align: right;">5</p>					<p>8370 FRONT WINDSHIELD</p>  <p style="text-align: right;">4</p>	<p>8360 REAR BUMPER ASSY.</p>  <p style="text-align: right;">2</p>


PICTURE INDEX

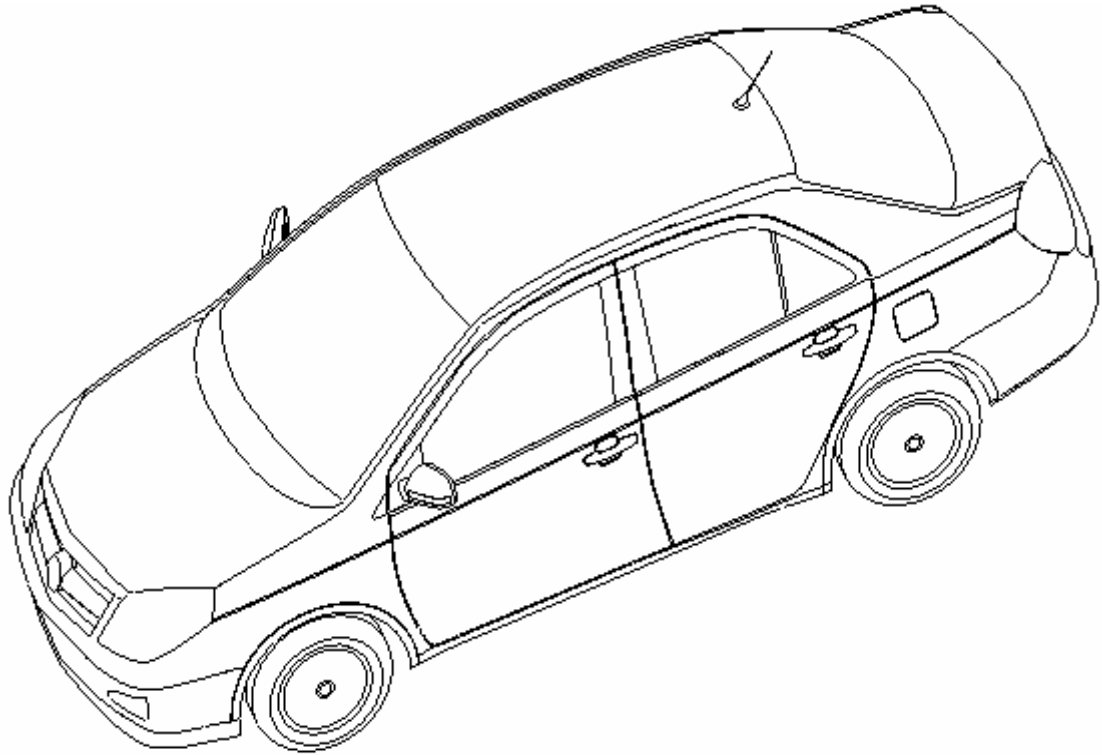8000 TRIM	8430 SEAT REPAIR KIT	8440 KEY & LOCK CYLINDER REPAIR KIT				
						

8010 TOOLS & ACCESSORIES


	NO.	PART NO.	DES.	QTY	REMARK
	1	1018004850	JACK ASSY.	1	
	2	1018004851	JACK ROCKER	1	
	3		SCREWDRIVER	1	
	4	3900124101	TIRE SLEEVE	1	
	5		SLIP JOINT PLIER	1	
	6		ONBOARD TOOLKIT	1	
	7		TRIANGULAR WARNING PLATE ASSY.	1	
	8		TRIANGULAR WARNING PLATE BOX	1	
	9	3911110300	TRIANGULAR WARNING PLATE 5-PIECE PACKAGE (SEAT COVERING, STEERING WHEEL BUSH, MAT, PARKING BRAKE HANDLE)	1	

8020 CARPET & INSULATOR

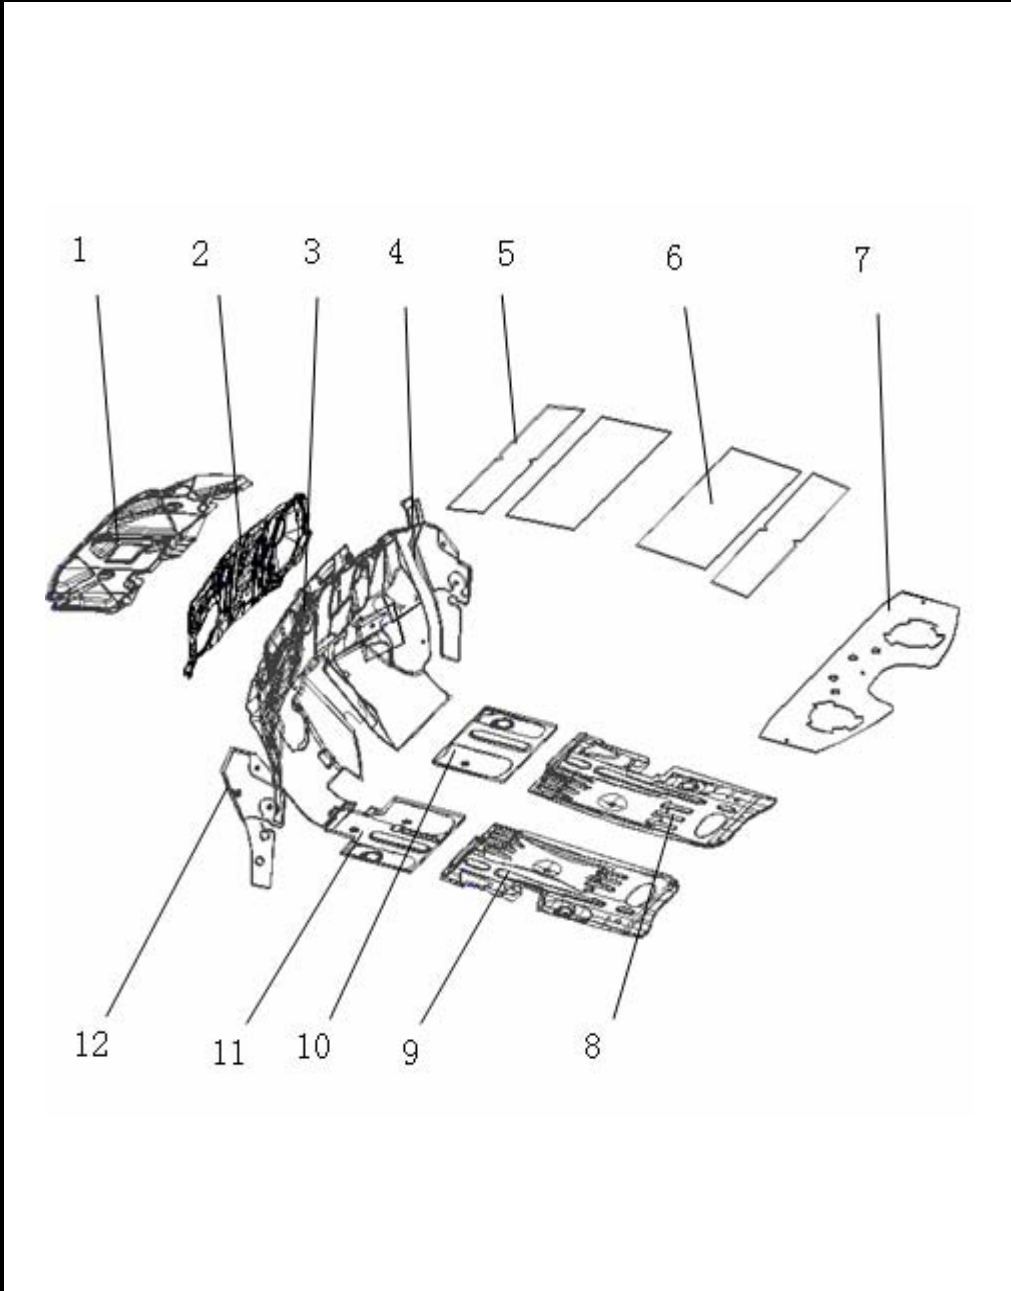
	NO.	PART NO.	DES.	QTY	REMARK
	1	1018005698	CARPET	1	
2	1018005688	ENGINE HOOD SOUND INSULATOR	1		
3	1018004659	COWL PANEL OUTER PANEL HEAR INSULATOR	1		
4	1018004658	COWL PANEL SOUND INSULATOR ASSY.	1		
5	1018005087	RF PILLAR SOUND INSULATOR	1		
6	1018005793	ROOF HEAT INSULATOR (860×150×5)	2		
7	1018005794	ROOF HEAT INSULATOR (820×280×5)	2		
8	1018005818	REAR BAFFLE PLATE SOUND INSULATOR	1		
9	1018005704	FRONT FLOOR RR SOUND INSULATOR	1		
10	1018005702	FRONT FLOOR LR SOUND INSULATOR	1		
11	1018005703	FRONT FLOOR RF SOUND INSULATOR	1		
12	1018005701	FRONT FLOOR LF SOUND INSULATOR	1		
13	1018005086	LF PILLAR SOUND INSULATOR	1		

8030 INSTRUMENT PANEL


	NO.	PART NO.	DES.	QTY	REMARK
1	1	1018005930	INSTRUMENT PANEL UPPER COVER ASSY.	1	
2	2	Q1460625	HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	2	
3	3	1018003494	INSTRUMENT PANEL UPPER COVER SUB-ASSY.	1	SINGLE SRS
4	4	1018003495	INSTRUMENT PANEL UPPER COVER SUB-ASSY.	1	DUAL SRS
5	4	Q32006	HEXAGON FLANGE NUT	2	
6	5	JQ691F06	"E" TYPE CLIP	3	
7	6	1018003500	INSTRUMENT PANEL LOWER COVER SUB-ASSY.	1	
8	7	Q1460620	HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	2	
9	8	1018005920	GLOVE COMPARTMENT	1	
10	9	1018005866	"E" TYPE CLIP (φ8)	2	
11	10	1018005236	CUP SEAT	1	
12	11	1018005204	A/C LOWER PART RIGHT VENT PIPE	1	
13	12	1018005255	A/C LOWER PART RIGHT CONNECTING PIPE	1	
14	13	1018005237	PARKING BRAKE COVER PLATE	1	
15	14		CONSOLE ASSY.	1	
16	15	JQ398M85	PLASTIC NUT	1	
17	16	1018005254	A/C LOWER PART LEFT CONNECTING PIPE	1	
18	17		CROSS SLOTTED HEAD SELF-TAPPING SCREW & PLAIN WASHER ASSY.	1	
19	18	1018005203	A/C LOWER PART LEFT VENT PIPE	1	
20	19		CROSS SLOTTED HEAD SELF-TAPPING SCREW & PLAIN WASHER ASSY.	1	
21	20		CROSS SLOTTED HEAD SELF-TAPPING LOCKING SCREW	2	
22	21	1018005901	COMBINATION SWITCH LOWER TRIM COVER	1	
23	22	1018005900	COMBINATION SWITCH UPPER TRIM COVER	1	
24	23		CROSS SLOTTED HEAD SELF-TAPPING SCREW & PLAIN WASHER ASSY.	2	
25	24	JQ694D63Y653	"J" TYPE CLIP	1	

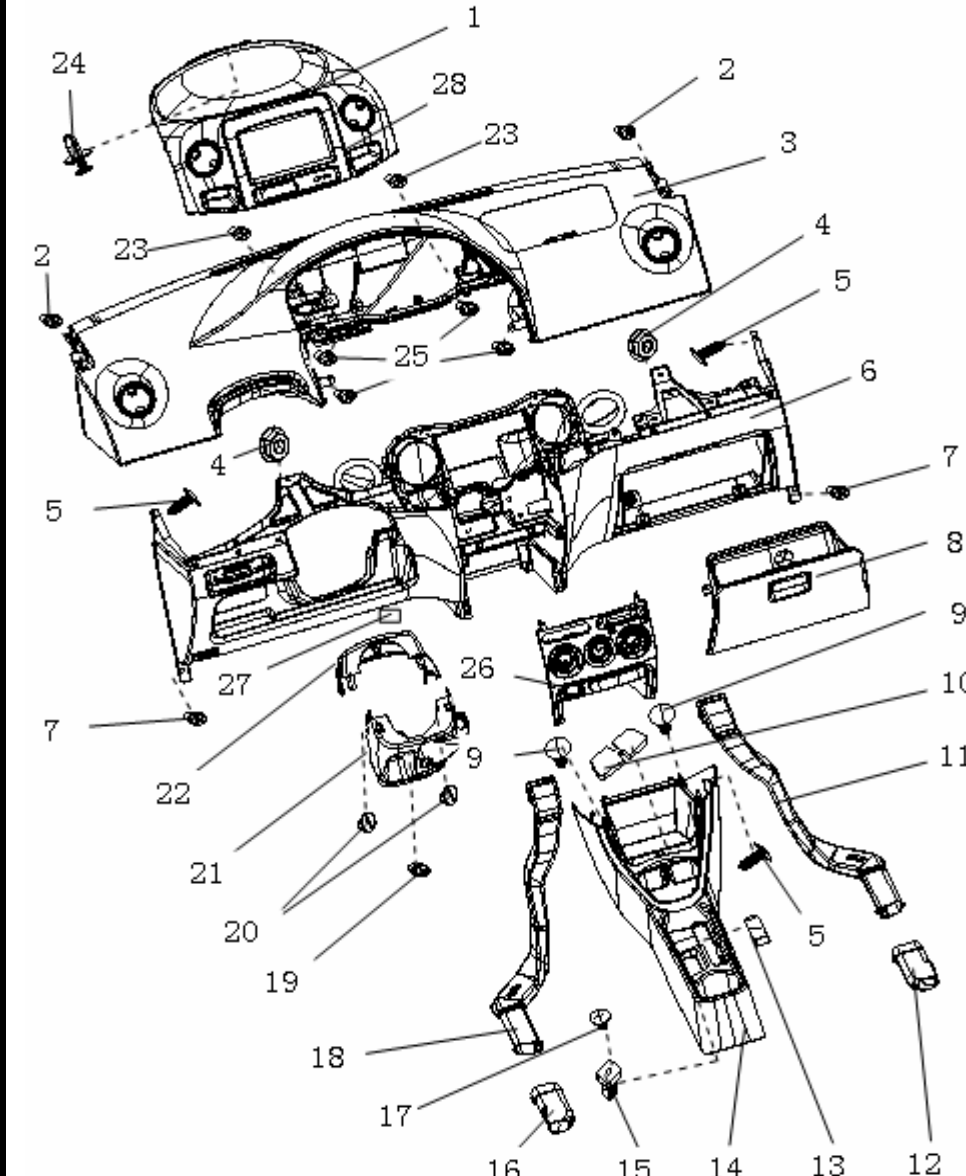

8030 INSTRUMENT PANEL

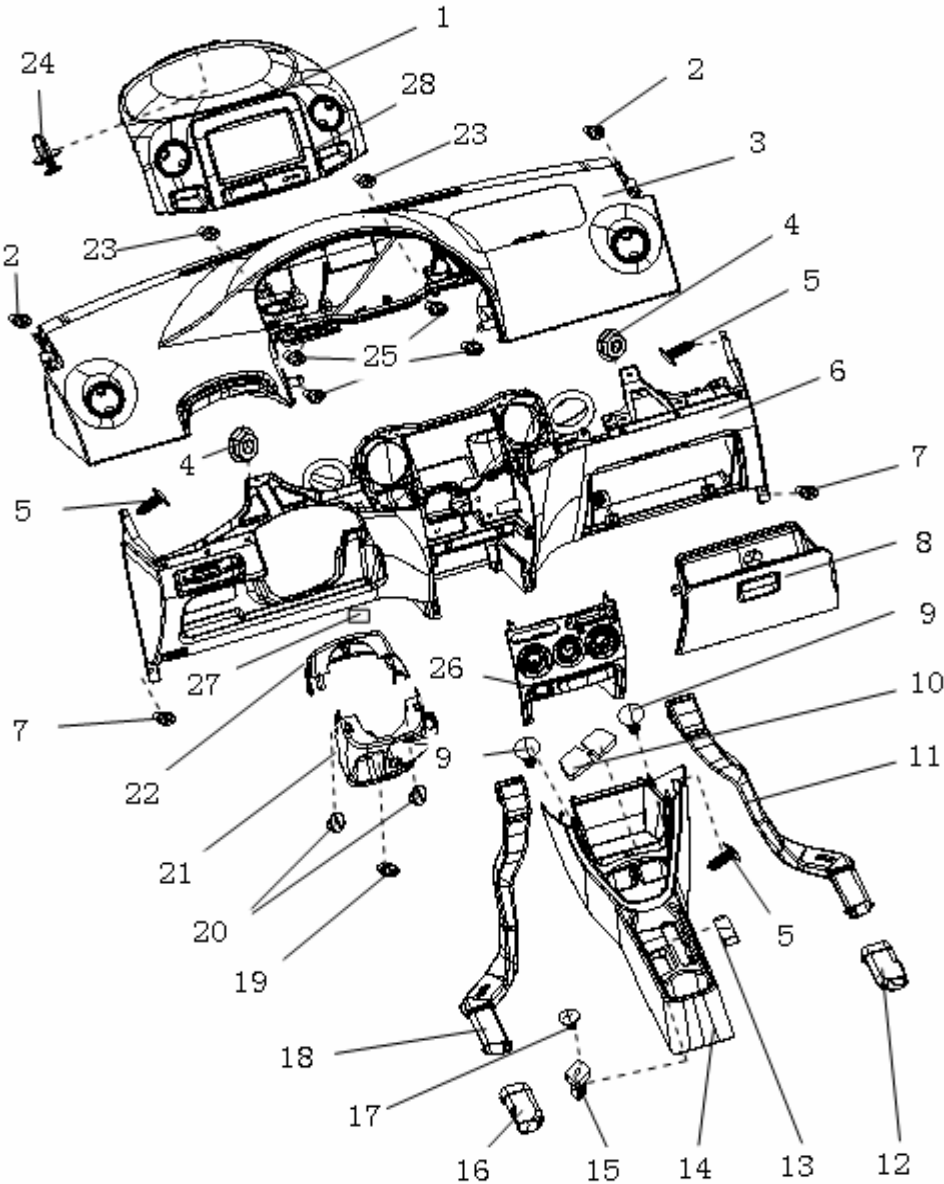	NO.	PART NO.	DES.	QTY	REMARK
	25	Q2204813	CROSS SLOTTED HEAD SELF-TAPPING SCREW & PLAIN WASHER ASSY.	9	
	26	1018003531	INSTRUMENT PANEL LOWER COVER ASSY.	1	
	27		COMBINATION SWITCH UPPER TRIM COVER PLUG	1	
	28	1018005937	CD COVER	1	

8030-1 INSTRUMENT PANEL ASSY.(MK08)

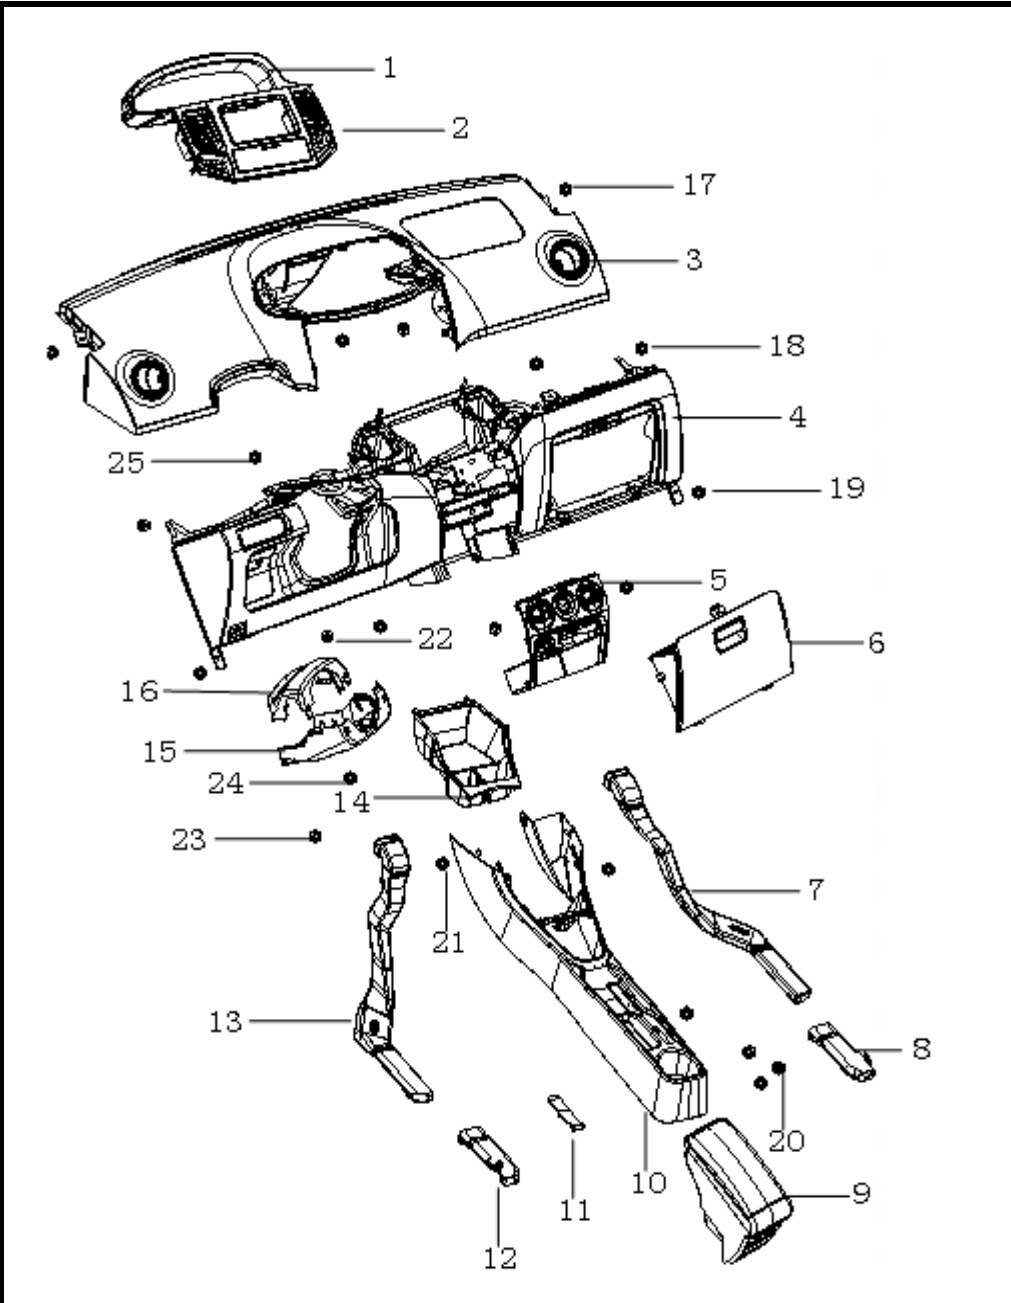	NO.	PART NO.	DES.	QTY	REMARK
	1	1018008134	COMBINATION METER COVER	1	
	2	1018006083	INSTRUMENT PANEL CENTER UPPER PANEL ASSY.	1	
	3	1018008202	INSTRUMENT PANEL UPPER PART ASSY.	1	
	4	1018006080	INSTRUMENT PANEL LOWER PART ASSY.	1	
	5	1018006088	INSTRUMENT PANEL CENTER LOWER PANEL ASSY.	1	
	6	1018005920	GLOVE COMPARTMENT	1	
	7	1018005204	A/C LOWER RIGHT VENT PIPE	1	
	8	1018005255	A/C LOWER RIGHT CONNECTING PIPE	1	
	9	1018006094	CONSOLE ARMREST BOX ASSY.	1	
	10	1018005927	CONSOLE FRAME	1	
	11	1018005237	PARKING BRAKE COVER BOARD	1	
	12	1018005254	A/C LOWER LEFT CONNECTING PIPE	1	
	13	1018005203	A/C LOWER LEFT VENT PIPE	1	
	14	1018005236	CUP SEAT	1	
	15	1018005901	COMBINATION SWITCH LOWER TRIM COVER	1	
	16	1018005900	COMBINATION SWITCH UPPER TRIM COVER	1	
	17		HEXAGON HEAD BOLT & SPRING WASHER ASSY.	2	
	18	JQ691F06	"E" TYPE CLIP	2	
	19		HEXAGON HEAD BOLT & SPRING WASHER ASSY.	2	
	20		CROSS SLOTTED HEAD SELF-TAPPING SCREW	13	
	21	1018005866	"E" TYPE CLIP(FOR CONSOLE)	2	φ8
	22		CROSS SLOTTED HEAD SELF-TAPPING LOCKING SCREW	2	
	23		CROSS SLOTTED HEAD SELF-TAPPING SCREW	1	
	24		COMBINATION SWITCH UPPER TRIM COVER PLUG	1	
	25		HEXAGON FLANGE NUT	2	

8040 INSTRUMENT PANEL UPPER COVER ASSY.

	NO.	PART NO.	DES.	QTY	REMARK
	1	1018003494	INSTRUMENT PANEL UPPER COVER SUB-ASSY.	1	SRS
	1	1018003495	INSTRUMENT PANEL UPPER COVER SUB-ASSY.	1	DUAL SRS
	2		INSTRUMENT PANEL UPPER SOUND INSULATOR	1	250×130×10
	3		INSTRUMENT PANEL UPPER SOUND INSULATOR	1	150×150×10
	4		CROSS SLOTTED HEAD SELF-TAPPING SCREW & PLAIN WASHER ASSY.	13	
	5		RIGHT VENT PIPE	1	
	6	1018005202	DEFROST VENT PIPE ASSY.	1	
	7		DEFROST VENT PIPE REAR COVER	1	
	8		DEFROST VENT PIPE FRONT COVER	1	
	9		LEFT VENT PIPE	1	
	10	1018005161	INSTRUMENT PANEL UPPER SOUND INSULATOR	1	400×400×10
	11		INSTRUMENT PANEL UPPER COVER SPONGE (SHORT)	1	
	12	1018005970	WIND DIRECTION ADJUSTER	2	
	13		INSTRUMENT PANEL UPPER COVER SPONGE (LONG)	1	
	14		UPPER GLOVE COMPARTMENT ASSY.	1	
	15		UPPER GLOVE COMPARTMENT FIXING BRACKET	1	
	16		UPPER GLOVE COMPARTMENT BOTTOM	1	
	17		UPPER GLOVE COMPARTMENT COVER	1	
18		INSTRUMENT PANEL UPPER SOUND INSULATOR	1	150×370×10	

8040-1 INSTRUMENT PANEL UPPER PART(MK08)

	NO.	PART NO.	DES.	QTY	REMARK
	1	1018008202	INSTRUMENT PANEL UPPER PART SUB-ASSY.	1	W/O PAB
	2		UPPER SOUND INSULATOR (250×130×10)	1	
	3		UPPER SOUND INSULATOR (150×150×10)	1	
	4		CROSS SLOTTED HEAD SELF-TAPPING SCREW	4	
	5		RIGHT VENT PIPE	1	
	6	1018006076	DEFROST VENT PIPE ASSY.	1	
	7		DEFROST VENT PIPE REAR COVER	1	
	8		DEFROST VENT PIPE FRONT COVER	1	
	9		LEFT VENT PIPE	1	
	10		UPPER SOUND INSULATOR (400×400×10)	1	
	11		SPONGE (SHORT)	1	
	12	1018006073	SIDE VENT ASSY.	2	
	13		SPONGE (LONG)	1	
	14		UPPER SOUND INSULATOR (150×370×10)	1	


8050 INSTRUMENT PANEL LOWER COVER ASSY.

	NO.	PART NO.	DES.	QTY	REMARK
	1	1018005312	LOWER COVER LEFT SOUND INSULATOR	1	
	2		STEERING WHEEL LOWER GLOVE COMPARTMENT ASSY.	1	
	3	1018005314	LOWER COVER LEFT CENTER SOUND INSULATOR	1	
	4		CENTER VENT PIPE	1	
	5	1018005315	LOWER COVER RIGHT CENTER SOUND INSULATOR	1	
	6	1018005919	ENGINE HOOD UNLOCK HANDLE ASSY.	1	
	7		CROSS SLOTTED HEAD SELF-TAPPING SCREW & PLAIN WASHER ASSY.	9	
	8	1018003500	INSTRUMENT PANEL LOWER COVER BODY	1	
	9	1018005313	LOWER COVER RIGHT SOUND INSULATOR	1	

8050-1 INSTRUMENT PANEL LOWER PART(MK08)


	NO.	PART NO.	DES.	QTY	REMARK
	1	1018005312	LEFT SOUND INSULATOR	1	
	2	1018005920	GLOVE COMPARTMENT ASSY.	1	
	3	1018005314	CENTER LEFT SOUND INSULATOR	1	
	4		CENTER VENT PIPE	1	
	5	1018005315	CENTER RIGHT SOUND INSULATOR	1	
	6	1018005919	ENGINE HOOD CONTROL HANDLE ASSY.	1	
	7		CROSS SLOTTED HEAD SELF-TAPPING SCREW	12	
	8		INSTRUMENT PANEL LOWER PART FRAME	1	
	9	1018005313	RIGHT SOUND INSULATOR	1	
	10		GLOVE COMPARTMENT LOCK BUCKLE	1	
	11		FUSE BOX COVER	1	
	12	1018008143	LEFT CONNECTING BRACKET	1	
	13	1018008144	RIGHT CONNECTING BRACKET	1	

8060 GLOVE COMPARTMENT

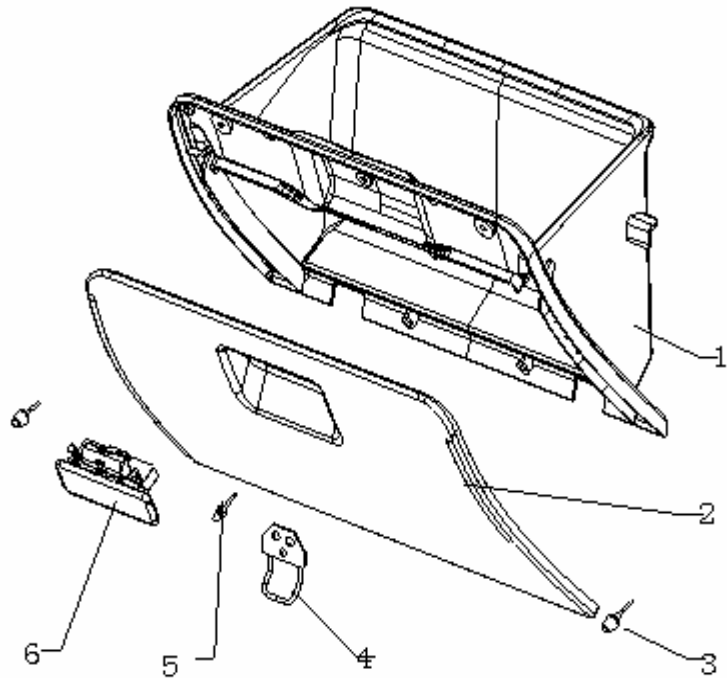

NO.	PART NO.	DES.	QTY	REMARK
1		GLOVE COMPARTMENT BODY	1	
2		GLOVE COMPARTMENT COVER	1	
3		GLOVE COMPARTMENT CUSHION (LEFT, RIGHT)	1	
4	1018005244	GLOVE COMPARTMENT TAB	1	
5		GLOVE COMPARTMENT CUSHION (CENTER)	1	
6	1018005282	GLOVE COMPARTMENT PULL HANDLY	1	
	1018005243	GLOVE COMPARTMENT PULL HANDLY	1	

8070 CONSOLE ASSY.

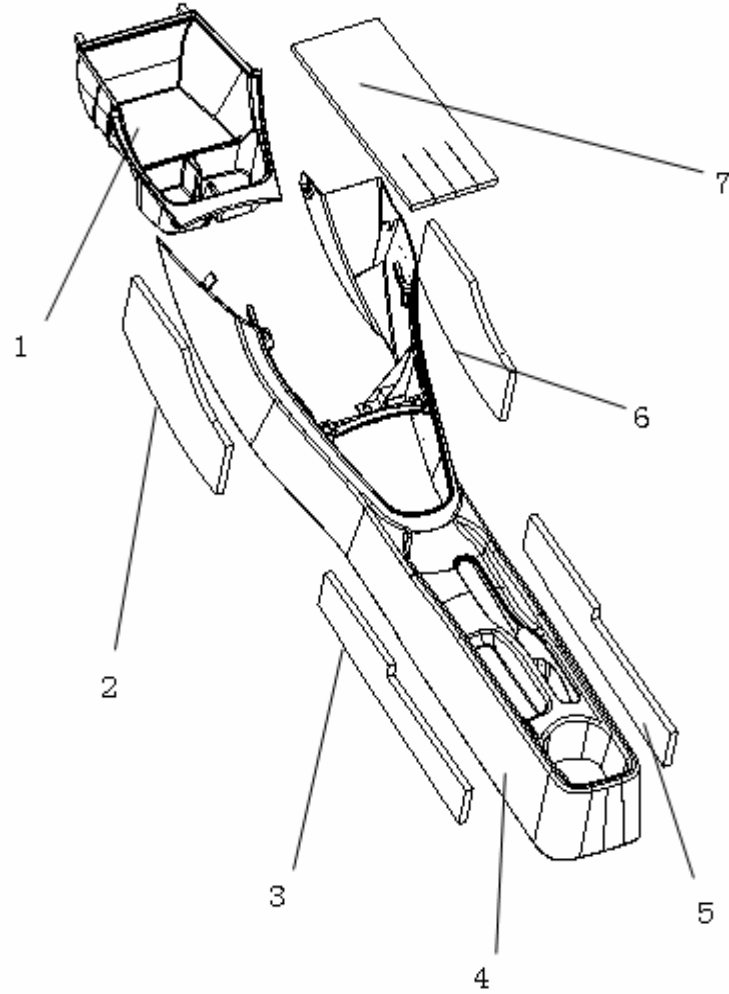


NO.	PART NO.	DES.	QTY	REMARK
1	1018005236	CUP HOLDER	1	
2		CONSOLE SOUND INSULATOR(L 240×110×10)	1	
3		CONSOLE SOUND INSULATOR(L 380×100×10)	1	
4	1018005927	CONSOLE BODY	1	
5		CONSOLE SOUND INSULATOR(R 380×100×10)	1	
6		CONSOLE SOUND INSULATOR(R 240×110×10)	1	
7		CONSOLE SOUND INSULATOR(R 300×120×10)	1	

8080 INSTRUMENT PANEL CROSS MEMBER


	NO.	PART NO.	DES.	QTY	REMARK
	1	1018005209	INSTRUMENT PANEL RIGHT SHIELD	1	
	2	Q32006	HEXAGON FLANGE NUT	1	
	3		HEXAGON FLANGE TOOTHED BOLT	1	
	4	1012000524	INSTRUMENT PANEL RIGHT FIXING BRACKET ASSY.	1	
	5	1012005488	INSTRUMENT PANEL SUPPORT BAR ASSY.	1	
	6	1012000455	INSTRUMENT PANEL LEFT FIXING BRACKET ASSY.	1	
	7		HEXAGON FLANGE NUT	9	
	8		HEXAGON FLANGE BOLT	6	
	9		HEXAGON HEAD BOLT & PLAIN WAHSER ASSY.	8	
	10	1018005208	INSTRUMENT PANEL LEFT SHIELD	1	
	11	1012005481	CENTER CROSS MEMBER ASSY.	1	

8080-1 INSTRUMENT PANEL CROSS MEMBER(MK08)

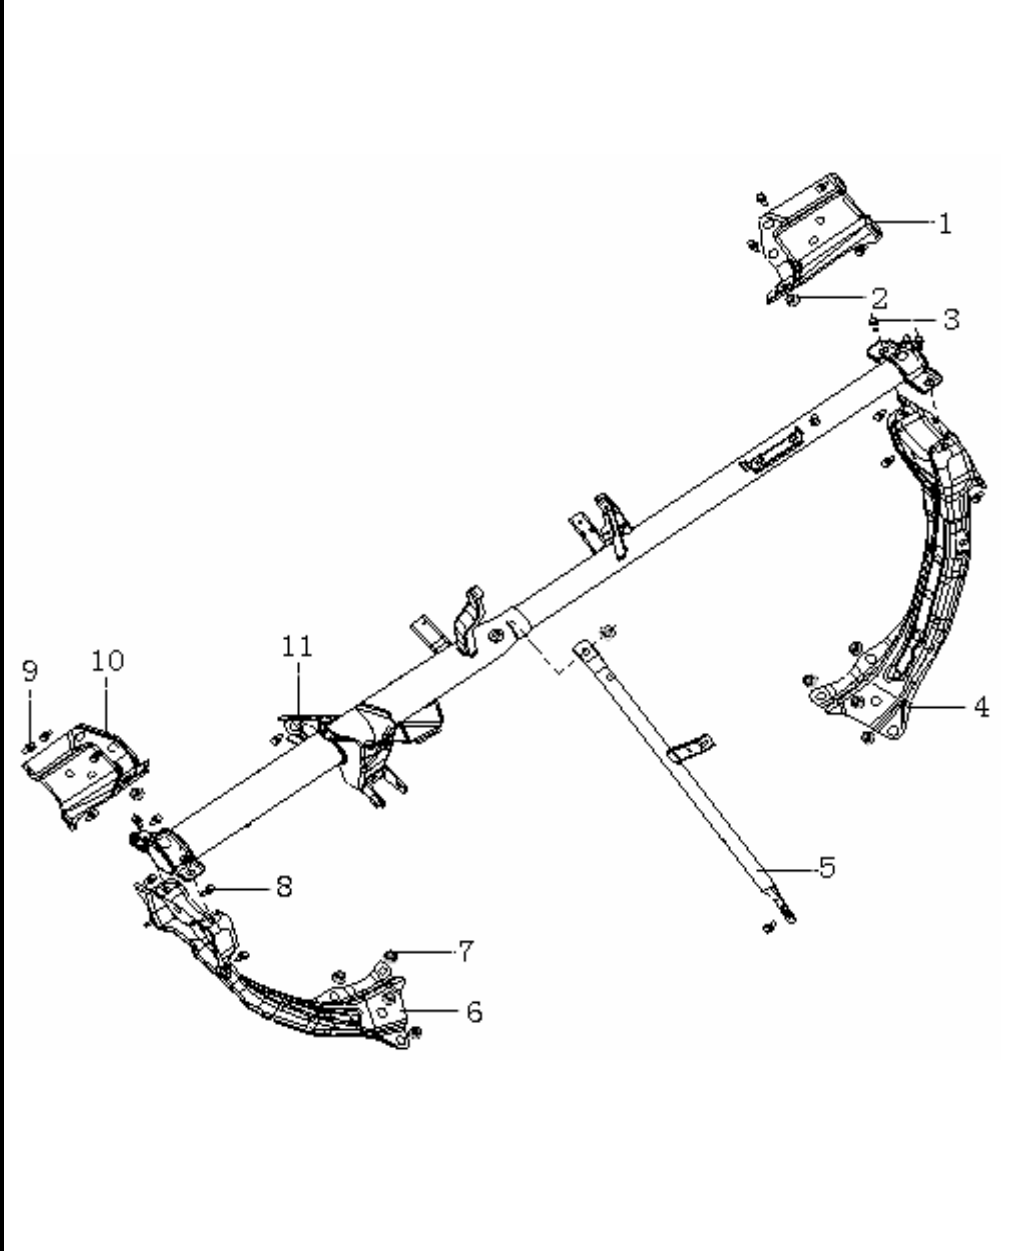	NO.	PART NO.	DES.	QTY	REMARK
	1	1018005209	INSTRUMENT PANEL RIGHT SHIELD PLATE	1	
	2	Q32006	HEXAGON FLANGE NUT	1	
	3		HEXAGON FLANGE BOLT	1	
	4	1012000524	INSTRUMENT PANEL RIGHT FIXING BRACKET ASSY.	1	
	5	1012005488	INSTRUMENT PANEL SUPPORT ROD ASSY.	1	
	6	1012000455	INSTRUMENT PANEL LEFT FIXING BRACKET ASSY.	1	
	7	Q32008	HEXAGON FLANGE NUT	9	
	8		HEXAGON FLANGE BOLT	6	
	9	Q1460616	HEXAGON HEAD BOLT & SPRING WASHER ASSY.	8	
	10	1018005208	INSTRUMENT PANEL LEFT SHIELD PLATE	1	
	11	1018006102	CENTER CROSS MEMBER ASSY.	1	

8090 FRONT DOOR SILL & FRONT PILLAR TRIM BOARD

NO.	PART NO.	DES.	QTY	REMARK
1	1018005732	LF PILLAR UPPER TRIM BOARD	1	
2	1058004660	"D" TYPE CLIP	4	
3		SPONGE (100×100×100)	2	
4	1018005762	RF PILLAR UPPER TRIM BOARD	1	
5		LF PILLAR LOWER TRIM BOARD GASKET	1	
6		LF PILLAR LOWER TRIM BOARD	1	
7		CIRCLIP	2	
8		LF DOOR SILL INTERIOR TRIM BOARD	1	
9	1018005722	LF DOOR SILL SHIELD ASSY.	1	
10		SPONGE PAD	4	
11	1018005760	RF PILLAR LOWER TRIM BOARD GASKET	1	
12		RF PILLAR LOWER TRIM BOARD	1	
13		RF DOOR SILL INTERIOR TRIM PLATE	1	
14	1018005752	RF DOOR SILL SHIELD ASSY.	1	
15		LF PILLAR UPPER TRIM BOARD ASSY.	1	
16		RF PILLAR UPPER TRIM BOARD ASSY.	1	
15	1018003491	LF PILLAR LOWER TRIM BOARD	1	
16	1018003175	RF PILLAR LOWER TRIM BOARD	1	

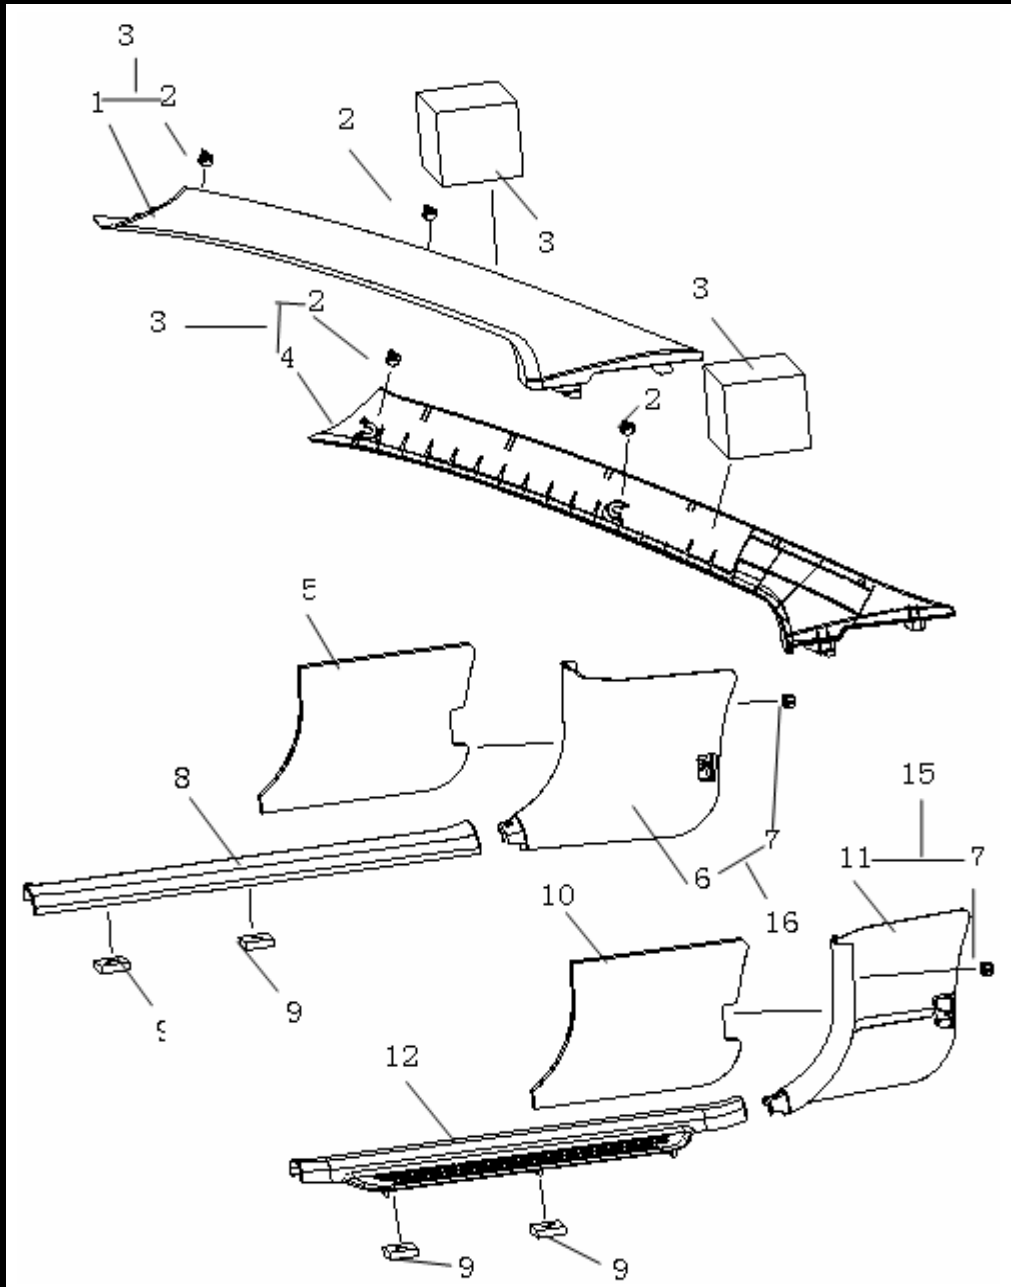

8100 REAR DOOR SILL & REAR PILLAR TRIM BOARD


	NO.	PART NO.	DES.	QTY	REMARK
1LH 2RH	1		LR PILLAR UPPER TRIM BOARD GASKET	1	
3LH 4RH	2		RR PILLAR UPPER TRIM BOARD GASKET	1	
5	3	1018005740	LR PILLAR UPPER TRIM BOARD	1	
9LH 10RH	4	1018005770	RR PILLAR UPPER TRIM BOARD	1	
5	5	JQ690E82	"D" TYPE CLIP	16	
6	6	1018005068	REAR VENT COVER PLATE	1	
25LH 26RH	7	1018005735	LR PILLAR LOWER TRIM BOARD	1	
12	8	1018005765	RR PILLAR LOWER TRIM BOARD	1	
13	9		LR DOOR SILL INTERIOR TRIM BOARD	1	
11	10	1018005723	LR DOOR SILL SHIELD	1	
5	11	1018005753	RR DOOR SILL SHIELD	1	
7LH 8RH	12		SIDE WALL LOWER TRIM BOARD MOUNTING CLIP	1	
17	13		CIRCLIP	2	
27LH 28RH	14		SPONGE PAD	1	
18LH 19RH	15	1018004885	CENTER PILLAR UPPER TRIM BOARD.LH	1	
22LH 23RH	16	1018004886	CENTER PILLAR UPPER TRIM BOARD.RH	1	
20LH 21RH	17	JQ695C85	"K" TYPE CLIP	1	
24	18		CENTER PILLAR LOWER TRIM BOARD BRACKET.LH	1	
24	19		CENTER PILLAR LOWER TRIM BOARD BRACKET.RH	1	
24	20		CENTER PILLAR LOWER TRIM BOARD GASKET.LH	1	
24	21		CENTER PILLAR LOWER TRIM BOARD GASKET.RH	1	
24	22	1018003492	CENTER PILLAR LOWER TRIM BOARD.LH	1	
24	23	1018003176	CENTER PILLAR LOWER TRIM BOARD.RH	1	

8100 REAR DOOR SILL & REAR PILLAR TRIM BOARD

	NO.	PART NO.	DES.	QTY	REMARK
	24		CENTER PILLAR SPONGE	1	
	25	1018004885	CENTER PILLAR UPPER TRIM BOARD ASSY.LH	1	
	26	1018004886	CENTER PILLAR UPPER TRIM BOARD ASSY.RH	1	
	27	1018003492	CENTER PILLAR LOWER TRIM BOARD SUB-ASSY.LH	1	
	28	1018003176	CENTER PILLAR LOWER TRIM BOARD SUB-ASSY.RH	1	

8110 TRUNK INTERIOR TRIM & ACCESSORY

NO.	PART NO.	DES.	QTY	REMARK
1	1018005821	TRUNK COMPARTMENT LEFT TRIM BOARD	1	
2	1018004851	JACK BELLCRANK	1	
3	1018005823	TRUNK COMPARTMENT RIGHT TRIM BOARD	1	
4	1018005829	TRUNK COMPARTMENT CARPET	1	
5		TRUNK COMPARTMENT LEFT CUSHION	1	
6	1018005310	TRUNK COMPARTMENT LEFT COVER PLATE	1	
7		TRUNK COMPARTMENT RIGHT CUSHION	1	
8	1018005306	TRUNK COMPARTMENT RIGHT COVER PLATE	2	
9	1018005065	SPARE TIRE COVER PLATE	1	
10		SPARE TIRE COVER PLATE INSULATOR (40×40×40)	3	
11		SPARE TIRE COVER PLATE INSULATOR (40×40×50)	3	
12		SPARE TIRE COVER PLATE INSULATOR (50×50×20)	6	
13		SPARE TIRE COVER PLATE METAL CLIP (SMALL)	2	
14		SPARE TIRE COVER PLATE CLIP	1	
15		SPARE TIRE COVER PLATE CLIP SEAT	1	
16	1018005066	HOOK	1	
17		SPARE TIRE COVER PLATE METAL CLIP (BIG)	5	
18	1038000301	TIRE SLEEVE	1	
19	1018004750	TRUNK COMPARTMENT WEATHERSTRIP	1	
20	1018005824	REAR END WALL INTERIOR TRIM PLATE	1	
21	1018005342	TRUNK COMPARTMENT Baffle Plate Trim Plate	1	
22		SPEAKER GRILLE	2	
23	Q2204213	CROSS SLOTTED HEAD SELF-TAPPING SCREW & PLAIN WASHER ASSY.	8	
24	JQ691C66	"E" TYPE CLIP	10	

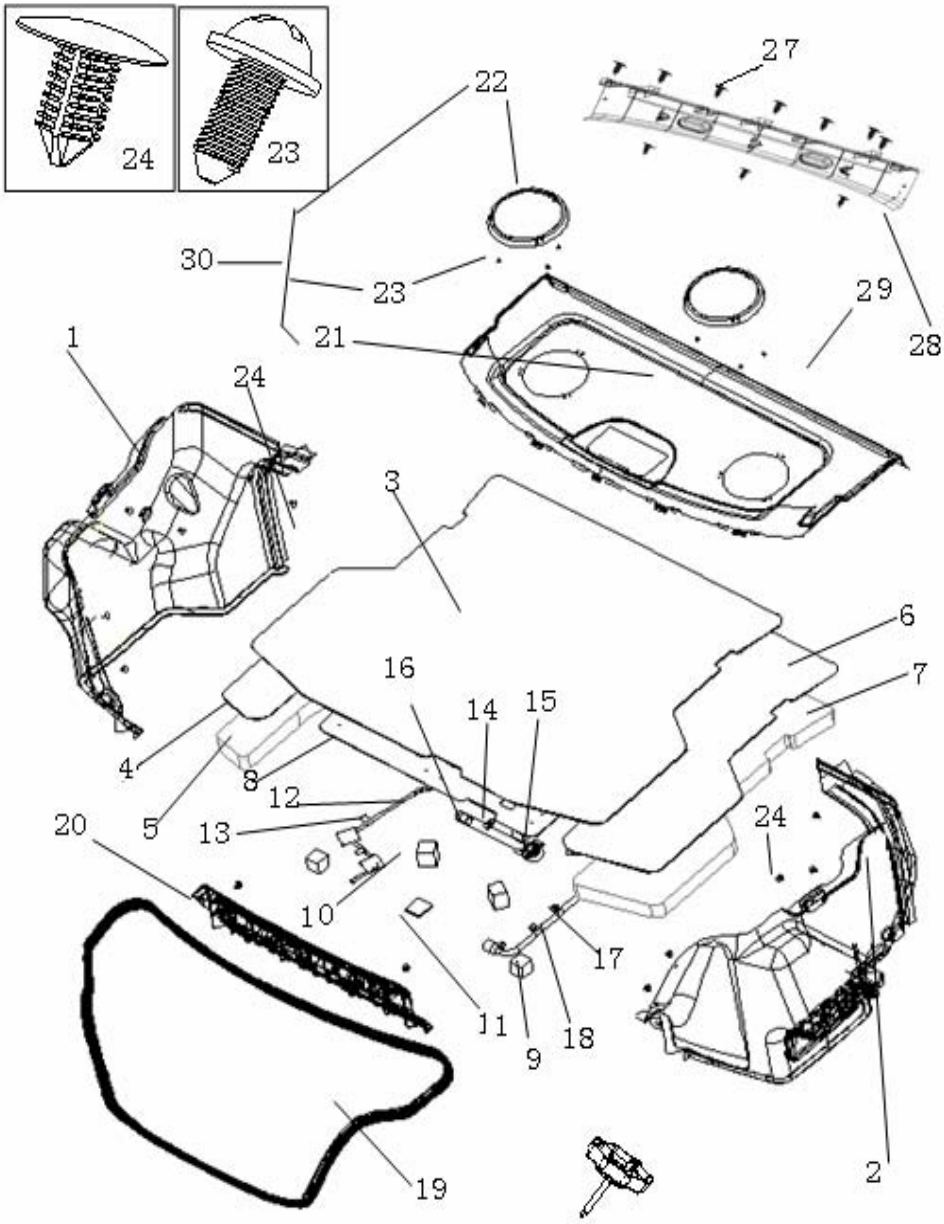


8110 TRUNK INTERIOR TRIM & ACCESSORY

	NO.	PART NO.	DES.	QTY	REMARK	
	25	1018005817	"E" TYPE CLIP	3		
	26	1018001968	SPARE TIRE PRESSURE PLATE	1		
	27		SPARE TIRE PRESSURE PLATE BOLT	1		
	28	1018005819	REAR BAFFLE PLATE LOWER TRIM BOARD	1		
	29	JQ690E82	"D" TYPE CLIP	5		
	30	1018005342	TRUNK COMPARTMENT BAFFLE PLATE TRIM BOARD ASSY.	1		
	31	1018003963	SPARE TIRE PAD	4		
	32		REAR BAFFLE PLATE SOUND INSULATOR	1		
			1018005011	RUBBER BLOCK $\Phi 20$	4	RUSSIA
			1018005433	PLASTIC CUSHION	4	RUSSIA


8120 TRUNK LID INTERIOR TRIM & ACCESSORY

	NO.	PART NO.	DES.	QTY	REMARK
	1	1018005692	TRUNK LID INTERIOR TRIM BOARD	1	
	2	1018005017	TRUNK LID CUSHION	2	
	3	JQ691C66	"E" TYPE CLIP	15	
	4		HEXAGON HEAD BOLT & WASHER ASSY.	4	
	5	1018004688	TRUNK LID LOCK BUCKLE ASSY.	1	
	6		LOCK CYLINDER SNAP RING	1	
	7		TRUNK LID LOCK CYLINDER ASSY.	1	
	8		TRUNK LID LOCK ROD ASSY.	1	
	9	1018005658	TRUNK LOCK ASSY.	1	
	10		INTERIOR TRIM BOARD LEFT PLUG	1	
	11	1018005223	TRUNK LID HINGE TORSION BAR PLASTIC CLIP	2	
	12		INTERIOR TRIM BOARD RIGHT PLUG	1	
	13	Q1840616	HEXAGON FLANGE BOLT	2	
	1018004753	FUEL FILLER CAP & TRUNK UNLOCKING CONTROL ASSY.	1		
	3903041009	REAR GEELY LOGO	1		

8130 ROOF INTERIOR TRIM & ACCESSORY(W/O SUNROOF)

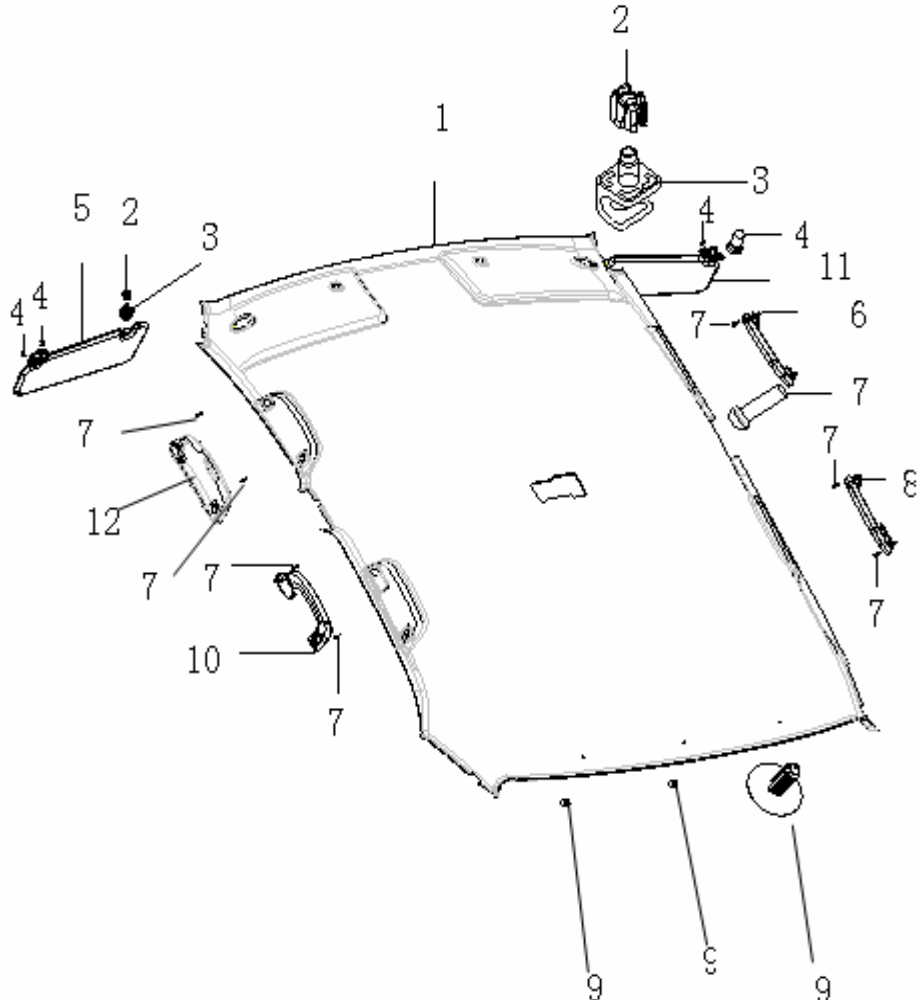	NO.	PART NO.	DES.	QTY	REMARK
	1	1018005786	ROOF INTERIOR TRIM BOARD	1	BEFORE 2009.4 AFTER 2009.4
		1018015751	ROOF INTERIOR TRIM BOARD	1	
	2	1018005800	SUN VISOR CLIP	2	
	3	1018005800	SUN VISOR CLIP SEAT	2	
	4		"F" TYPE CROSS SLOTTED HEAD SELF-TAPPING SCREW	4	
	5	1058005671	LEFT SUN VISOR ASSY.	1	
	6	1018002096	RF SAFE PULL HANDLE ASSY.	1	
		1018005334	RF SAFE HANDLE MOUNTING BRACKET	1	
	7		CROSS SLOTTED HEAD SCREW	8	
	8	1018001982	RR SAFE PULL HANDLE ASSY.	1	
		1018005335	RR SAFE HANDLE MOUNTING BRACKET	1	
	9	1018005803	ROOF INTERIOR TRIM "E" TYPE CLIP	3	
10	1018002069	LR SAFE PULL HANDLE ASSY.	1		
	1018005333	LR SAFE HANDLE MOUNTING BRACKET	1		
11	1058005673	RIGHT SUN VISOR ASSY.	1		
12	1018002266	GLASSES BOX	1		

8140 ROOF INTERIOR TRIM & ACCESSORY (SUNROOF)

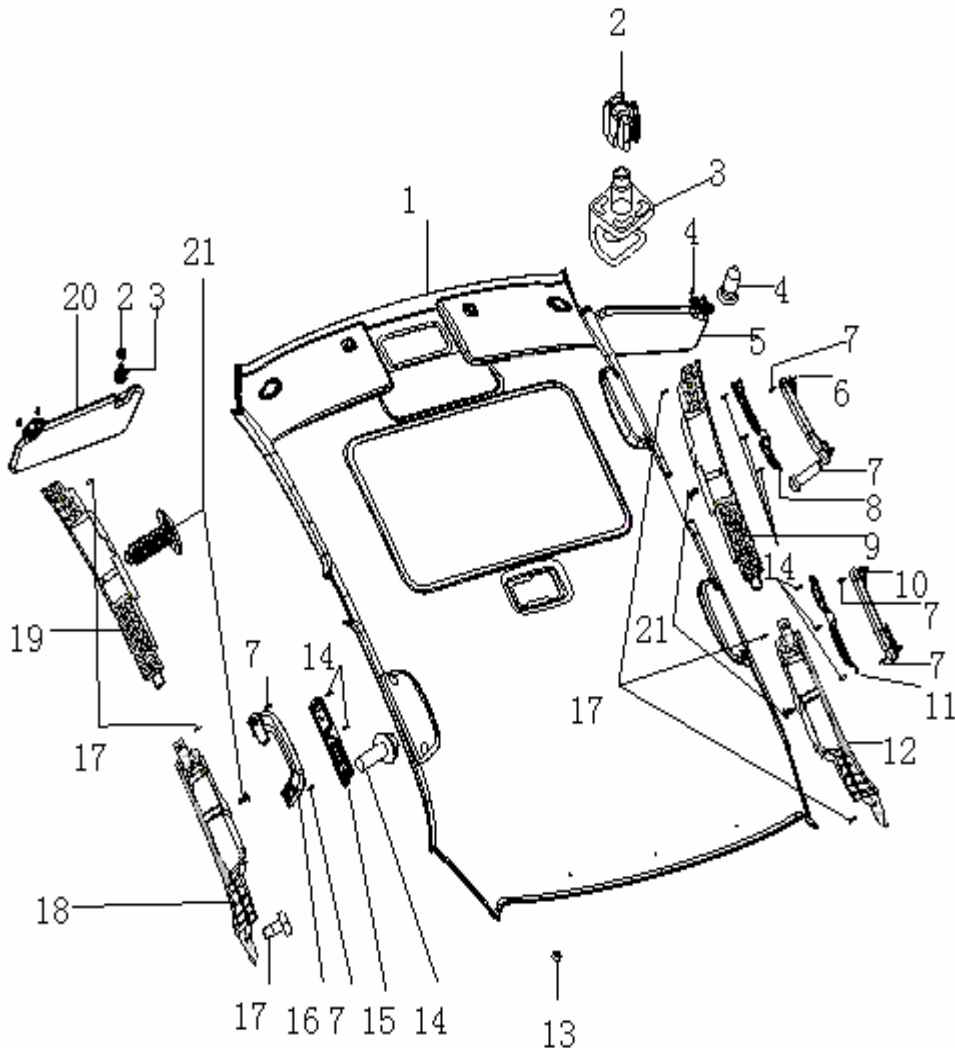
	NO.	PART NO.	DES.	QTY	REMARK
	1	1018005785	ROOF ITERIOR TRIM BOARD	1	
		1058005785	ROOF ITERIOR TRIM BOARD (KNITTING+HEIGHTEN)	1	
	2	1018005800	SUN VISOR CLIP	2	
	3	1018005800	SUN VISOR CLIP SEAT	2	
	4		"F" TYPE CROSS SLOTTED HEAD SELF-TAPPING SCREW	4	
	5	1058005673	RIGHT SUN VISOR ASSY.	1	
	6	1018002096	FRONT SAFE PULL HANDLE ASSY.	1	
	7		CROSS SLOTTED HEAD SCREW	6	
	8	1018005334	RF SAFE HANDLE MOUNTING BRACKET	1	
	9	1018005798	ROOF RF INTERIOR LINER	1	
	10	1018001982	RR SAFE PULL HANDLE ASSYY.	1	
	11	1018005335	RR SAFE HANDLE MOUNTING BRACKET	1	
	12	1018005797	ROOF RR INTERIOR LINER	1	
	13	1018005803	ROOF INTERIOR TRIM "E" TYPE CLIP	3	
	14		HEXAGON FLANGE BOLT	9	
	15	1018005333	LR SAFE HANDLE MOUNTING BRACKET	1	
	16	1018002069	LR SAFE PULL HANDLE ASSY.	1	
	17		"C" TYPE HEXAGON FLANGE SELF-TAPPING SCREW	6	
	18	1018005784	ROOF LR INTERIOR LINER	1	
	19	1018005783	ROOF LF INTERIOR LINER	1	
	20	1058005671	LEFT SUN VISOR ASSY.	1	
21	JQ691F06	"E" TYPE CLIP	4		
		1018005110	SUNFROOF FRONT WATER HOSE	1	
		1018005695	SUNFROOF REAR WATER HOSE	1	

8150 SEAT BELT


	NO.	PART NO.	DES.	QTY	REMARK
	1	1018005764	LF SEAT BELT ASSY.	1	
		1018009124	LF SEAT BELT ASSY.	1	E-MARK
		1018005870	LF SEAT BELT ASSY.(PRETENSIONER)	1	
		1018009128	LF SEAT BELT ASSY.(PRETENSIONER)	1	E-MARK
	2	1018005766	RF SEAT BELT ASSY.	1	
		1018009125	RF SEAT BELT ASSY.	1	E-MARK
		1018005878	RF SEAT BELT ASSY.(PRETENSIONER)	1	
		1018009129	RF SEAT BELT ASSY.(PRETENSIONER)	1	E-MARK
	3	1018003024	REMOTE ADJUSTER ASSY.	2	
	4	1018005887	LF SEAT BELT BUCKLE ASSY.	1	
	1018009126	LF SEAT BELT BUCKLE ASSY.	1	E-MARK	
5	1018005888	RF SEAT BELT BUCKLE ASSY.	1		
	1018009127	RF SEAT BELT BUCKLE ASSY.	1	E-MARK	
6	1013000056	LR SEAT BELT ASSY.	1		
7	1018005886	RR SEAT BELT BUCKLE & LAP BELT ASSY.	1		
8	1013000059	LR SEAT BELT BUCKLE ASSY.	1		
9		SLIDER COVER	2		
10	1013000057	RR SEAT BELT ASSY.	1		
	1017000950	RF SEAT BELT LAMP	1		

8160 LF DOOR INTERIOR TRIM & ACCESSORY

NO.	PART NO.	DES.	QTY	REMARK
1	1018005661	LF DOOR GLASS REGULATOR	1	ELECTRIC
	1018005418	LF DOOR GLASS REGULATOR	1	MANUAL
2	1018005665	FRONT DOOR CHECK	1	
3	JQ690E82	"D" TYPE CLIP	1	
4	1018005631	LF DOOR INTERIOR QUARTER TRIM	1	
5		LF DOOR INTERIOR TRIM BOARD ASSY.	1	
6	1038001715	DOOR CUSHION	1	
7	1018005048	FRONT DOOR HOLE COVER	1	
8	1018004706	LF DOOR WATERPROOF FILM ASSY.	1	
9		LF DOOR ANTI-NOISE BLOCK	1	
10		LF DOOR WEATHERSTRIP	1	
11	1018005293	LEFT DOOR INTERIOR HANDLE ASSY.	1	
12		CROSS SLOTTED HEXAGON HEAD SELF-TAPPING SCREW & PLAIN WASHER ASSY.	2	
13		CROSS SLOTTED HEXAGON HEAD SELF-TAPPING SCREW	1	
14	1018005629	DOOR INTERIOR TRIM HANDLE	1	
15	JQ398M85	THROUGH HOLE INSERT PLASTIC NUT	3	
16		INTERIOR HANDLE MOUNTING BRACKET	1	
17		BUTYL TAPE	1	

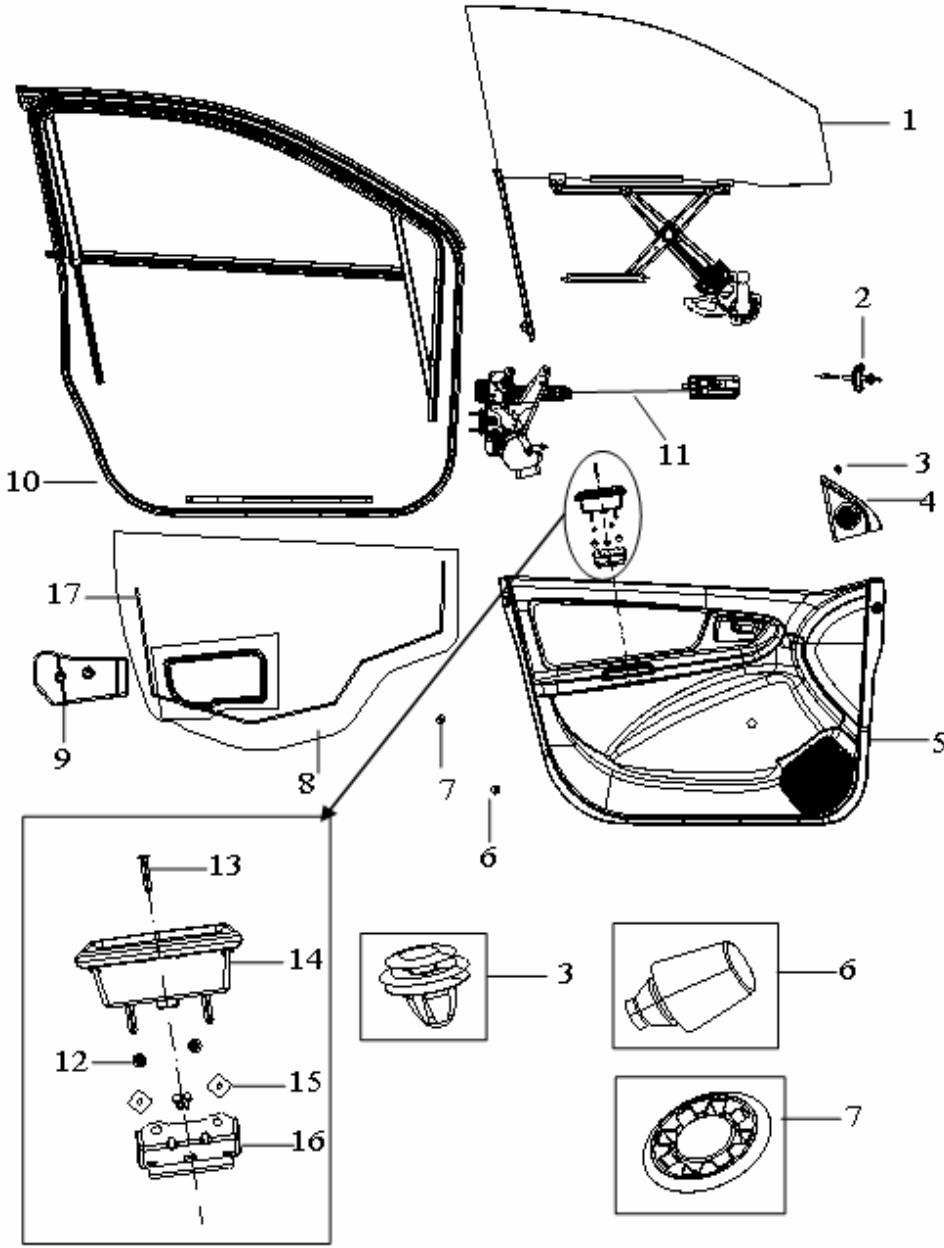

8170 LF DOOR INTERIOR TRIM BOARD ASSY.

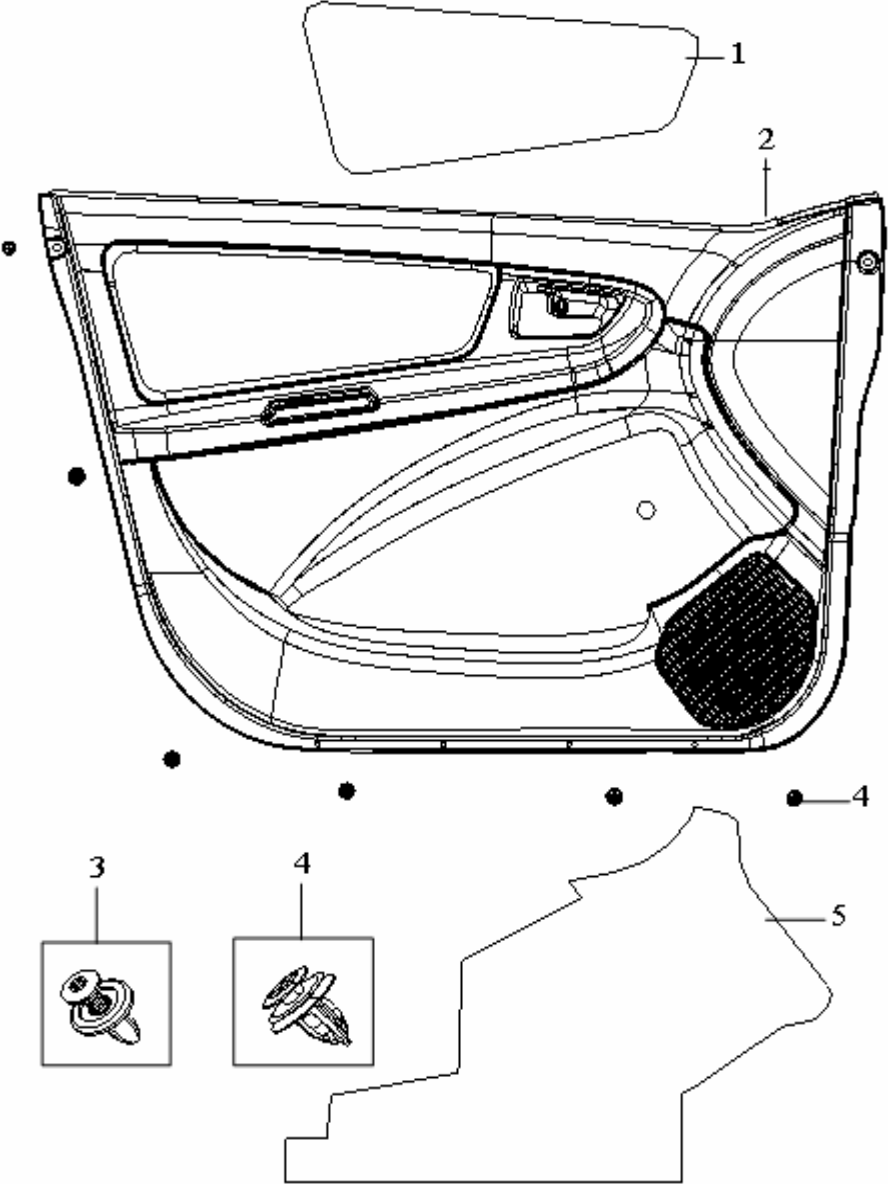
	NO.	PART NO.	DES.	QTY	REMARK
	1		LF INTERIOR TRIM BOARD SOUND INSULATOR(465×210×10)	1	
	2	1018005137	LF DOOR INTERIOR TRIM BOARD SUB-ASSY.	1	ELECTRIC
		1058005137	LF DOOR INTERIOR TRIM BOARD SUB-ASSY.	1	LEATHER
		1018005789	LF DOOR INTERIOR TRIM BOARD SUB-ASSY.	1	MANUAL
	3	JQ694D63Y653	"J" TYPE CLIP	1	
4	JQ690E82	"D" TYPE CLIP	1		
5		LF INTERIOR TRIM BOARD SOUND INSULATOR(600×420×10)	1		

8180 LF DOOR LOCK & HANDLE

	NO.	PART NO.	DES.	QTY	REMARK
	1	1018005293	LEFT DOOR INTERIOR UNLOCKING HANDLE ASSY.	1	
	2	JQ398M85	THROUGH HOLE INSERT PLASTIC NUT	1	
	3		"C" TYPE CROSS SLOTTED HEAD SELF-TAPPING SCREW	1	
	4	1058005289	LF DOOR LOCK ASSY.(W/O LOCK ACTUATOR)	1	
		1018005289	LF DOOR LOCK ASSY.	1	
	5		INNER HEXAGON FLOWER HEAD SCREW	3	
	6		CROSS SLOTTED HEAD SCREW & PLAIN WASHER ASSY.	5	
	7		"C" TYPE CROSS SLOTTED HEAD SELF-TAPPING SCREW	1	
	8	1018004995	DOOR EXTERIOR UNLOCKING HANDLE HOLE COVER	1	
	9	1018005039-01	DOOR EXTERIOR UNLOCKING HANDLE ASSY.	1	
	10	1018005039	LF DOOR EXTERIOR UNLOCKING HANDLE MOUNTING BRACKET ASSY.	1	
	11		LF DOOR LOCK CYLINDER ASSY.	1	
	12	1018005043	LOCK STRIKER	1	
	13		INNER HEXAGON FLOWER HEAD SCREW	2	
	14	1018005283	DOOR EXTERIOR HANDLE FRONT LINER	1	
	15	1018005284	DOOR EXTERIOR HANDLE REAR LINER	1	
	16	1018010723	BLANK KEY ASSY.	1	
	17		LF DOOR LOCKING CABLE ASSY.	1	
	18		FRONT DOOR LOCK INTERIOR LOCKING CABLE ASSY.	1	
19		CABLE CLIP	1		
	1018008853	LF DOOR LOCK ACTUATOR ASSY.	1		

8190 RF DOOR INTERIOR TRIM & ACCESSORY

NO.	PART NO.	DES.	QTY	REMARK
1		RF DOOR WEATHERSTRIP	1	
2	1018004707	RF DOOR WATERPROOF FILM ASSY.	1	
3		RF DOOR ANTI-NOISE BLOCK	1	
4	1018005048	FRONT DOOR HOLE COVER	1	
5	1038001715	DOOR CUSHION	1	
6		RF DOOR INTERIOR TRIM BOARD ASSY.	1	
7	1018005642	RF DOOR INTERIOR QUARTER TRIM	1	
8	JQ690E82	"D" TYPE CLIP	1	
9	1018005294	RIGHT DOOR INTERIOR HANDLE ASSY.	1	
10	1018005665	FRONT DOOR CHECK	1	
11	1018005660	RF DOOR GLASS REGULATOR	1	ELECTRIC
	1018005419	RF DOOR GLASS REGULATOR	1	MANUAL
12		CROSS SLOTTED HEXAGON HEAD SELF-TAPPING SCREW & PLAIN WASHER ASSY.	2	
13		CROSS SLOTTED HEXAGON HEAD SELF-TAPPING SCREW	1	
14	1018005629	DOOR INTERIOR TRIM HANDLE	1	
15	JQ398M85	THROUGH HOLE INSERT PLASTIC NUT	3	
16		INTERIOR HANDLE MOUNTING BRACKET	1	
17		BUTYL TAPE	1	

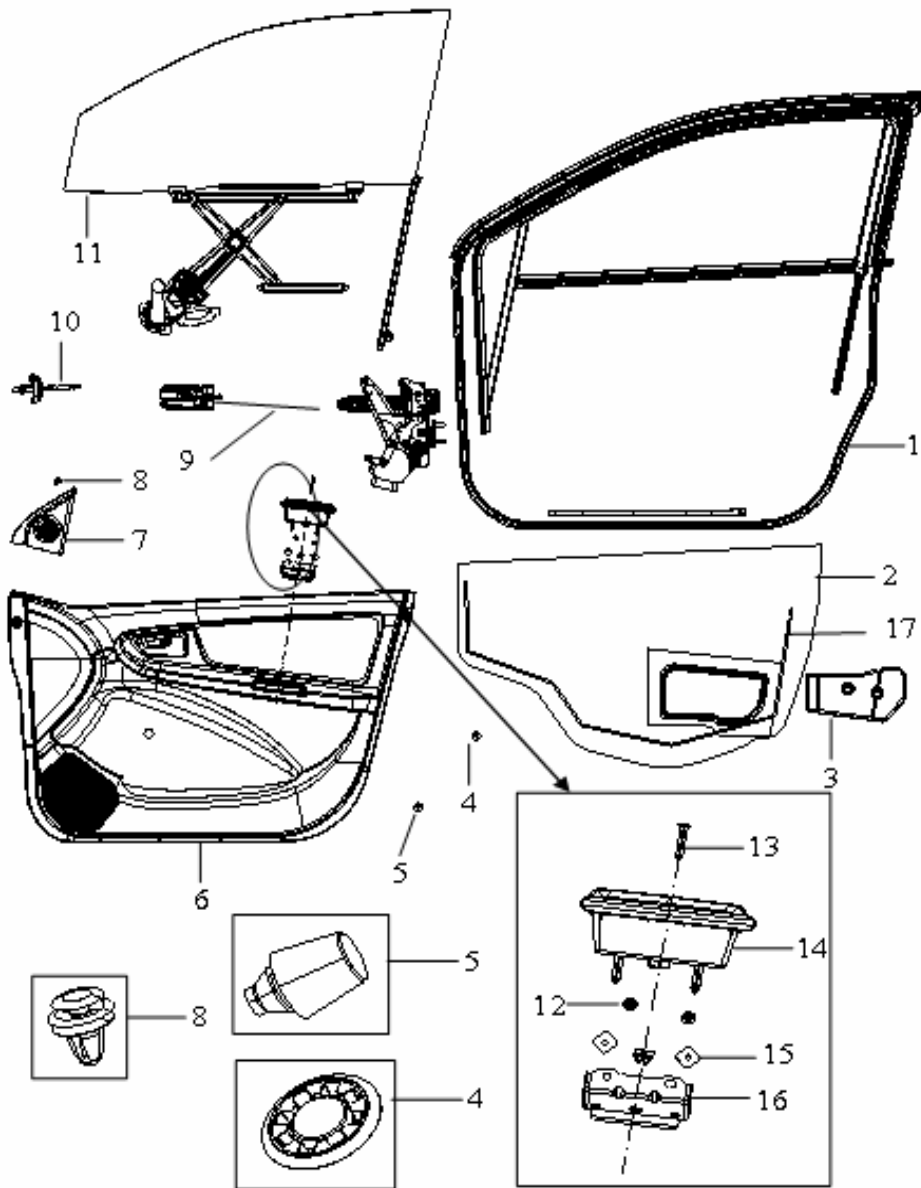

8200 RF DOOR INTERIOR TRIM PLATE ASSY.


	NO.	PART NO.	DES.	QTY	REMARK
	1		RF INTERIOR TRIM BOARD SOUND INSULATOR	1	
	2	1018005138	RF DOOR INTERIOR TRIM BOARD SUB-ASSY.	1	ELECTRIC
		1058005138	RF DOOR INTERIOR TRIM BOARD SUB-ASSY.	1	LEATHER
		1018005790	RF DOOR INTERIOR TRIM BOARD SUB-ASSY.	1	MANUAL
	3	JQ694D63Y653	"J" TYPE CLIP	2	
4	JQ690E82	"D" TYPE CLIP	7		
5		RF INTERIOR TRIM BOARD SOUND INSULATOR	1		

8210 RF DOOR LOCK & HANDLE

	NO.	PART NO.	DES.	QTY	REMARK
	1	1018005294	RIGHT DOOR INTERIOR UNLOCKING HANDLE ASSY.	1	
	2	JQ398M85	THROUGH HOLE INSERT PLASTIC NUT	1	
	3		"C" TYPE CROSS SLOTTED HEAD SELF-TAPPING SCREW	1	
	4	1058005290	RF DOOR LOCK ASSY.(W/O LOCK ACTUATOR)	1	
		1018005290	RF DOOR LOCK ASSY.	1	
	5		INNER HEXAGON FLOWER HEAD SCREW	3	
	6		CROSS SLOTTED HEAD SCREW & PLAIN WASHER ASSY.	2	
	7		"C" TYPE CROSS SLOTTED HEAD SELF-TAPPING SCREW	1	
	8	1018004995	DOOR EXTERIOR UNLOCKING HANDLE HOLE COVER	1	
	9	1018005040-01	DOOR EXTERIOR UNLOCKING HANDLE ASSY.	1	
	10	1018005040	RF DOOR EXTERIOR UNLOCKING HANDLE MOUNTING BRACKET ASSY.	1	
	11		RF DOOR LOCK CYLINDER ASSY.	1	
	12	1018005043	LOCK STRIKER	1	
	13		INNER HEXAGON FLOWER HEAD SCREW	2	
	14	1018005283	DOOR EXTERIOR HANDLE FRONT LINER	1	
	15	1018005284	DOOR EXTERIOR HANDLE REAR LINER	1	
	16	1018003958	RF DOOR LOCKING CABLE ASSY.	1	
	17		FRONT DOOR INTERIOR UNLOCKING CABLE ASSY.	1	
18		CABLE CLIP	1		
	1018006215	RF DOOR LOCK ACTUATOR ASSY.	1		

8220 LR DOOR INTERIOR TRIM & ACCESSORY

NO.	PART NO.	DES.	QTY	REMARK
1	1018005663	LR DOOR GLASS REGULATOR	1	ELECTRIC
	1018005424	LR DOOR GLASS REGULATOR	1	MANUAL
2		LR DOOR LOCK & HANDLE	1	
3	1018005666	REAR DOOR CHECK	1	
4		LR DOOR INTERIOR TRIM BOARD ASSY.	1	
5		CHILDREN LOCK BOOT	1	
6	1018004704	REAR DOOR WATER-PROOF FILM	1	
7	1018005479	LR DOOR WEATHERSTRIP	1	
8		CROSS SLOTTED HEXAGON HEAD SELF-TAPPING SCREW	2	
9		CROSS SLOTTED HEAD SELF-TAPPING SCREW	1	
10	1018005629	DOOR INTERIOR TRIM HANDLE	1	
11	JQ398M85	THROUGH HOLE INSERT PLASTIC NUT	2	
12		INTERIOR HANDLE MOUNTING BRACKET	1	
13		BUTYLE TAPE	1	

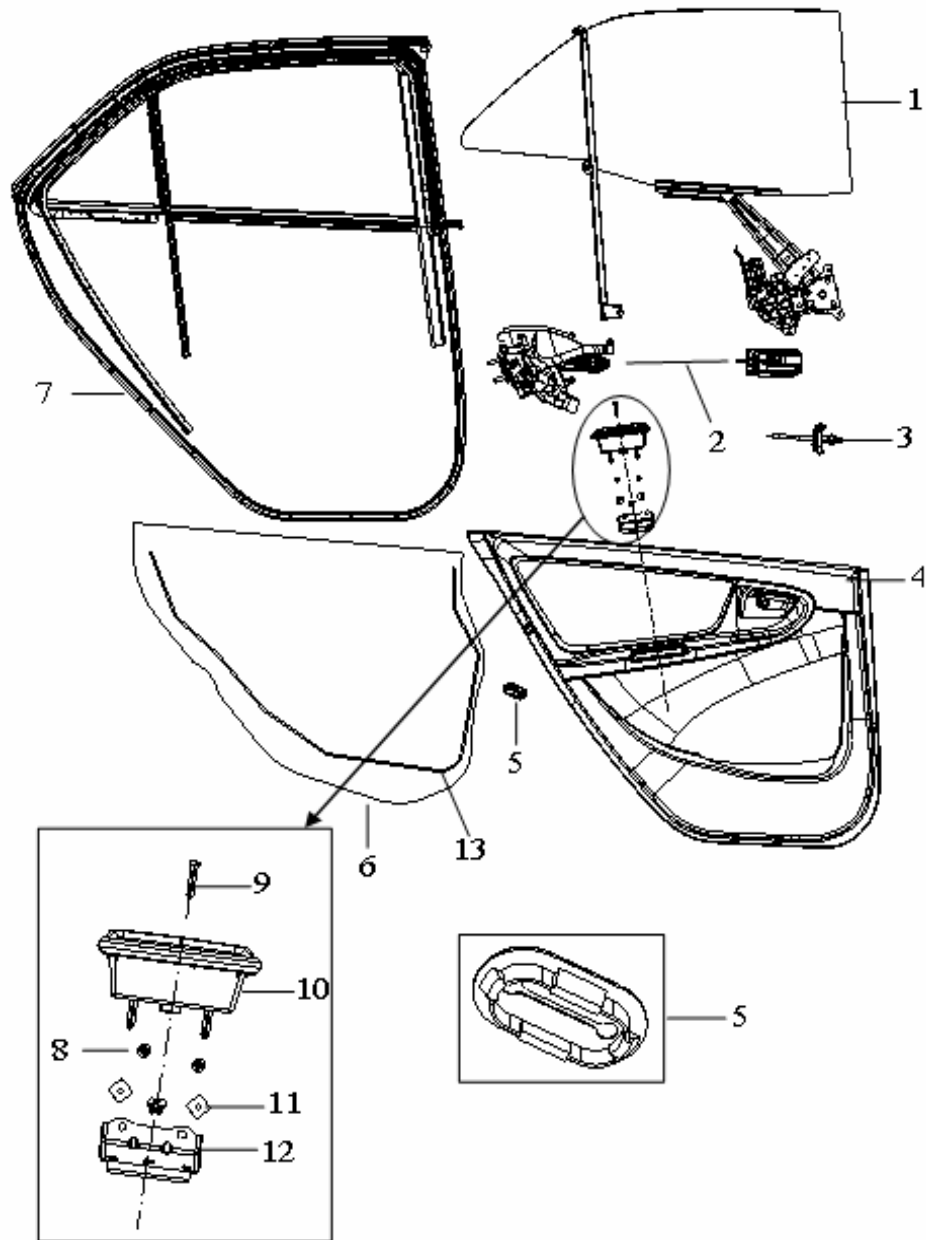

8230 LR DOOR INTERIOR TRIM PLATE ASSY.

	NO.	PART NO.	DES.	QTY	REMARK
	1	1018005145	LR DOOR INTERIOR TRIM PLATE SUB-ASSY.	1	ELECTRIC
		1058005145	LR DOOR INTERIOR TRIM PLATE SUB-ASSY.	1	LEATHER
		1018005795	LR DOOR INTERIOR TRIM PLATE SUB-ASSY.	1	MANUAL
	2	JQ690E82	"D" TYPE CLIP	6	
	3		LR DOOR SOUND INSULATOR (525×230×10)	1	
4		LR DOOR SOUND INSULATOR (600×500×10)	1		
5	JQ694D63Y653	"J" TYPE CLIP	1		

8240 LR DOOR LOCK & HANDLE

	NO.	PART NO.	DES.	QTY	REMARK
	1	1018005293	LEFT DOOR INTERIOR UNLOCKING HANDLE ASSY.	1	
	2	JQ398M85	THROUGH HOLE INSERT PLASTIC NUT	1	
	3		"C" TYPE CROSS SLOTTED HEAD SELF-TAPPING SCREW	1	
	4	1058005291	RL DOOR LOCK ASSY.(W/O LOCK ACTUATOR)	1	
		1018005291	RL DOOR LOCK ASSY.	1	
	5		INNER HEXAGON FLOWER COUNTERSUNK SCREW	3	
	6		CROSS SLOTTED HEAD SCREW & PLAIN WASHER ASSY.	1	
	7		"C" TYPE CROSS SLOTTED HEAD SELF-TAPPING SCREW	1	
	8	1018004769	REAR DOOR EXTERIOR UNLOCKING HANDLE POLE COVER	1	
	9	1018005041-01	LR DOOR EXTERIOR HANDLE ASSY.	1	
	10	1018005041	REAR DOOR EXTERIOR UNLOCKING HANDLE MOUNTING BRACKET ASSY.	1	
	11	1018005043	LOCK STRIKER	1	
	12		INNER HEXAGON FLOWER COUNTERSUNK SCREW	2	
	13	1018005283	DOOR EXTERIOR HANDLE FRONT LINER	1	
	14	1018005284	DOOR EXTERIOR HANDLE REARLINER	1	
	15	1018003957	REAR DOOR INTERIOR UNLOCKING CABLE ASSY.	1	
	16	1018003729	LR DOOR LOCKING CABLE ASSY.	1	
17		CABLE CLIP	1		
	1018008854	LR DOOR LOCK ACTUATOR ASSY.			

8250 RR DOOR INTERIOR TRIM & ACCESSORY

	NO.	PART NO.	DES.	QTY	REMARK
	1	1018005480	RR DOOR WEATHERSTRIP	1	
	2	1018004704	REAR DOOR WATERPROOF FILM	1	
	3		CHILDREN LOCK BOOT	1	
	4		RR DOOR INTERIOR TIM BOARD ASSY.	1	
	5	1018005666	REAR DOOR CHECK	1	
	6		RR DOOR LOCK & HANDLE	1	
	7	1018005662	RR DOOR GLASS REGULATOR	1	ELECTRIC
		1018005425	RR DOOR GLASS REGULATOR	1	MANUAL
	8		CROSS SLOTTED HEAD SELF-TAPPING SCREW	1	
	9	1018005629	DOOR INTERIOR TRIM HANDLE	1	
		1018005294	RIGHT DOOR INTERIOR HANDLE	1	
	10		CROSS SLOTTED HEXAGON HEAD SELF-TAPPING SCREW	2	
	11		INTERIOR HANDLE MOUNTING BRACKET	1	
12	JQ398M85	THROUGH HOLE INSERT PLASTIC NUT	3		
13		BUTYL TAPE	1		

8260 RR DOOR INTERIOR TRIM BOARD SUB-ASSY.

	NO.	PART NO.	DES.	QTY	REMARK
	1	1018005146	RR DOOR INTERIOR TRIM BOARD SUB-ASSY.	1	ELECTRIC
		1058005146	RR DOOR INTERIOR TRIM BOARD SUB-ASSY.	1	LEATHER
		1018005796	RR DOOR INTERIOR TRIM BOARD SUB-ASSY.	1	MANUAL
	2	JQ694D63Y653	"J" TYPE CLIP	1	
	3	JQ690E82	"D" TYPE CLIP	6	
4		RR DOOR SOUND INSULATOR(525×230×10)	1		
5		RR DOOR SOUND INSULATOR(600×500×10)	1		

8270 RR DOOR LOCK & HANDLE

	NO.	PART NO.	DES.	QTY	REMARK
	1	1018005294	RIGHT DOOR INTERIOR UNLOCKING HANDLE ASSY.	1	
	2	JQ398M85	THROUGH HOLE INSERT PLASTIC NUT	1	
	3		"C" TYPE CROSS SLOTTED HEAD SELF-TAPPING SCREW	1	
	4	1058005292	RR DOOOR LOCK ASSY.(W/O LOCK ACTUATOR)	1	
		1018005292	RR DOOOR LOCK ASSY.		
	5		INNER HEXAGON FLOWER COUNTERSUNK SCREW	3	
	6		CROSS SLOTTED HEAD SCREW & PLAIN WASHER ASSY.	1	
	7		"C" TYPE CROSS SLOTTED HEAD SELF-TAPPING SCREW	1	
	8	1018004769	REAR DOOR EXTERIOR UNLOCKING HANDLE POLE COVER	1	
	9	1018005042-01	RR DOOR EXTERIOR HANDLE ASSY.	1	
	10	1018005042	REAR DOOR EXTERIOR UNLOCKING HANDLE MOUNTING BRACKET ASSY.	1	
	11	1018005043	LOCK STRIKER	1	
	12		INNER HEXAGON FLOWER COUNTERSUNK SCREW	2	
	13	1018005283	DOOR EXTERIOR HANDLE FRONT LINER	1	
	14	1018005284	DOOR EXTERIOR HANDLE REARLINER	1	
	15	1018003957	REAR DOOR INTERIOR UNLOCKING CABLE ASSY.	1	
	16	1018003959	RR DOOR LOCKING CABLE ASSY.	1	
17		CABLE CLIP	1		
	1018008855	RR DOOR LOCK ACTUATOR ASSY.	1		

8280 FRONT DOOR WEATHERSTRIP

	NO.	PART NO.	DES.	QTY	REMARK
	1	1018004788	LF DOORFRAME WEATHERSTRIP	1	
	2	1018004789	RF DOORFRAME WEATHERSTRIP	1	
	3	1018005477	LF DOOR WEATHERSTRIP	1	
	4	1018005478	RF DOOR WEATHERSTRIP	1	
	5	1058005005	LF DOOR GLASS GUIDE RAIL	1	
	6	1058005006	RF DOOR GLASS GUIDE RAIL	1	
	7		DOOR WEATHERSTRIP CLIP A	2	
	8		DOOR WEATHERSTRIP CLIP B	2	
	9	1018005633	LF DOOR INTERIOR TRIM LOWER SEAL	1	
	10	1018005644	RF DOOR INTERIOR TRIM LOWER SEAL	1	
	11	1018004790	LF DOOR GLASS EXTERIOR WEATHERSTRIP	1	
	12	1018004791	RF DOOR GLASS EXTERIOR WEATHERSTRIP	1	
	13	1018005634	LF DOOR GLASS INTERIOR WEATHERSTRIP	1	
		1018006174	LF DOOR GLASS INTERIOR WEATHERSTRIP	1	MK08
14	1018005645	RF DOOR GLASS INTERIOR WEATHERSTRIP	1		
	1018006175	RF DOOR GLASS INTERIOR WEATHERSTRIP	1	MK08	

8290 REAR DOOR WEATHERSTRIP

	NO.	PART NO.	DES.	QTY	REMARK
	1	1018004764	LR DOORFRAME WEATHERSTRIP	1	
	2	1018004765	RR DOORFRAME WEATHERSTRIP	1	
	3	1018004700	LR DOOR QUARTER GLASS WEATHERSTRIP	1	
	4	1018004701	RR DOOR QUARTER GLASS WEATHERSTRIP	1	
	5	1018005479	LR DOOR WEATHERSTRIP	1	
	6	1018005480	RR DOOR WEATHERSTRIP	1	
	7	1018005583	LR DOOR GLASS GUIDE RAIL	1	
	8	1018005570	RR DOOR GLASS GUIDE RAIL	1	
	9		DOOR WEATHERSTRIP CLIP A	6	
	10		DOOR WEATHERSTRIP CLIP B	2	
	11	1018005686	LR DOOR GLASS INTERIOR WEATHERSTRIP	1	
	12	1018005678	RR DOOR GLASS INTERIOR WEATHERSTRIP	1	
	13	1018004766	LR DOOR GLASS EXTERIOR WEATHERSTRIP	1	
	14	1018004767	RR DOOR GLASS EXTERIOR WEATHERSTRIP	1	

8300 FRONT DOOR GLASS REGULATOR

	NO.	PART NO.	DES.	QTY	REMARK
	1	1018005661	LF DOOR GLASS REGULATOR ASSY.	1	ELECTRIC
		1018005418	LF DOOR GLASS REGULATOR ASSY.	1	MANUAL
	2	1018005660	RF DOOR GLASS REGULATOR ASSY.	1	ELECTRIC
		1018005419	RF DOOR GLASS REGULATOR ASSY.	1	MANUAL
	3		HEXAGON FLANGE BOLT	6	
	4	1018005432	REGULATOR HANDLE	1	
	5	1018005433	PLASTIC GASKET	1	
	6		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	1	
	7	1012001129	LF DOOR GLASS REAR GUIDE RAIL ASSY.	1	
	8	1012001579	RF DOOR GLASS REAR GUIDE RAIL ASSY.	1	
	9	1058005001	LF DOOR GLASS ASSY.	1	
		1058005003	LF DOOR GLASS ASSY.(GREEN/HEAT INSULATOR)	1	
10	1058005002	RF DOOR GLASS ASSY.	1		
	1058005004	RF DOOR GLASS ASSY.(GREEN/HEAT INSULATOR)	1		
11	1018005129	FRT DOOR GLASS RUBBER STRIP	1		
12	1018005128	FRT DOOR GLASS LOWER BRACKET	1		

8310 REAR DOOR GLASS REGULATOR

	NO.	PART NO.	DES.	QTY	REMARK
	1	1018005663	LR DOOR GLASS REGULATOR ASSY.	1	ELECTRIC
		1018005424	LR DOOR GLASS REGULATOR ASSY.	1	MANUAL
	2	1018005662	RR DOOR GLASS REGULATOR ASSY.	1	ELECTRIC
		1018005425	RR DOOR GLASS REGULATOR ASSY.	1	MANUAL
	3		HEXAGON FLANGE BOLT	4	
	4	1018005432	REGULATOR HANDLE	1	
	5	1018005433	PLASTIC GASKET	1	
	6		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	1	
	7	1018005592	LR DOOR GLASS BAFFLE PLATE ASSY.	1	
	8	1018005579	RR DOOR GLASS BAFFLE PLATE ASSY.	1	
	9		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	1	
	10		CROSS SLOTTED HEAD SCREW	1	
	11	1018005225	LR DOOR GLASS BAFFLE PLATE END CAP	1	
	12	1018005226	RR DOOR GLASS BAFFLE PLATE END CAP	1	
	13	1018005586	LR DOOR QUARTER GLASS	1	
		1018004774	LR DOOR QUARTER GLASS(GREEN/HEAT INSULATING)	1	
	14	1018005573	RR DOOR QUARTER GLASS	1	
		1018004775	RR DOOR QUARTER GLASS(GREEN/HEAT INSULATING)	1	
15	1018005130	LR DOOR GLASS ASSY.	1		
	1018005131	LR DOOR GLASS ASSY.(GREEN/HEAT INSULATING)	1		
16	1018005132	RR DOOR GLASS ASSY.	1		
	1018005133	RR DOOR GLASS ASSY.(GREEN/HEAT INSULATING)	1		
17	1018005135	REAR DOOR GLASS RUBBER STRIP	1		
18	1018005299	LR DOOR GLASS LOWER BRACKET ASSY.	1		
	1018005303	RR DOOR GLASS LOWER BRACKET ASSY.	1		


8320 FRONT SEAT

	NO.	PART NO.	DES.	QTY	REMARK
	1	1018005650	LF SEAT ASSY.	1	
		1018004745	LF SEAT ASSY.	1	LEATHER
		1018006182	LF SEAT ASSY.(ELECTRIC HEAT)	1	RUSSIA
		1018011019	LF SEAT ASSY.(ELECTRIC HEAT/LEATHER)	1	RUSSIA
		1018005651	RF SEAT ASSY.	1	
		1018004746	RF SEAT ASSY.	1	LEATHER
		1058005651	RF SEAT ASSY.(ELECTRIC HEAT)	1	RUSSIA
		1018011279	RF SEAT ASSY.(ELECTRIC HEAT/LEATHER)	1	RUSSIA
	2		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	4	
	3		LF SEAT LEFT MOUNTING BRACKET TRIM COVER	1	
		RF SEAT LEFT MOUNTING BRACKET TRIM COVER	1		
4		LF SEAT RIGHT MOUNTING BRACKET TRIM COVER	1		
		RF SEAT RIGHT MOUNTING BRACKET TRIM COVER	1		
5	1018005837	TRIM COVER MOUNTING CLIP	1		


8330 REAR SEAT

	NO.	PART NO.	DES.	QTY	REMARK
	1	1018004726	LR SEAT BACK ASSY.	1	
		1018004727	LR SEAT BACK ASSY.	1	LEATHER
	2	1018004694	RR SEAT BACK ASSY.	1	
		1018004693	RR SEAT BACK ASSY.	1	LEATHER
		1018016553	REAR SEAT BACK LOCKING KNOB	1	
	3	1018004655	REAR SEAT HINGE	2	
	4		HEXAGON FLANGE BOLT	4	
	5		REAR SEAT HINGE MOUNTING BOLT & WASHER	2	
	6		REAR SEAT CUSHION CENTER BRACKET	1	
	7		HEXAGON FLANGE BOLT	1	
	8	1018004685	REAR SEAT BACK CENTER HINGE	1	
9		HEXAGON FLANGE BOLT	2		
10	1018004728	REAR SEAT CUSHION ASSY.	1		
	1018004729	REAR SEAT CUSHION ASSY.	1	LEATHER	
11	1018004657	REAR SEAT CUSHION CLIP	2		

8340 FRONT BUMPER SUB-ASSY.

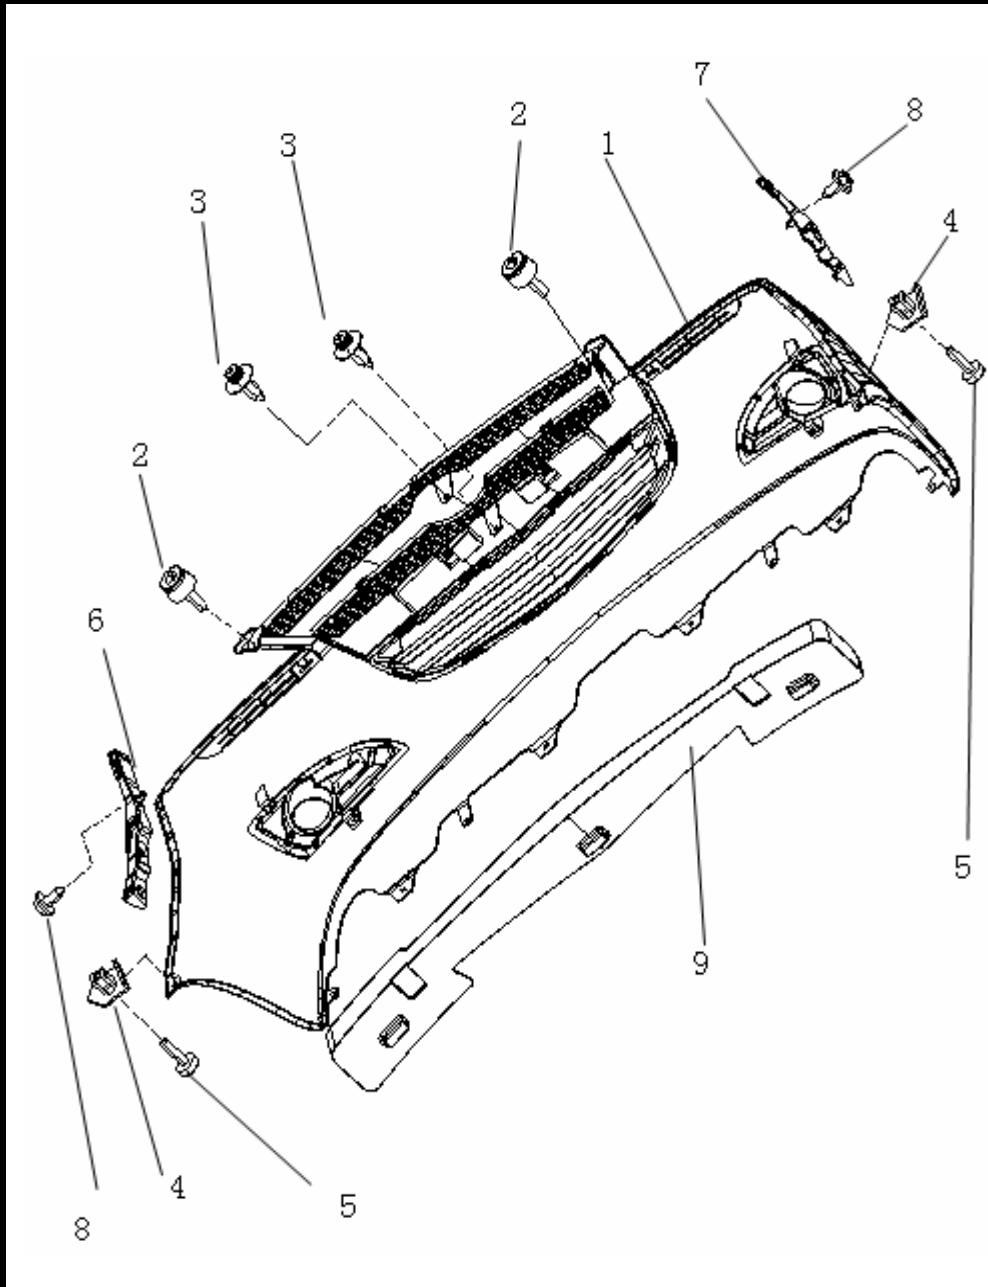	NO.	PART NO.	DES.	QTY	REMARK
	1		FRONT BUMPER SUB-ASSY.	1	
	2	1018005854	RADIATOR GRILL MOUNTING BOLT	2	
	3	JQ694E79	"J" TYPE CLIP	2	
	4	1018005092	FRONT BUMPER MOUNTING CLIP	2	
	5	JQ2226325	CROSS SLOTTED HEXAGON HEAD SELF-TAPPING SCREW	2	
	6	1018005962	FRONT BUMPER LEFT MOUNTING BRACKET	1	
	7	1018005963	FRONT BUMPER RIGHT MOUNTING BRACKET	1	
	8		CROSS SLOTTED HEXAGON HEAD SELF-TAPPING SCREW	2	
	9	1018002998	FRONT BUMPER CUSHION	1	
			1018003564	FRONT BUMPER UPPER TRIM BOARD	1
		1018011226	FRONT BUMPER UPPER TRIM BOARD	1	RADIATOR FORWARD


8350 FRONT BUMPER ASSY.

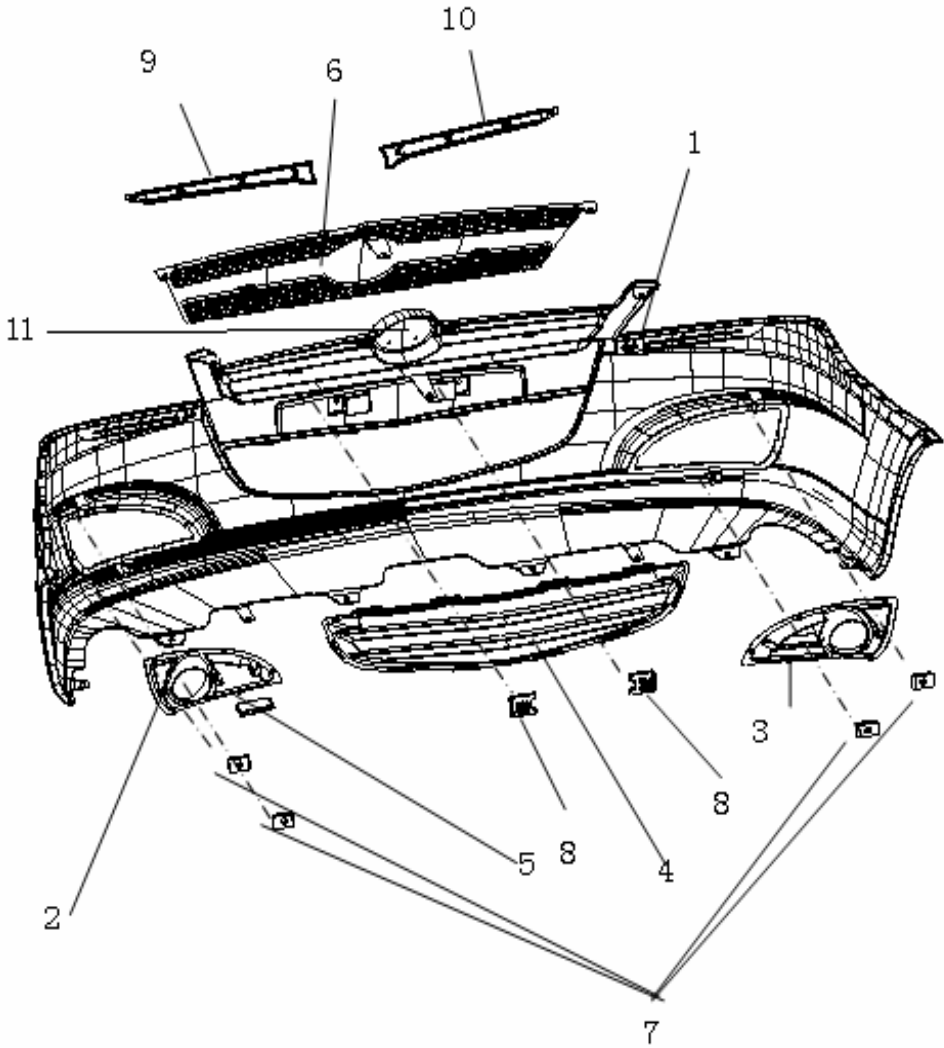	NO.	PART NO.	DES.	QTY	REMARK
	1	1018005851	FRONT BUMPER	1	
	2	1018002984	FRONT BUMPER BOTTOM LEFT COVER	1	
	3	1018002985	FRONT BUMPER BOTTOM RIGHT COVER	1	
	4	1018002986	FRONT BUMPER BOTTOM CENTER COVER	1	
	5	1018002987	FRONT TOW HOOK COVER PLATER	1	
	6	1018002988	RADIATOR GRILL	1	
	7		"B" TYPE LEAF SPRING NUT	4	
	8	JQ31306	"U" TYPE CLAMP NUT	2	
	9	1018002989	FRONT BUMPER LEFT MOLDING	1	
	10	1018002990	FRONT BUMPER RIGHT MOLDING	1	
	11	1039021011	FRONT BUMPER MOLDING MOUNTING BOLT "I" TYPE HEXGON NUT FRONT GEELY LOGO	6 6 1	

8360 REAR BUMPER ASSY.

	NO.	PART NO.	DES.	QTY	REMARK
	1	1018004861	RIGHT MOUNTING STOPPER	1	
	2	1018004863	REAR BUMPER RIGHT MOUNTING BRACKET	1	
	3		CROSS BIG ROUND HEAD TAPPING SCREW	1	
	4	1018004868	REAR BUMPER RIGHT MOUNTING BRACKET CLIP	1	
	5	1018005096	REAR BUMPER MOUNTING BRACKET CLIP SET	1	
	6		HEXAGON FLANGE NUT	1	
	7		HIGH-DENSITY SPONGY WASHER	4	
	8	1018004853	REAR BUMPER MOUNTING BOLT(2)	2	
	9	1018004860	REAR BUMPER MOUNTING BOLT(1) LONG	1	
	10	1018005772	REAR BUMPER	1	
		1018004865	REAR BUMPER(PARKING SENSOR)	6	
	11		U TYPE CLAMP NUT	6	
	12	1018004864	REAR BUMPER LEFT MOUNTING BRACKET	1	
	13	1018004862	LEFT MOUNTING STOPPER	1	
14	JQ694E79	J CLIP	8		
		101200421502	LR COMBINATION LAMP FIXING PLATE	1	
		101200467502	RR COMBINATION LAMP FIXING PLATE	1	
		280305500102	LICENSE MOUNTING BRACKET ASSY.	1	
		1018005353	LICENSE TRIM PLATE	1	

8370 FRONT WINDSHIELD

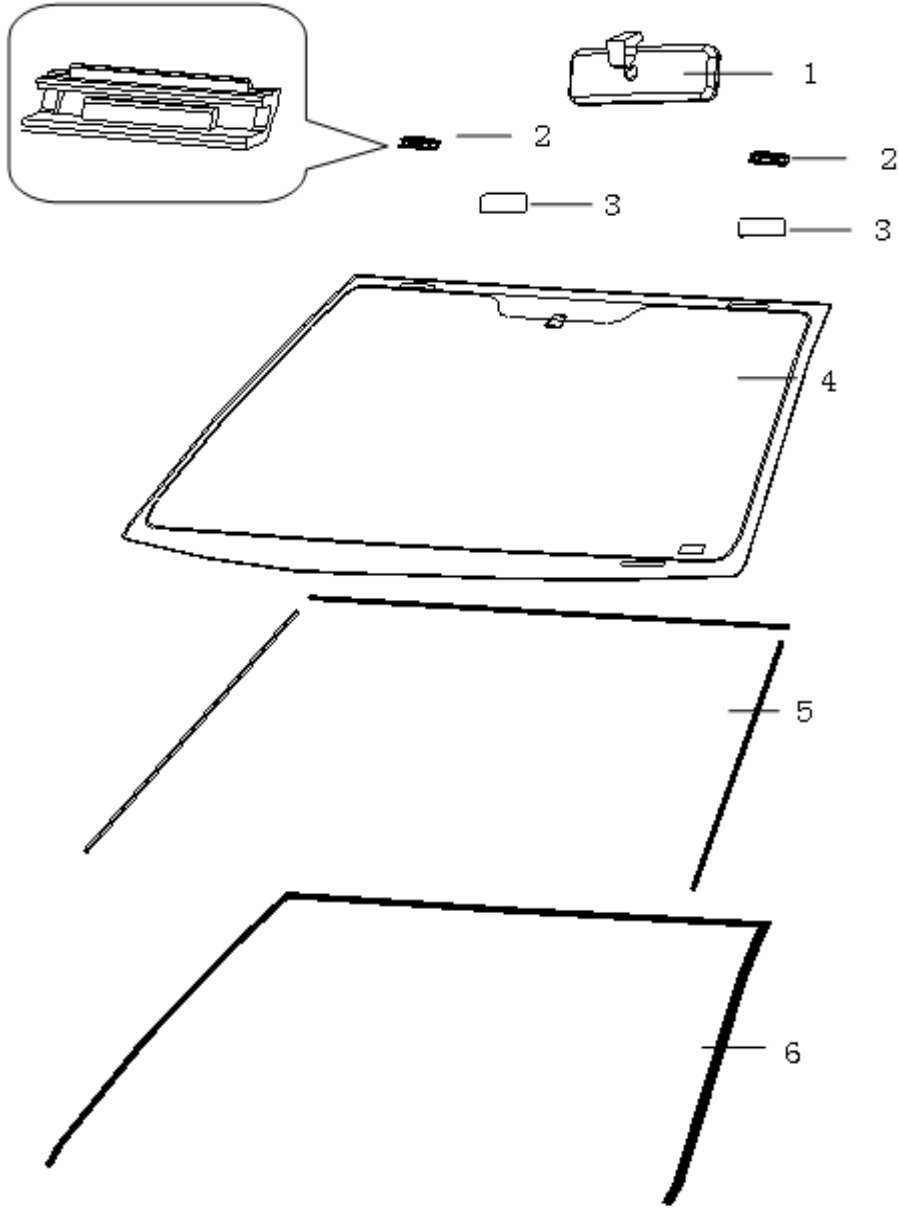

NO.	PART NO.	DES.	QTY	REMARK
1	1057002509	INTERIOR REARVIEW MIRROR ASSY.	1	
2		WINDSHIELD STOPPER (I)	2	
3		WINDSHIELD STOPPER (II)	2	
4	1018003951	FRONT WINDSHIELD SUB-ASSY.(ANTENNA)	1	
5	1018005751	FRONT WINDSHIELD RUBBER STRIP	1	
6	1018004759	FRONT WINDSHIELD WEATHERSTRIP	1	


8380 REAR WINDSHIELD

	NO.	PART NO.	DES.	QTY	REMARK
	1		WINDSHIELD STOPPER (I)	2	
	2		WINDSHIELD STOPPER (II)	2	
	3	1018004757	REAR WINDSHIELD	1	
		1018004755	REAR WINDSHIELD (DEFROST/HEATING WIRE)	1	
		1018004821	REAR WINDSHIELD (GREEN/DEFROST HEATING WIRE)	1	HEAT INSULATOR
4	1018004756	REAR WINDSHIELD WEATHERSTRIP	1		
5		WINDSHIELD CUSHION	2		

8390 REARVIEW MIRROR

	NO.	PART NO.	DES.	QTY	REMARK	
	1	1018004816-01	OUTSIDE REARVIEW MIRROR,RH (POWER)	1		
		1058004816	OUTSIDE REARVIEW MIRROR,RH (MANUAL)	1		
		1018004815-01	OUTSIDE REARVIEW MIRROR,LH (POWER)	1		
		1058004815	OUTSIDE REARVIEW MIRROR,LH (MANUAL)	1		
		2		FRONT DOOR OUTER MAT,RH	1	
				FRONT DOOR OUTER MAT,LH	1	
		3	1018004710	FRONT DOOR OUTER QUARTER TRIM,RH	1	
			1018004709	FRONT DOOR OUTER QUARTER TRIM,LH	1	
		4		"D" TYPE CLIP	1	
		5	JQ695B.1	"K" TYPE CLIP	1	
		6		HEXAGON FLANGE BOLT	3	
		7	1058000022	OUTSIDE REARVIEW MIRROR LENS,RH	1	
			1058000020	OUTSIDE REARVIEW MIRROR LENS,LH	1	

8400 EXTERIOR TRIMS & ACCESSORY

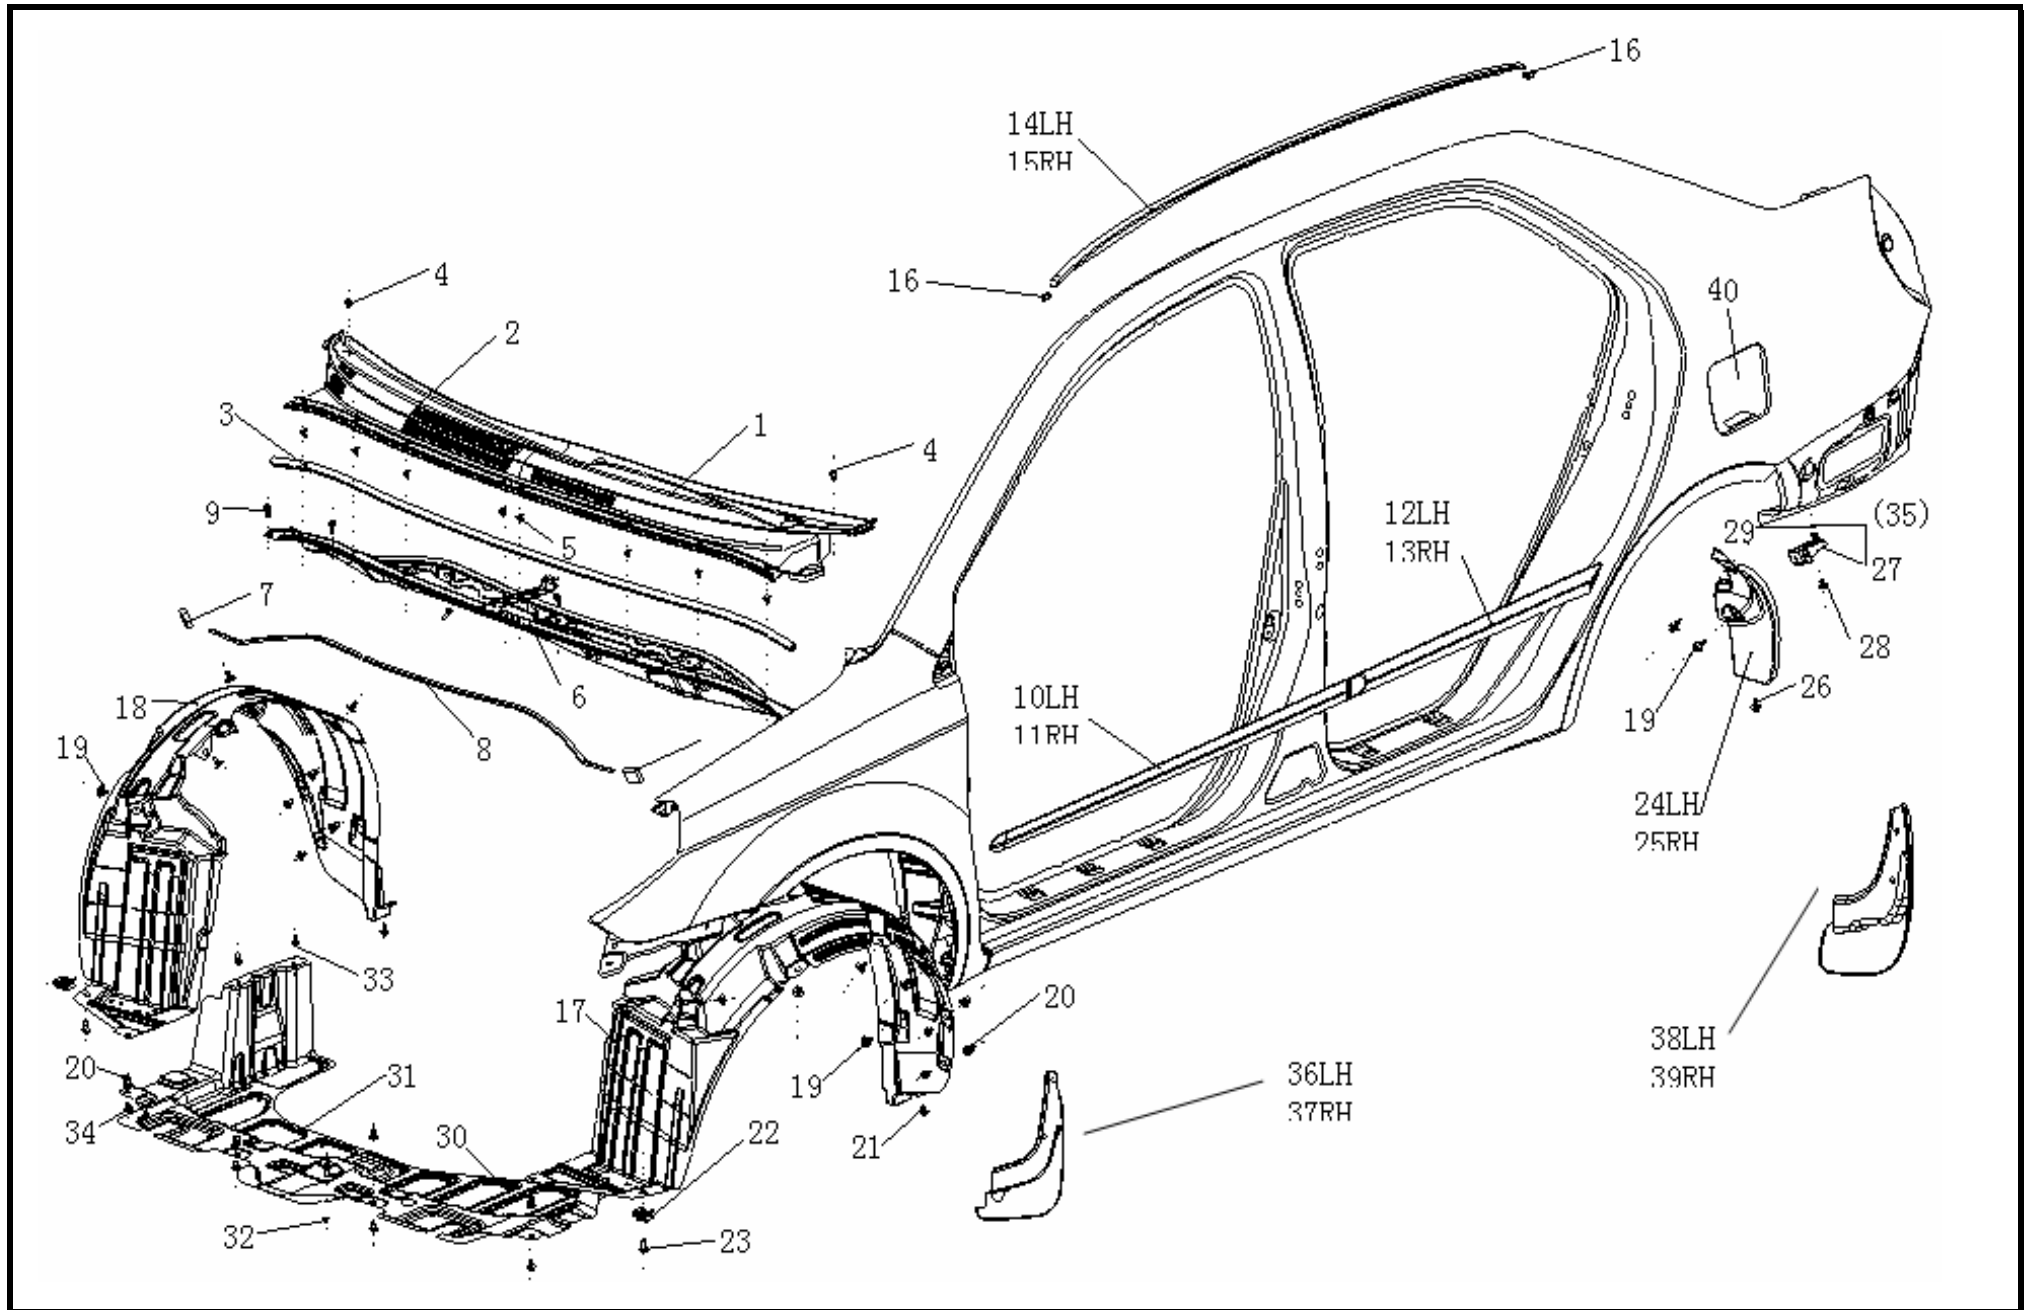

8400 EXTERIOR TRIMS & ACCESSORY

NO.	PART NO.	DES.	QTY	REMARK	NO.	PART NO.	DES.	QTY	REMARK
1	1018005831	LEFT VENT COVER PLATE ASSY.	1		24	1018004650	LEFT SPLASH GUARD -REAR BUMPER	1	
2	1018005836	RIGHT VENT COVER PLATE ASSY.	1		25	1018004651	RIGHT SPLASH GUARD-REAR BUMPER	1	
3	1018005842	SEAL- VENT COVER PLATE	1		26	JQ694E79	"J" TYPE CLIP	2	
4	1018005840	PLASTIC CLIP (ϕ 5.5)	2		27	1018004652	PLASTIC EXPANSION CLIP (ϕ 7)	4	
5	1018005841	FIXING CLIP-VENT COVER PLATE	8		28		BRACKET-SPLASH GUARD-REAR BUMPER	2	
6	1018005351	ENGINE COMPARTMENT WATER DEFLECTOR	1		29		CROSS RECESSED BOLT	2	
7		FRONT GUIDE BOARD SPONGE	2		30		RUBBER BRACKET-SPLASH GUARD-REAR BUMPER	2	
8		FRONT GUIDE BOARD SPONGE (LONG)	1		31	1018004682	LOWER SHIELD-ENGINE,LH	1	
9		CROSS RECESSED BOLT & WASHER	8		32	1018004683	LOWER SHIELD-ENGINE,RH	1	
10		FRT DOOR MOLDING, LH	1		33	Q32006	HEXAGON FLANGE BOLT	2	
11		FRT DOOR MOLDING, RH	1		34		CROSS RECESSED BOLT & WASHER	3	
12		REAR DOOR MOLDING, LH	1		35	JQ398M85	PLASTIC NUT	4	
13		REAR DOOR MOLDING, RH	1		36	JQ2235525	CROSS SLOTTED HEAD SELF-TAPPING SCREW & PLAIN WASHER ASSY.	4	
14	1018004819	ROOF TRIM MOLDING, LH	1		37	1018003590	BRACKET-REAR BUMPER SPLASH GUARD	1	
15	1018004820	ROOF TRIM MOLDING, RH	1		38	1018003801	FRONT SPLASH GUARD, LH	1	
16		ROOF TRIM MOLDING FIXING CLIP	4		39	1018003802	FRONT SPLASH GUARD, RH	1	
	1012000018	ROOF TRIM MOLDING END CAP	2	RUSSIA		1018003803	REAR SPLASH GUARD, LH	1	
17	1018005076	FRT FENDER LINER, LH	1			1018003804	REAR SPLASH GUARD, RH	1	
18	1018005077	FRT FENDER LINER, RH	1		40	1018004817	OIL FILLER CAP ASSY.	1	
19	1018004652	PLASTIC EXPANSION CLIP (ϕ 7)	14			101200088802	OIL FILLER CAP ASSY. (ELECTRO)	1	
20	JQ398M85	PLASTIC BOLT	6			1018005735	LR SIDE WALL LOWER TRIM PLATE	1	
21		CORSS RECESSED BOLT & WASHER	12			1018005765	RR SIDE WALL LOWER TRIM PLATE	1	
22	1018005861	"S" TYPE CLIP	2						
23	JQ2226325	CROSS SLOTTED HEAD SELF-TAPPING SCREW & PLAIN WASHER ASSY.	2						


8410 SUNROOF ASSY.

	NO.	PART NO.	DES.	QTY	REMARK
	1	1018005097	SUNROOF ASSY.	1	
	2	Q32006	HEXAGON FLANGE BOLT	10	
	3	1012003658	SUNROOF REINFORCEMENT FRONT BRACKET	2	
	4		HEXAGON FLANGE BOLT	8	
	5		SUNROOF CONNECTING PLATE	2	
	6	1012003659	SUNROOF REINFORCEMENT REAR BRACKET	2	
	7	1018005110	SUNROOF FRONT WATER PIPE	2	
	8		METAL SPRING HOOP	4	
	9	1018005695	SUNROOF REAR WATER PIPE	2	
	10		REAR WATER PIPE RUBBER BUSH	2	
	11	1018005496	SUNROOF DOME LIGHT BRACKET	1	
	12	1018005109	ROOF TRIM MOLDING	1	
	13	1018011403	SUNROOF GLASS	1	
	14	1017000991	SUNROOF CONTRLLER	1	
	15	1018011400	SUNROOF MOTOR	1	
	16	1012000018	ROOF MOLDING END CAP	1	
	1018011401	SUNROOF DEFLECTOR	1		
	1018011402	SUNROOF SUN VISOR	1		


8420 ENGINE HOOD INTERIOR TRIM & ACCESSORY

	NO.	PART NO.	DES.	QTY	REMARK
	1	1018005689	ENGINE HOOD INTERIOR SEAL	1	
	2		ENGINE HOOD INTERIOR SEAL FIAXING CLIP	6	
	3	JQ398N145	ENGINE HOOD SUPPORT BAR CLIP SEAT	1	
	4	1018005058	ENGINE HOOD SUPPORT BAR CLIP	1	
	5	1018004724	ENGINE HOOD SUPPORT BAR ASSY.	1	
	6		ENGINE HOOD SUPPORT BAR	1	
	7		ENGINE HOOD SUPPORT BAR BOOT	1	
	8	1018005018	ENGINE HOOD CUSHION	4	
	9		CABLE CLIP	1	
	10		PIPE CLIP	1	
	11	1018003564	FRONT BUMPER UPPER TRIM BOARD	1	
	12	JQ694D63Y653	"J" TYPE CLIP	3	
	1018004747	ENGINE HOOD CABLE ASSY.	1		

8430 SEAT REPAIR KIT

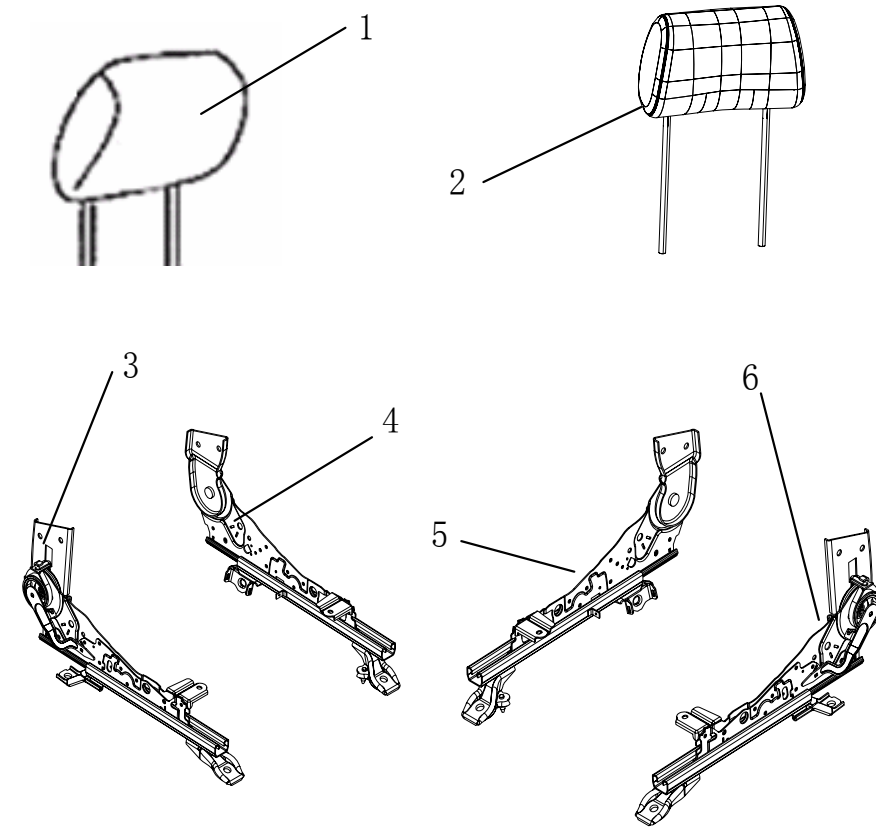	NO.	PART NO.	DES.	QTY	REMARK
	1	1018003844	SEAT REPAIR KIT	1	
			FRONT SEAT PILLOW	2	
			FRONT SEAT PILLOW(LEATHER)	2	
	2	1018003846	REAR SEAT PILLOW	2	
			REAR SEAT PILLOW(LEATHER)	2	
	3	1018003848-01	RF SEAT RIGHT ADJUSTER ASSY.	1	
4	1018003849-01	RF SEAT LEFT ADJUSTER ASSY.	1		
5	1018003850-01	LF SEAT RIGHT ADJUSTER ASSY.	1		
6	1018003851-01	LF SEAT LEFT ADJUSTER ASSY.	1		
		1018009123	HEIGHT ADJUSTER ASSY.	1	E-MARK


8440 KEY & LOCK CYLINDER REPAIR KIT

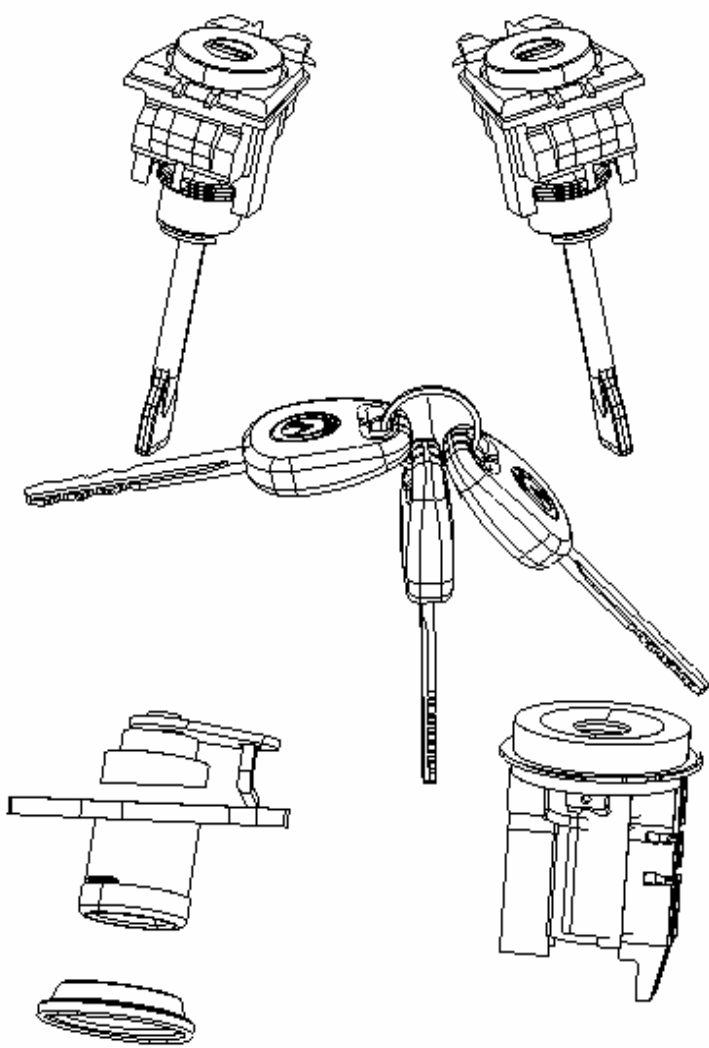	NO.	PART NO.	DES.	QTY	REMARK
		1018003964	KEY & LOCK CYLINDER REPAIR KIT	1	
		1018003964-02	KEY & LOCK CYLINDER REPAIR KIT	1	ANTI-THEFT
		1018010723	BLANK KEY	3	
		1018016321	BLANK KEY	3	ANTI-THEFT

CONTENT


1	PETROL ENGINE ASSY.	21	IGNITION CABLE ASSY.
2	PETROL ENGINE COMPONENTS	22	ECU & IGNITION COIL
3	CYLINDER BLOCK SUB-ASSY.	23	ALTERNATOR COMPONENTS
4	CYLINDER HEAD COVER COMPONENTS	24	STARTER
5	CYLINDER HEAD	25	FUEL PUMP ASSY.
6	CYLINDER BLOCK COMPONENTS	26	ENGINE MOUNTING
7	TIMING BELT COVER AND BELT PULLEYS	27	PHASE SENSOR AND BASE
8	PISTON CONNECTING ROD COMPONENTS	28	COLD AIR INTAKE BOX
9	CRANKSHAFT FLYWHEEL COMPONENT	29	CLUTCH ASSY.
10	CAMSHAFT		
11	VALVE		
12	TIMING BELT		
13	OIL PUMP ASSY.		
14	OIL STRAINER AND OIL PAN COMPONENTS		
15	THERMOSTAT ASSY.		
16	WATER PUMP ASSY.		
17	THROTTLE		
18	INTAKE MANIFOLD COMPONENTS		
19	EXHAUST MANIFOLD COMPONENTS		
20	FUEL INJECTOR		

1 PETROL ENGINE ASSY.

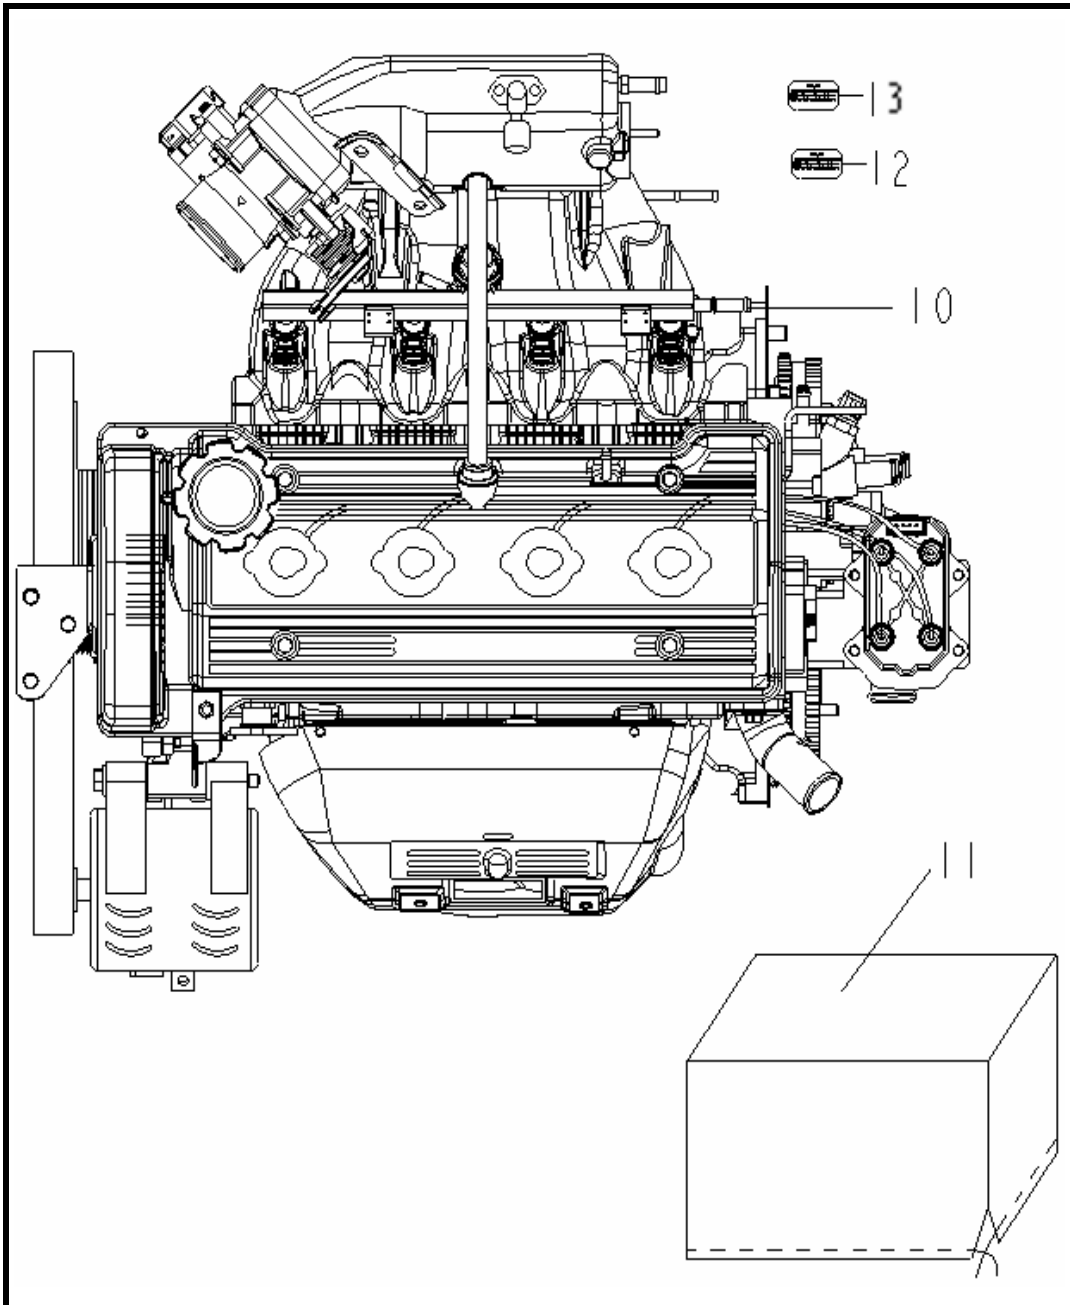


NO.		DES	QTY	REMARK
10		PETROL ENGINE ASSY.	1	
11		PETROL ENGINE FILM COVER (FOR TRANSPORTATION)	1	1.3L
12		PETROL ENGINE MAINTAINANCE PASTER	1	
13		PETROL ENGINE MAINTAINANCE PASTER	1	1.5L

2 PETROL ENGINE COMPONENTS

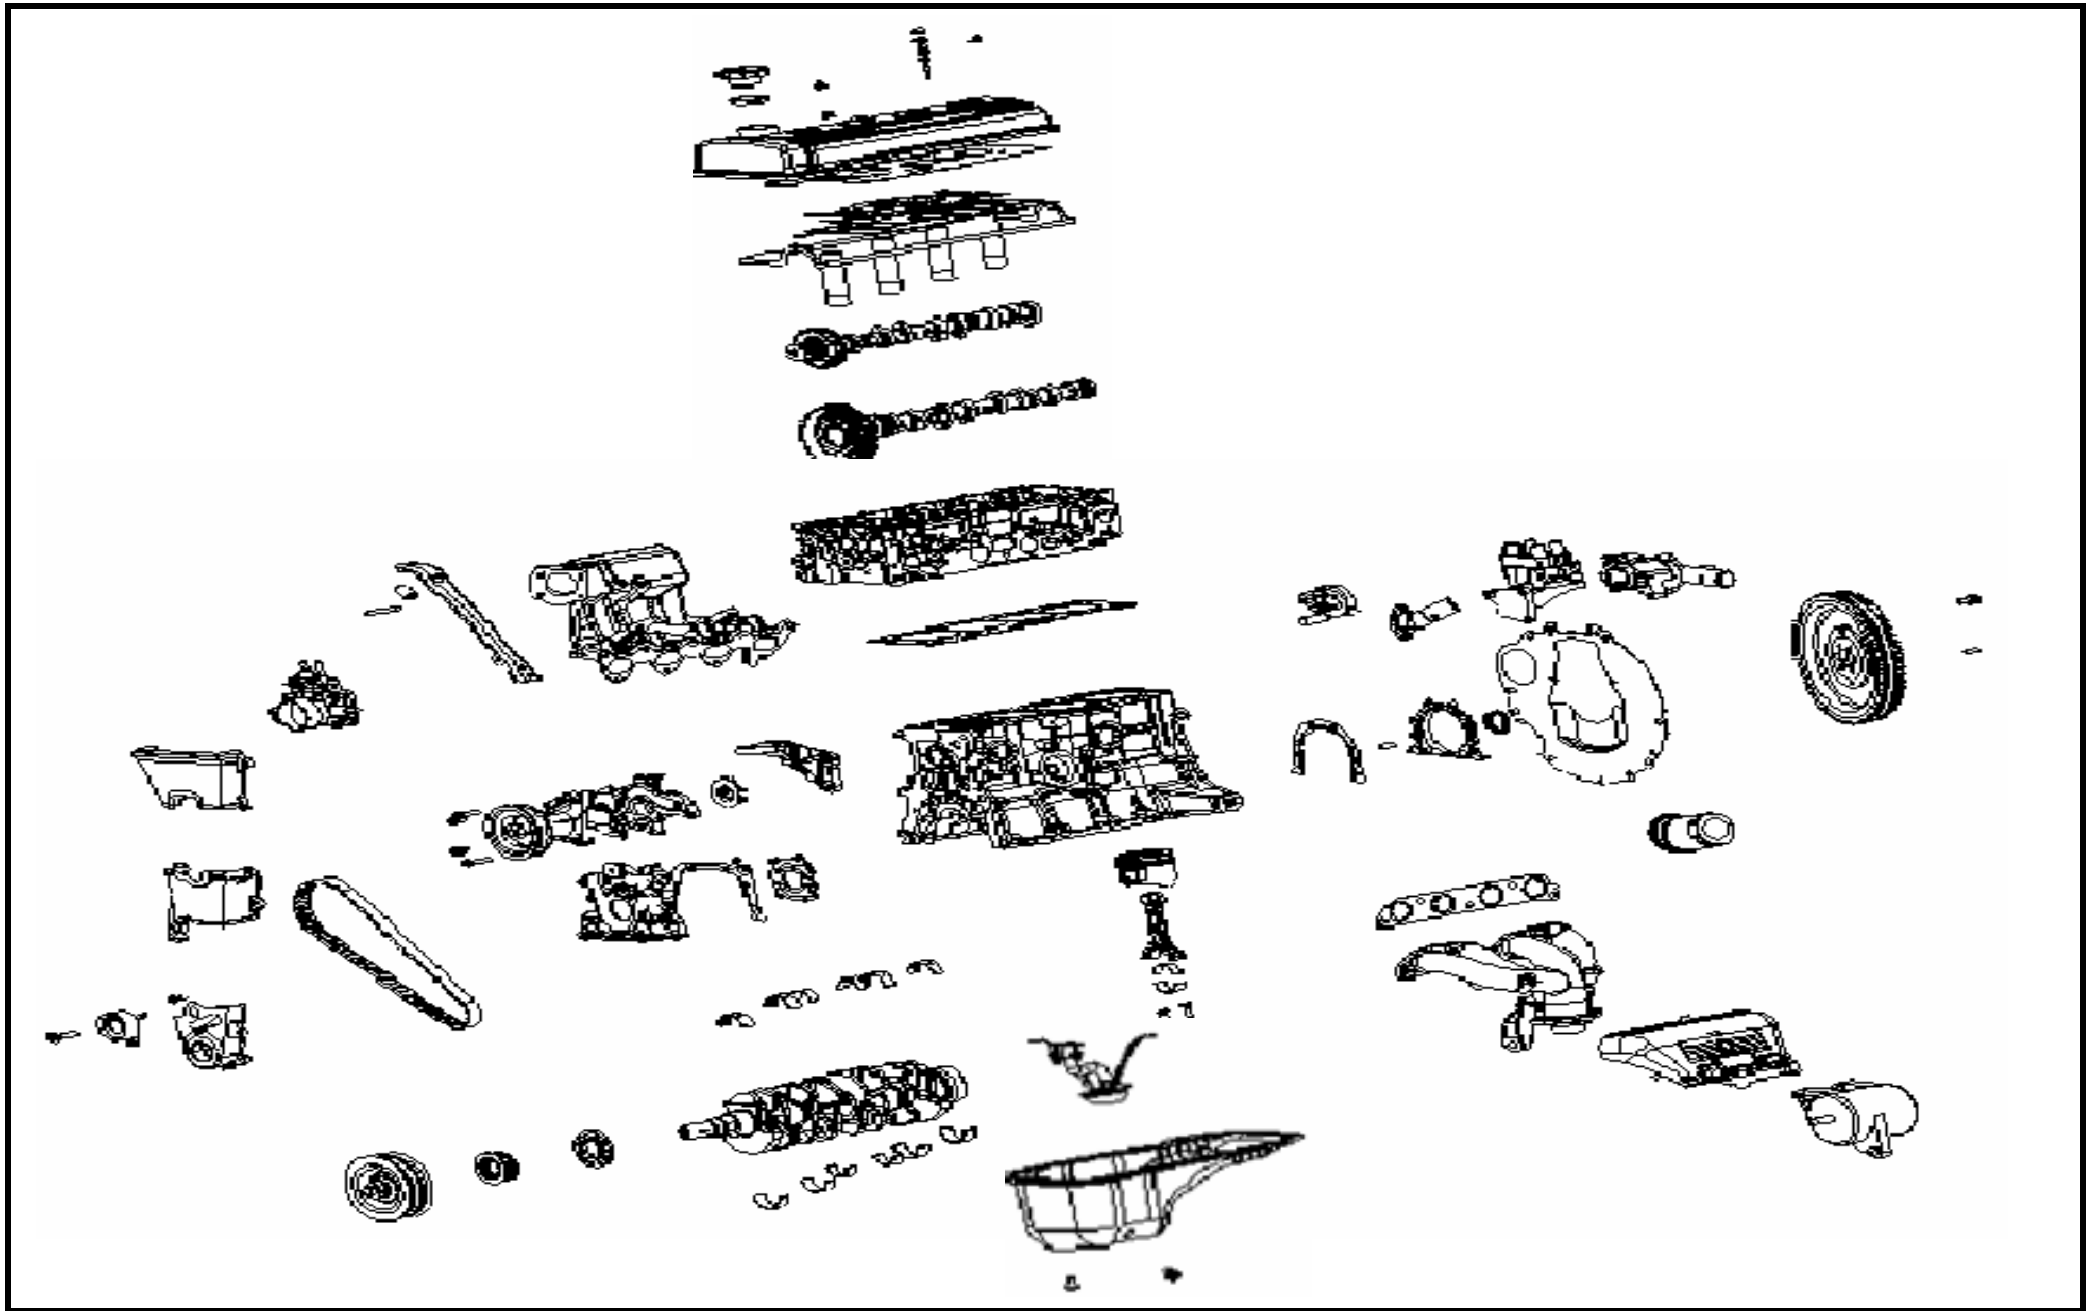


3 CYLINDER BLOCK SUB-ASSY.

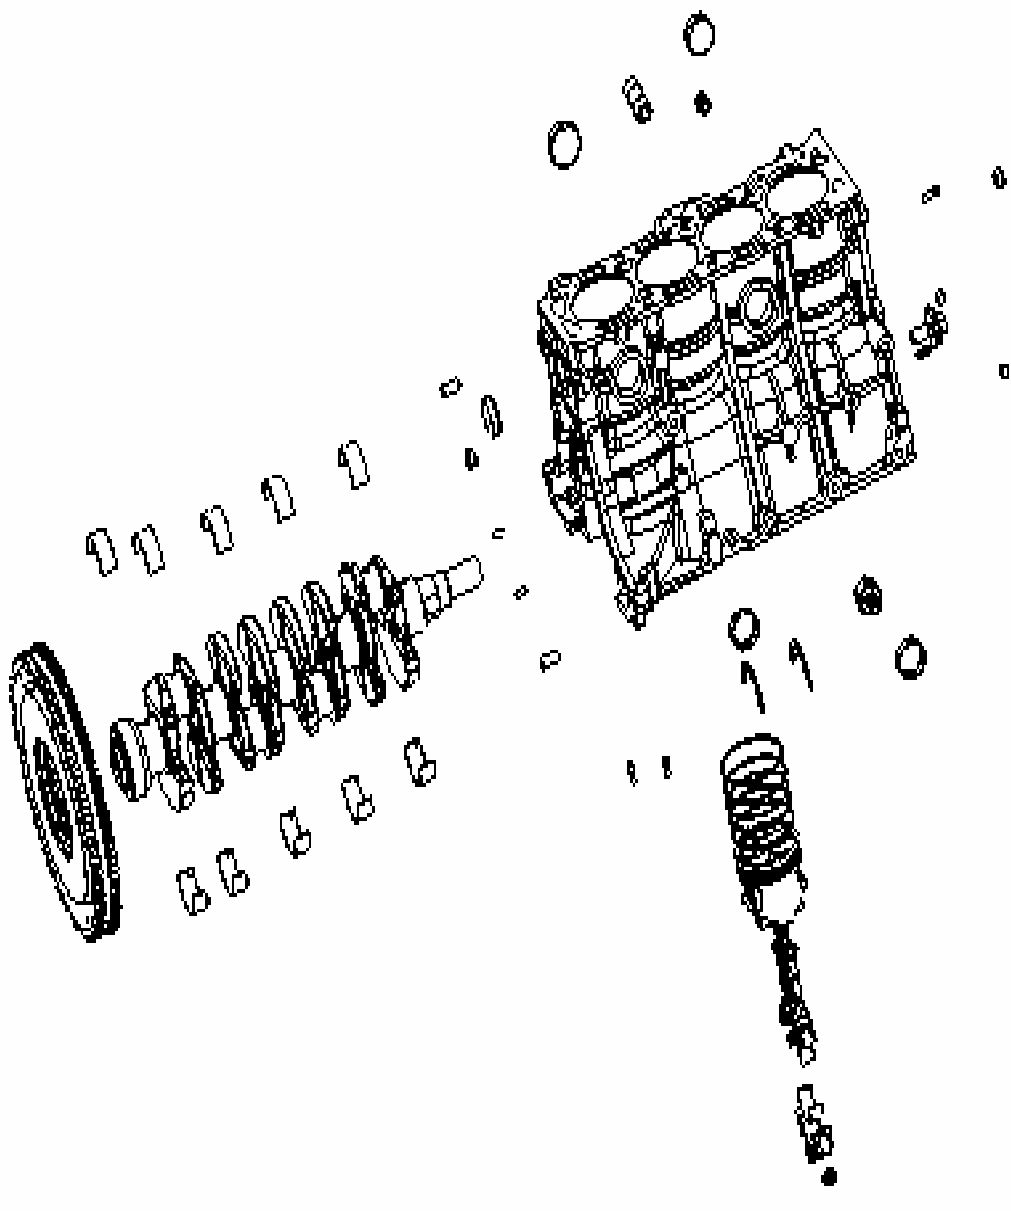	NO.	PART NO.	DES	QTY	REMARK
		E000010010	CYLINDER BLOCK SUB-ASSY.	1	1.3L
		E000010002	CYLINDER BLOCK SUB-ASSY.	1	1.5L
		1086001043	CYLINDER BLOCK SUB-ASSY.	1	1.6L

4 CYLINDER HEAD COVER COMPONENTS

	NO.	PART NO.	DES	QTY	REMARK
	10	E010400101	CYLINDER HEAD COVER	1	
	11	1106013110	CYLINDER HEAD COVER OIL BAFFLER GASKET	1	
	12	E010400301	OIL BAFFLER A	1	
	13	E010400401	OIL BAFFLER B	1	
	14	E010001501	CYLINDER HEAD COVER GASKET	1	
	15	1106013107	CYLINDER HEAD OIL SEAL ASSY.	4	
	16	1106013115	OIL CAP	1	
	17	E010402001	CONTROL VALVE	1	
	18	E010400501	VENTILATION HOSE JOINT	1	
	19		OIL CAP SEAL WASHER	1	
	20	E010401001	WIRE HARNESS BRACKET	1	
	21		WIRE HARNESS BRACKET FIXING BOLT M6x16	1	
	22	E010400901	SEAL SHEATH	1	
	23	1106013109	CYLINDER HEAD COVER COMPONENTS	1	
	24	1086000532	CYLINDER HEAD COVER NUT	4	
	25	E010401501	WASHER	4	
	26	2000000701	MR479Q PETROL ENGINE SCUTCHEON	1	
	27	1106010506	DOUBLE END STUD M6x83	4	
	28		COVER Φ 7x10 (FOR TRANSPORTATION)	1	
	29		MR479QA PETROL ENGINE SCUTCHEON	1	

5 CYLINDER HEAD

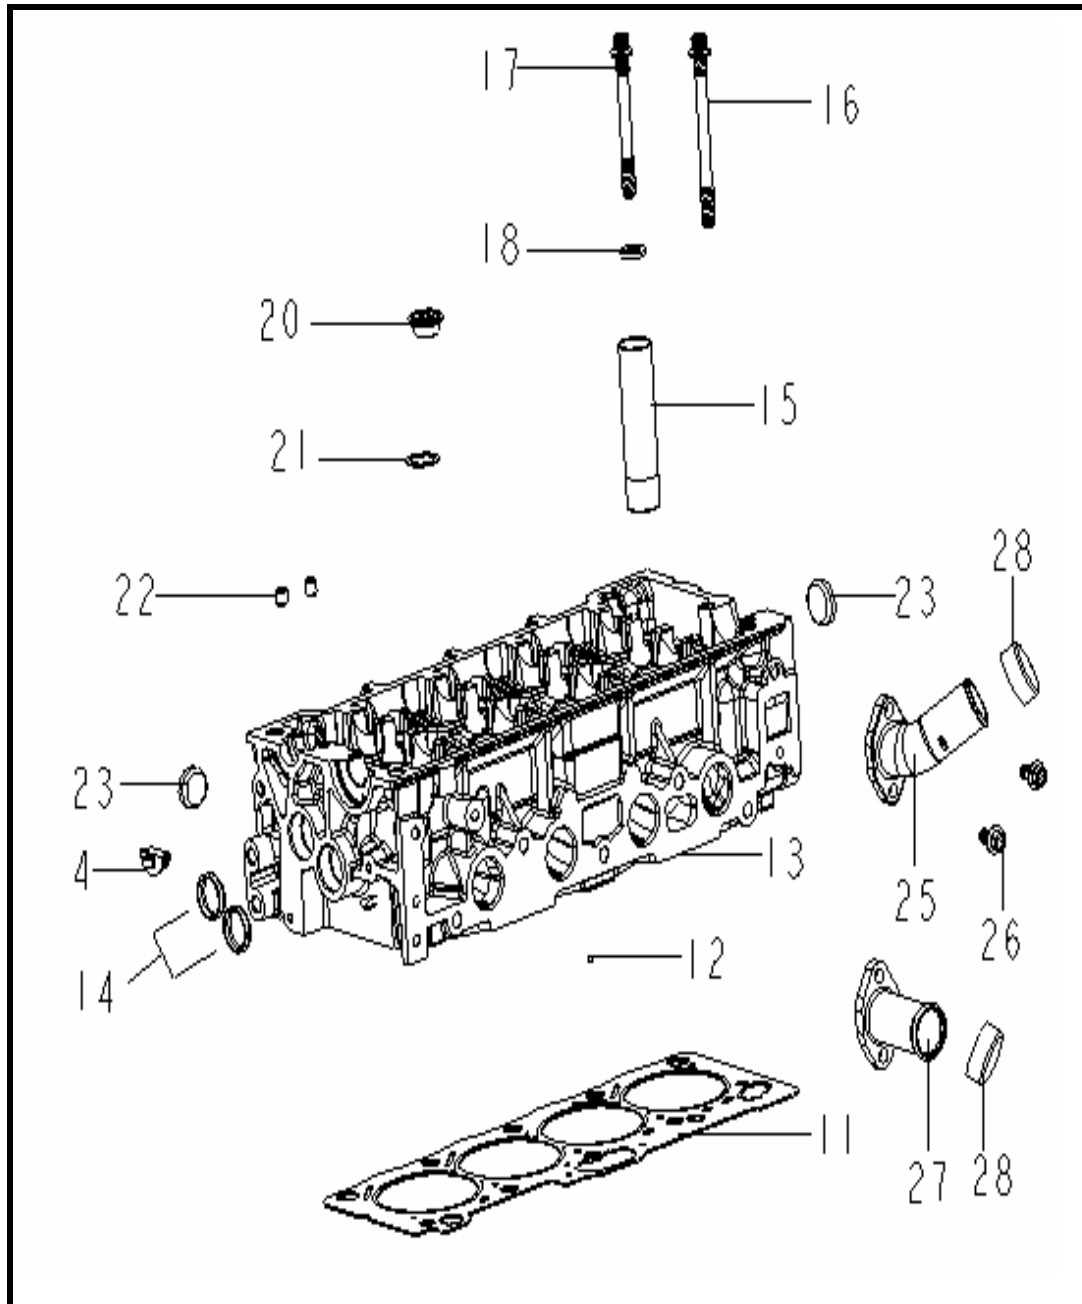	NO.	PART NO.	DES	QTY	REMARK
	11	E010001601	CYLINDER HEAD GASKET	1	1.3L/1.5L
		2100309021	CYLINDER HEAD GASKET	1	1.6L
	12		STEEL BALL	2	
	13	E010500105	CYLINDER HEAD	1	1.3L/1.5L
	14	E010500301	SEALING COVER B	2	
	15	E010500601	SPARK PLUG TUBE	4	
	16	E010500901-01	CYLINDER HEAD BOLT M10x1.25x108	5	
	17	E010500801-01	CYLINDER HEAD BOLT M10x1.25x90	5	
	18	E010501001	WASHER $\Phi 20.5 \times 3$	10	
	20		CYLINDER HEAD PLUG M20x1.5	3	
	21		CYLINDER HEAD PLUG WASHER	3	
	22		ALIGNING PIN BUSH	6	
	23	E010500201	SEALING COVER A	2	
	24	2010001801	SEMICIRCLE PLUG	1	
	25	E010001701	WATER OUTLET	1	
	26		WATER OUTLET FIXING BOLT	2	
	27		WATER OUTLET (FOR SHANGHAI MAPLE ONLY)	1	
	28		COVER $\Phi 32 \times 14$ (FOR TRANSPORTATION)	1	

6 CYLINDER BLOCK COMPONENTS

	NO.	PART NO.	DES	QTY	REMARK
	10	E020300104	CYLINDER BLOCK	1	1.3L/1.5L
		2100203121	CYLINDER BLOCK		1.6L
	11		MAIN BEARING CAP (1ST、 2ND、 4TH、 5TH)	4	
	12		MAIN BEARING (3RD)	1	
	13	E020300201	ALIGNING PIN Φ 11x8	2	
	14	E020300401	OIL GALLERY BOLT R3/8x10	2	
	15	E020300301	HANGING PIN Φ 6x22	1	
	16	1106013216	UPPER MAIN BEARING	5	
	17	1106013217	LOWER MAIN BEARING	5	
	18	E020301601	CRANKSHAFT UPPER THRUST WASHER	2	
	19	E020301701	CRANKSHAFT LOWER THRUST WASHER	2	
	20	1106010501	SEALING COVER Φ 40	1	
	21	1106010502	SEALING COVER Φ 35	4	
	22	E150040005	KNOCK SENSOR	1	
	23	E020300801	ALIGNING PIN Φ 13x12	2	
	24	E020300501	ALIGNING PIN Φ 10x22	2	
	25	E020300701	ALIGNING PIN Φ 6x14	2	
	26		HEXAGON SOCKET DOUBLE END SCREW CANNULA	1	
	27	1106013268	MASTER BEARING CAP BOLT M10x1.25x60	10	
	28	E020302101	DOUBLE END STUD M6x18	2	
	29		PREVAILING TORQUE TYPE HEXAGON NUT WITH FLANGE	2	M6
	30		CYLINDER BLOCK COMPONENTS	1	
	31		BOLT M8x12	1	
	32	E020301201	DRAIN PLUG R1/4x12	1	
	33	1106013221	OIL FILTER COMPONENTS	1	

6 CYLINDER BLOCK COMPONENTS

NO.	PART NO.	DES	QTY	REMARK	NO.	PART NO.	DES	QTY	REMARK
34	1106013220	OIL PRESSURE SWITCH	1						
35		SPEED SENSOR MOUNTING BRACKET ALIGNING PIN BUSH	2						
36	E020000201	SPEED SENSOR MOUNTING BRACKET	1						
37	E20110003	HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	3						
38	E150030005	ENGINE SPEED SENSOR	1	EURO II					
	2150030006	ENGINE SPEED SENSOR	1	EURO III					
	3170933320	ENGINE SPEED SENSOR	1	AT					
41	2000410104	ENGINE RIGHT MOUNTING BRACKET	1	CK-1					
	1086000442	ENGINE RIGHT MOUNTING BRACKET	1	MK					
	E000410101	ENGINE RIGHT MOUNTING BRACKET(OLD TYPE)	1						
42		BOLT	3						
43	E050000301	O RING 34.5x2.65	1						


7 TIMING BELT COVER & BELT PULLEYS

NO.	PART NO.	DES	QTY	REMARK
10	1106013231	CRANKSHAFT PULLEY	1	
11	E030100101	NO.1 TIMING BELTS COVER	1	
12	E030000301	TIMING BELT GUIDE	1	
13	E030000201	CRANKSHAFT TIMING PULLEY	1	
14	E030100201	NO.2 TIMING BELTS COVER	1	
15	E030100301	NO.3 TIMING BELTS COVER	1	
16		HEXAGON FLANGE BOLT-PRODUCT GRADE B	9	M6x20

8 PISTON CONNECTING ROD COMPONENTS

	NO.	PART NO.	DES	QTY	REMARK
	11		TOP COMPRESSION RING	4	
	12		SECOND COMPRESSION RING	4	
	13		OIL RING EXP&ER	4	
	14		OIL RING SIDE RAIL	8	
	15		OIL RING COMPONENTS	4	
	16	E020110010	PISTON RING COMPONENTS	4	1.3L/1.5L
	17	2100404021	PISTON RING COMPONENTS		1.6L
	17	E020100103-01	PISTON	4	1.3L
	26	E020100106	PISTON	4	1.5L
	26	2100401121	PISTON	4	1.6L
	18	1106013100	PISTON PIN	4	
	19		CONNECTING ROD BODY	4	
	20		CONNECTING ROD BOLT	8	
	21		CONNECTING ROD HEAD	4	
22		CONNECTING ROD NUT	8		
23	E020120501	CONNECTING ROD BEARINGS	8		
24	E020120005	CONNECTING ROD COMPONENTS	4		
25		PISTON CONNECTING ROD COMPONENTS	4		
27	MR479QA	PISTON CONNECTING ROD COMPONENTS	4		

9 CRANKSHAFT FLYWHEEL COMPONENT

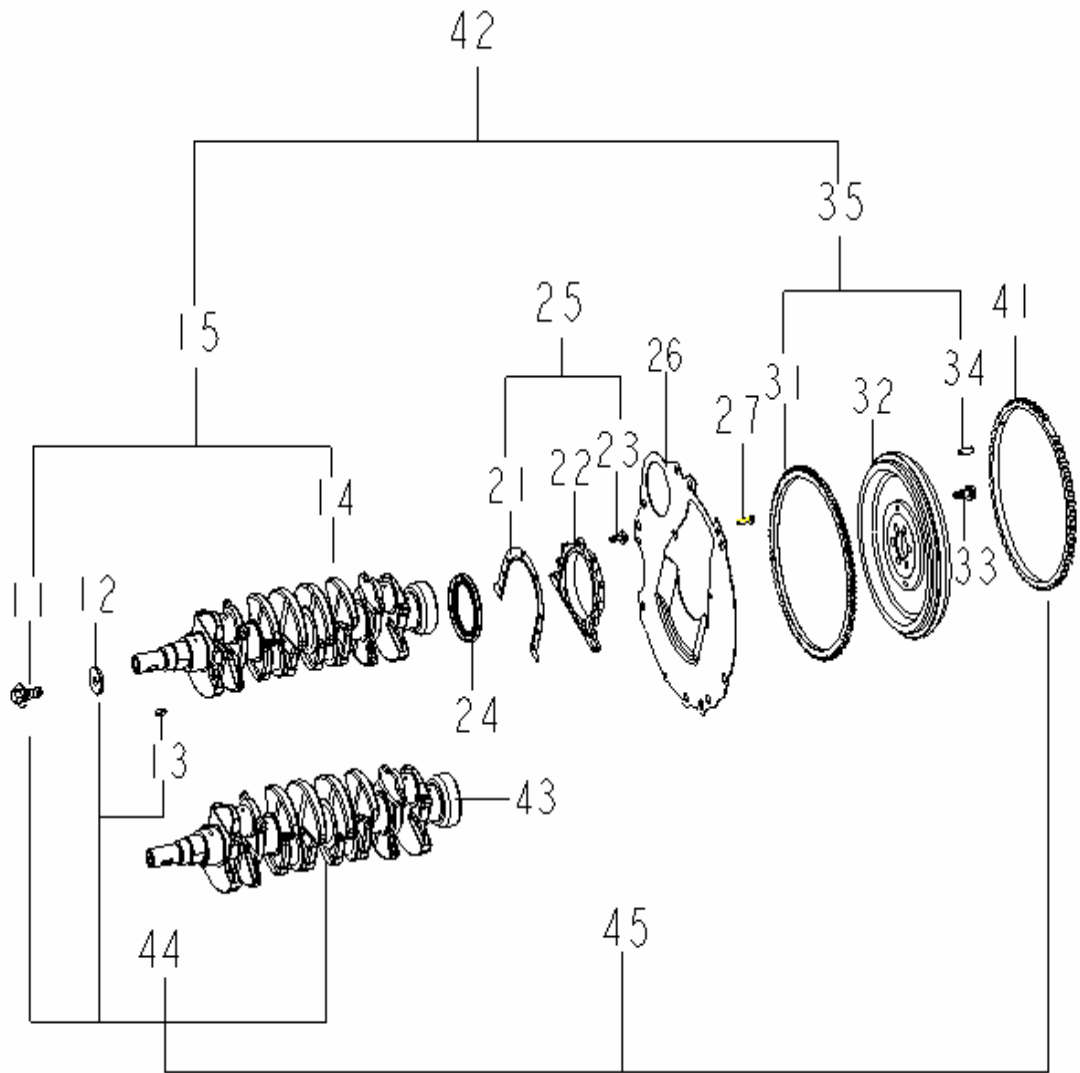


NO.	PART NO.	DES	QTY	REMARK
11	E020210301	CRANKSHAFT BELT PULLEY FIXING BOLT	1	
12		WASHER	1	
13	E020210201	SEMICIRCLE KEY	1	
14	E020210103	MR479Q CRANKSHAFT	1	
15		CRANKSHAFT COMPONENTS	1	
21	E020500201	REAR OIL SEAL RETAINER GASKET	1	
22	E020500005	CRANKSHAFT REAR OIL SEAL RETAINER	1	
23	E20103011	HEXAGON FLANGE BOLT-PRODUCT GRADE B	6	M6x16
24	1106013094	CRANKSHAFT REAR OIL SEAL ASSY.	1	
25		REAR OIL SEAL RETAINER COMPONENTS	1	
26	E020000101	CLUTCH HOUSING PLATE	1	
27		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	2	M6x13
31	1106013307	FLYWHEEL GEAR RING	1	1.3L/1.5L
32	1106013095	FLYWHEEL	1	1.3L
	1086000783	FLYWHEEL	1	1.5L
	1106018024	FLYWHEEL	1	1.6L
33	E020220501	FLYWHEEL FIXING BOLT M10x1.25x23	6	
34	E020220301	ALIGNING PIN Φ8x20	3	
35		FLYWHEEL COMPONENTS	1	
41		SENSOR PLATE	1	
42		CRANKSHAFT FLYWHEEL COMPONENTS	1	
43	E020210106	MR479QA & MR481QA CRANKSHAFT	1	
44		MR479QA CRANKSHAFT COMPONENTS	1	
45		MR479QA CRANKSHAFT FLYWHEEL COMPONENTS	1	

10 CAMSHAFT


	NO.	PART NO.	DES	QTY	REMARK	
	10	E010110101	INTAKE CAMSHAFT	1	1.3L/1.5L	
		2100603121	INTAKE CAMSHAFT	1	1.6L	
		1106018094	INTAKE CAMSHAFT(SPECIAL CHILE)	1	1.6L	
		12	E010110301	DRIVING GEAR	1	
		13	E010110501	SUB-GEAR	1	
		14	E010110401	CAMSHAFT GEAR SPRING	1	
		15	E010110701	WAVE WASHER	1	
		16	E010110801	SNAP RING	1	
		17	E010110601	DRIVING GEAR ALIGNING PIN $\Phi 5 \times 8$	1	
		18	E010110201	SUB-GEAR ALIGNING PIN $\Phi 5 \times 7$	1	
		19	E010120201	ALIGNING PIN $\Phi 5 \times 12$	1	
		20	E010000103	INTAKE CAMSHAFT BEARING CAP A	1	
		21		EXHAUST CAMSHAFT BEARING CAP A	1	
		22		EXHAUST CAMSHAFT BEARING CAP B	1	
		23	E010000203	CAMSHAFT BEARING CAP	8	
		25	E010002701	CAMSHAFT BEARING CAP BOLT	18	
		30	E010120101	EXHAUST CAMSHAFT	1	
			1106018095	EXHAUST CAMSHAFT(SPECIAL CHILE)	1	1.6L
		31	E010120301	TRANSMITTING GEAR	1	
		32	E030000101	CAMSHAFT TIMING BELT GUIDE	1	
		33	1106013187	EXHAUST CAMSHAFT OIL SEAL ASSY.	1	
		34		SNAP RING	1	
		36	E010110005	INTAKE CAMSHAFT COMPONENTS	1	
		37	E010120005	EXHAUST CAMSHAFT COMPONENTS	1	
		38	E030000801	CAMSHAFT TIMING BELT GUIDE FIXING BOLT	1	

11 VALVE

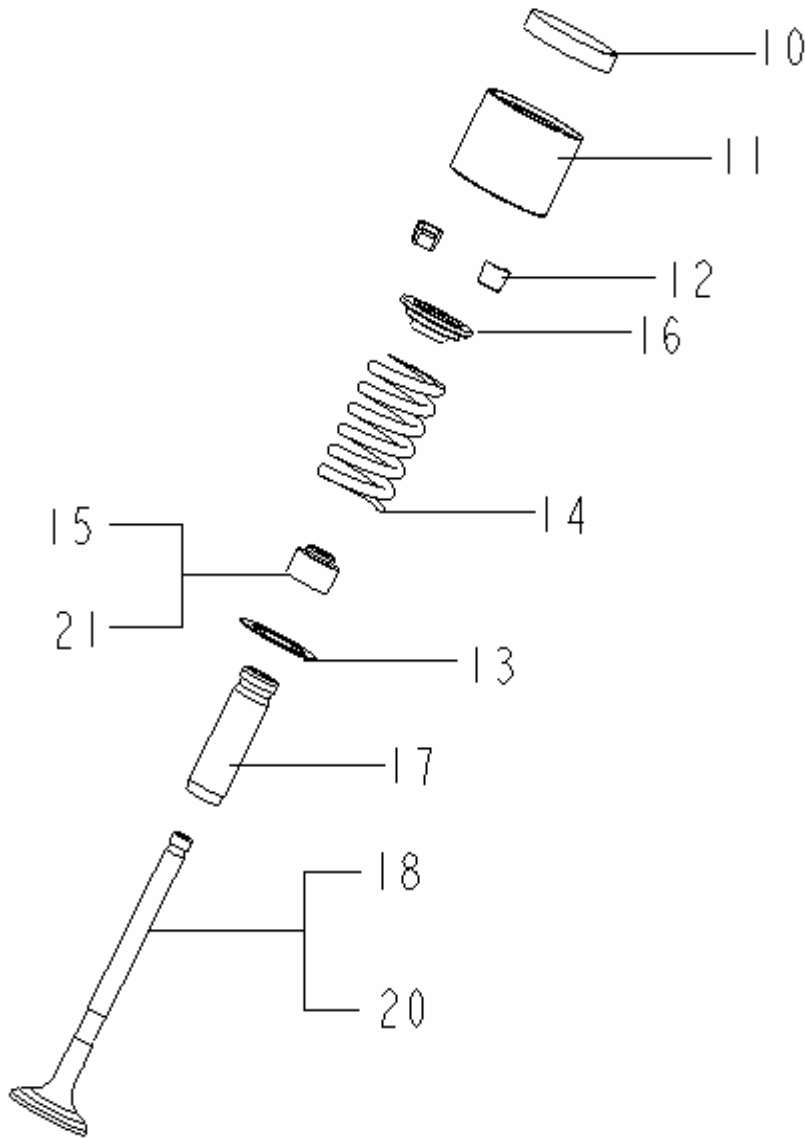


NO.	PART NO.	DES	QTY	REMARK
10	E010001201	SHIM	16	
11	1086001194	VALVE TAPPET	16	
12	1106018005	VALVE KEEPER	32	
13	E010000901	VALVE SPRING SEAT	16	
14	E010000801	VALVE SPRING	16	
15	1106013097	INTAKE OIL SEAL ASSY.	8	
16	1106018006	VALVE SPRING RETAINER	16	
17	E010500703	VALVE GUIDE	16	
18	E010000501	INTAKE VALVE	8	1.3L/1.5L
	2100701221	INTAKE VALVE	8	1.6L
20	E010000601	EXHAUST VALVE	8	1.3L/1.5L
	2100701321	EXHAUST VALVE	8	1.6L
21	1106013098	EXHAUST OIL SEAL ASSY.	8	

12 TIMING BELT

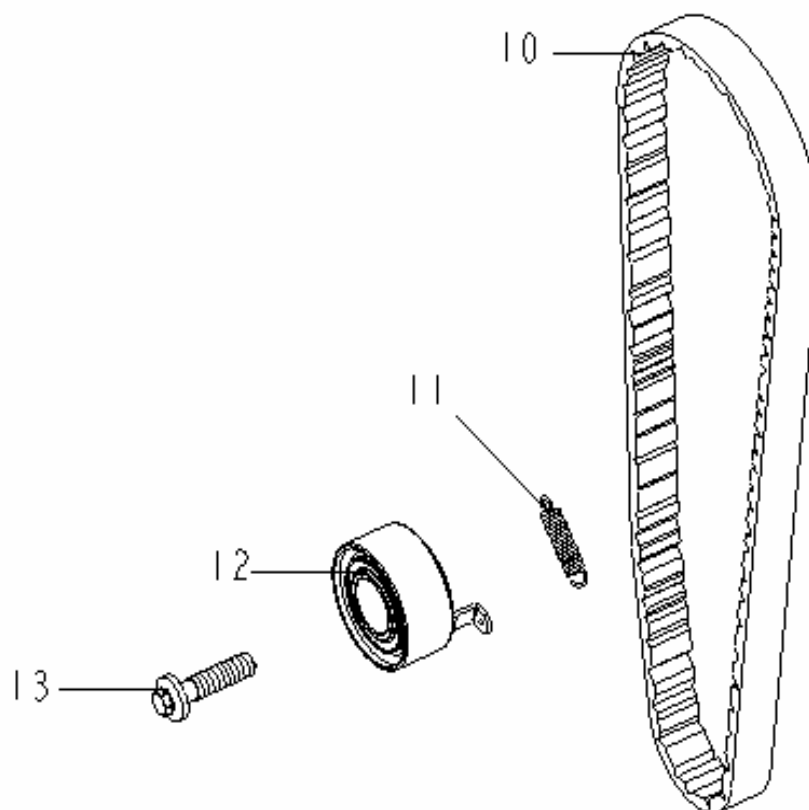	NO.	PART NO.	DES	QTY	REMARK
	10	E030000701	TIMING BELT	1	
	11	E030000501	TENSION SPRING	1	
	12	1106013230	BELT TENSIONER COMPONENTS	1	
	13	E030000901	TIMING BELT TENSIONER FIXING BOLT	1	M10x1.25x40

13 OIL PUMP ASSY.

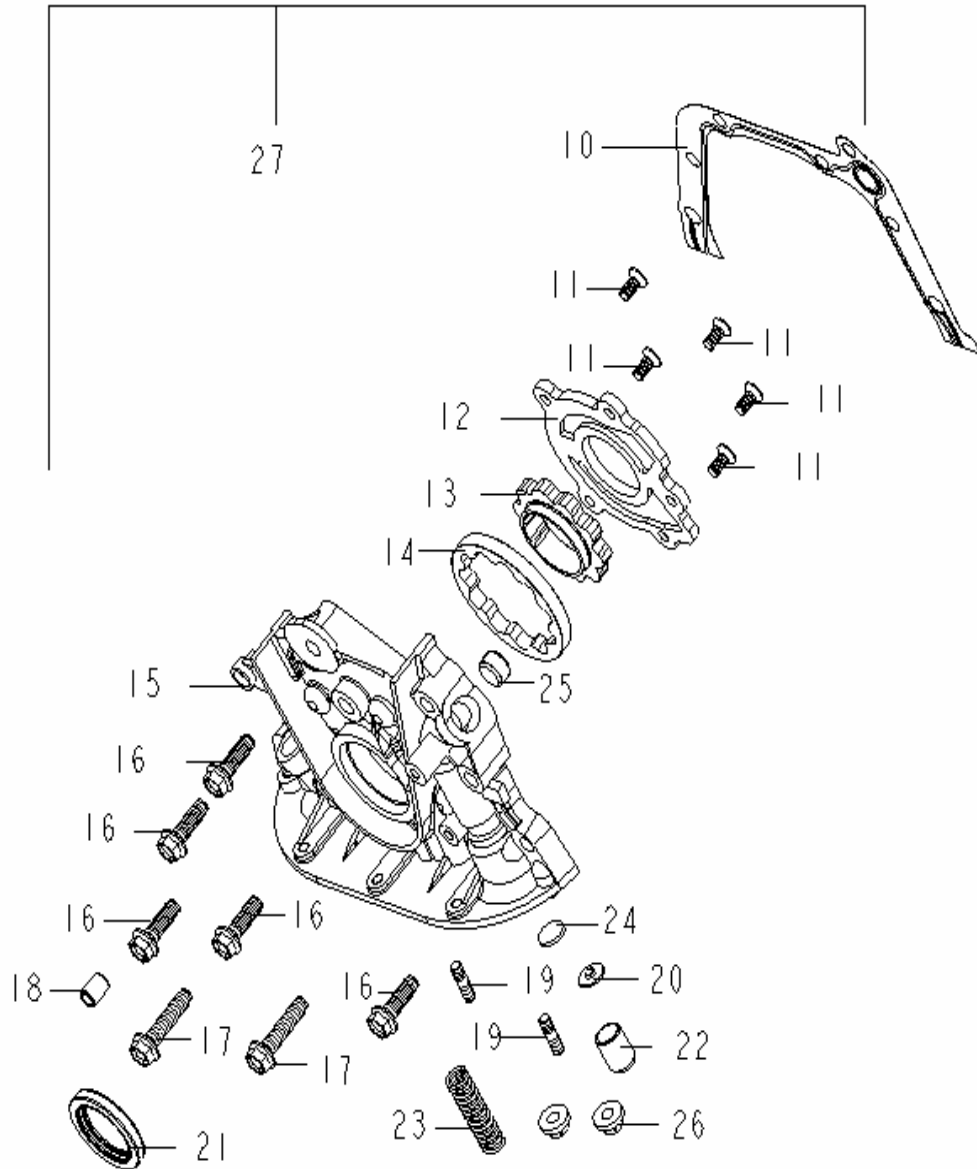

NO.	PART NO.	DES	QTY	REMARK
10	1106013209	CRANKSHAFT FRONT OIL SEAL RETAINER GASKET	1	
11		SCREW M6x10	5	
12		OIL PUMP BODY COVER	1	
13		DRIVING ROTOR	1	
14		DRIVEN ROTOR	1	
15		OIL PUMP BODY	1	
16	E040000601	OIL PUMP SHORT FIXING BOLT M8x25	5	
17	E040000701	OIL PUMP FIXING BOLT M8x35	2	
18		PISITION BUSH	1	
19	E040000801	DOUBLE END STUD M6x22	2	
20		RETAINER	1	
21	1106013209	CRANKSHAFT FRONT OIL SEAL ASSY.	1	
22		OIL PUMP PRESSURE RELIEF VALVE	1	
23		SPRING	1	
24		SNAP RING	1	
25		HEXAGON SOCKET PLUG R3/8x10	1	
26		PREVAILING TORQUE TYPE HEXAGON NUT WITH FLANGE	2	M6
27	E040100005	OIL PUMP ASSY.	1	

14 OIL STRAINER & OIL PAN COMPONENTS

	NO.	PART NO.	DES	QTY	REMARK
	10	1106013215	OIL PAN COMPONENT	1	
	11		BAFFLE BOARD	1	
	12		NUT M12x1.25	1	
	13		OIL PAN	1	
	14	E020400201	OIL DRAIN PLUG WASHER	1	
	15		PREVAILING TORQUE TYPE HEXAGON NUT WITH FLANGE	2	M6
	16	E020400101	OIL DRAIN PLUG M12x1.25x16	1	
	17		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	19	M6x12
	21	E020900101	OIL STRAINER GASKET	1	
	22	E020900005	OIL STRAINER	1	
	23		PREVAILING TORQUE TYPE HEXAGON NUT WITH FLANGE	2	M6
	24		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	2	M6x12
	30	1106013170	OIL DIPSTICK	1	
	31		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	1	M6x12
32		O RING 10x1.8	1		
33		PETROL ENGINE QUALIFICATION CERTIFICATION	1	1.3L	
34		PETROL ENGINE QUALIFICATION CERTIFICATION	1	1.5L	

15 THERMOSTAT ASSY.

	NO.	PART NO.	DES	QTY	REMARK
	10	1106013089	WATER INLET HOUSING	1	
	11		SIMPLE CIRCULATION WATER INLET/OUTLET PIPE JOINT	2	
	12	1106013067	COOLING WATER BYPASS HOSE JOINT	2	
	13	1086001088	WATER TEMPERATURE SENSOR	1	
	14	E040000701	OIL PUMP FIXING BOLT	1	
	15	E010400901	SEAL WASHER	1	
	16	1106013088	THERMOSTAT	1	
	17	E060000101	WATER INTEL	1	
	18		DOUBLE END STUD M6x25	2	
	19		PREVAILING TORQUE TYPE HEXAGON NUT WITH FLANGE	2	M6
	20		THERMOSTAT ASSY.	1	
	21	E010501301	DOUBLE END STUD M8x45	2	
	22		WATER INLET (FOR SHANGHAI MAPLE ONLY)	1	
	23		PLUG FOR WATER TEMPERAURE SWITCH SCREW	1	
	24		COVER Φ 32X14 (FOR TRANSPORTATION)	1	
	25		COVER Φ 17X12 (FOR TRANSPORTATION)	2	

16 WATER PUMP ASSY.

	NO.	PART NO.	DES	QTY	REMARK
	10	1106013239	WATER PUMP PULLEY	1	CK-1
		2160197501	WATER PUMP PULLEY	1	MK
	11		PULLEY SEAT	1	
	12		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	4	M6x12
	13		WATER PUMP PIVOT BEARING	1	
	14		WATER PUMP FIXING BOLT M8x35	3	
	15		WATER PUMP BODY	1	
	16		ROTOR	1	
	17		WATER PUMP GASKET	1	
	18		WATER PUMP SUCTION COVER	1	
	19	E050200501	WATER PUMP INLET PIPE GASKET	1	
	20	E050200201	INLET HOSE	1	
	21	Q67645	CLIP	2	
	22	1106013085	WATER TEMPERATURE GAUGE SENSOR	1	
	23	E050200401	2# WATER INLET PIPE	1	
	24	E050100005	WATER PUMP BODY ASSY.	1	
	25		WATER PUMP SEAL	1	
	26		WATER PUMP ASSY.	1	
	27		DOUBLE END STUD M6x25	1	
	28	E010501501	DOUBLE END STUD M8x33.5	2	

17-1 THROTTLE(EURO II)

	NO.	PART NO.	DES	QTY	REMARK
	10	E110320005	THROTTLE BODY COMPONENTS	1	
	11	1106013071	THROTTLE BODY GASKET	2	
	12		THROTTLE BODY MOUNTING BOLT M8x54	2	
	13		PREVAILING TORQUE TYPE HEXAGON NUT WITH FLANGE	1	M8
	14	1106013160	ADJUSTER-IDLE	1	
	15	1106010336	ADJUSTER-IDLE SEAT	1	
	16		CONTROL ROCKER COMPONENTS	1	
	17	E110320005	THROTTLE BODY COMPONENTS	1	
	18	1106010337	ADJUSTER-IDLE GASKET	1	
	19		SEAL	1	
	20	1106013159	THROTTLE POSITION SENSOR	1	
	21		THROTTLE COVER	1	

17-2 THROTTLE(EURO III)

	NO.	PART NO.	DES	QTY	REMARK
	10	2110710012	THROTTLE BODY COMPONENTS	1	
		1086001158-01	THROTTLE BODY COMPONENTS (STEP MOTOR)	1	
		1086000674-01	THROTTLE ASSY.	1	1.6L
		2110300008-01	THROTTLE ASSY.	1	AT
	11	1106013071	THROTTLE BODY GASKET	1	1.3L/1.5L
		2110301021	THROTTLE BODY GASKET	1	1.6L
	12		FUEL TUBE FIXING BOLT	2	
	13		HEXAGON FLANGE NUT M8	2	
	14	1107130002	STEP MOTOR	1	1.3L/1.5L
		2150080008	STEP MOTOR	1	1.6L
	15	1106013159	THROTTLE POSITION SENSOR	1	

18 INTAKE MANIFOLD COMPONENTS


	NO.	PART NO.	DES	QTY	REMARK	
	12		ACCELERATOR LEVER CLIP	1		
	13		DOUBLE END STUD M6x25	2		
	14	1106013123		INTAKE MANIFOLD	1	1.3L
	14	2010200102		INTAKE MANIFOLD	1	1.3L/1.5L
	14	1086000511		INTAKE MANIFOLD	1	1.6L
	14	1106016015		INTAKE MANIFOLD(SPECIAL CHILE)	1	1.6L
	15	1106010502		COVER	1	
	16	E010200301		STRAIGHT PIPE JOINT A	1	
	17	E010200601		HEXAGON HEAD PIPE JOINT R1/18x18	1	
	18			DUSTPROOF PLUG	1	
	19	E010200501		STRAIGHT PIPE JOINT B	1	
	23	E010200201		BENDED PIPE JOINT	1	
	24	1106013163		INTAKE TEMPERATURE & PRESSURE SENSOR	1	EURO II
	24	2150010006		INTAKE TEMPERATURE & PRESSURE SENSOR	1	EURO III
	25			HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	2	M6x16
	26	E110300501		COOLING WATER BYPASS HOSE	2	
	27	1106013081		FUEL RETURN PIPE & BRACKET ASSY.	1	
	28			PREVAILING TORQUE TYPE HEXAGON NUT WITH FLANGE	2	M6
	29	E010001301		INTAKE MANIFOLD GASKET	1	
	31	E010501501		DOUBLE END STUD M8x35	2	
	32			INTAKE MANIFOLD STAY FIXING BOLT M8x16	1	
	33			HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	1	M6x16
	34	1106013195		INTAKE MANIFOLD STAY	1	
	35	1106013073		FUEL RETURN HOSE	1	
	36			INTAKE MANIFOLD FIXING BOLT	7	

18 INTAKE MANIFOLD COMPONENTS

NO.	PART NO.	DES	QTY	REMARK	NO.	PART NO.	DES	QTY	REMARK
37		DOUBLE END STUD M8x62	2						
40	E010200005	INTAKE MANIFOLD COMPONENTS	1						
41		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	1	M10x1.25x20					
42		PIPE	2						
43		CLIP	2						
44		CLIP	4						
45		CLIP	2						
46		COVER ϕ 3.5x9 (FOR TRANSPORTATION)	1						
47		COVER ϕ 7x10 (FOR TRANSPORTATION)	1						

19 EXHAUST MANIFOLD COMPONENTS



NO.	PART NO.	DES	QTY	REMARK
10		EXHAUST MANIFOLD	1	
11	2150020006	OXYGEN SENSOR	1	1.3L
	2150020003	OXYGEN SENSOR	1	1.5L
	1106013165	OXYGEN SENSOR	1	EURO II
12		EXHAUST MANIFOLD STAY	1	
13	E010300901	DOUBLE END STUD M10x1.25x40	5	
14	1106013193	UPPER HEAT INSULATOR	1	
15		UPPER/LOWER HEAT INSULATOR FIXING BOLT	6	M6x12
16		EXHAUST MANIFOLD STAY FIXING BOLT M8x25	1	
17		NUT M10x1.25	5	
18	E010300401	LOWER HEAT INSULATOR	1	
19	E010001401	EXHAUST MANIFOLD GASKET	1	
20	E010300005	EXHAUST MANIFOLD COMPONENTS	1	1.3L
	1106015029	EXHAUST MANIFOLD COMPONENTS	1	1.5L
	1106016015	EXHAUST MANIFOLD COMPONENTS(SPECIAL CHILE)	1	1.6L
21		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	1	M10x1.25x20
22		WIRE CLIP	1	

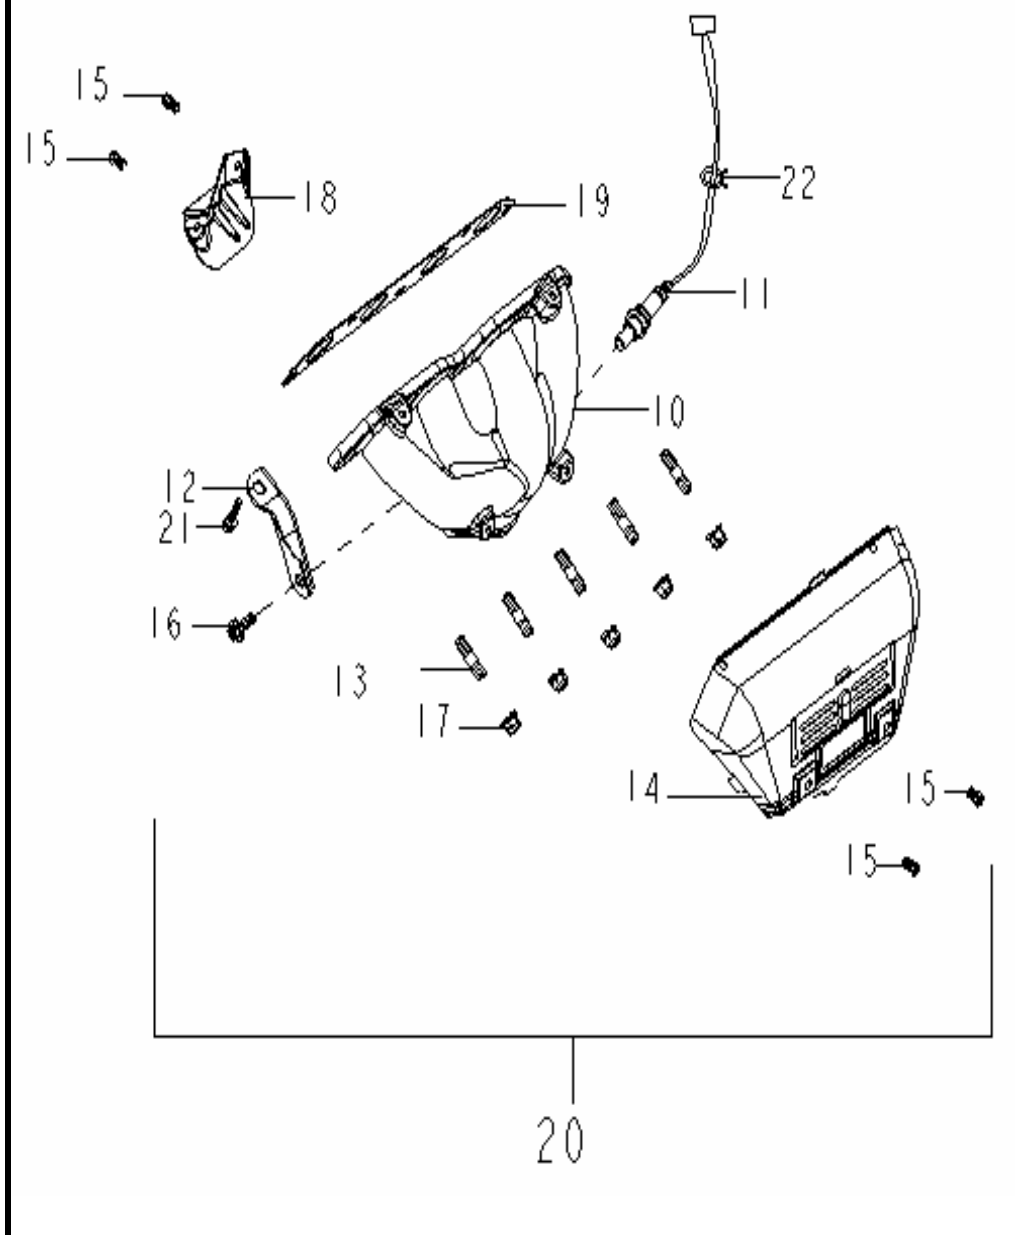

20 FUEL INJECTOR

	NO.	PART NO.	DES	QTY	REMARK
	11	E110220005	FUEL INLET HOSE COMPONENTS	1	
13	E110200401	FUEL HOSE BOLT GASKET	2		
15	E010201001	FUEL RAIL INSULATOR	2		
16	1106013169	FUEL PRESSURE REGULATOR	1		
17	2110110101	O RING	1		
22	1106013084	FUEL RAIL COMPONENTS	1		
	1086000753	FUEL RAIL COMPONENTS	1	RHD	
23	1106013162	FUEL INJECTOR FIXING BRACKET	4		
24	1106013158	FUEL INJECTOR ASSY.	4		
25	1106013286	O RING 15x8x3.5	8		
32	E100512201	VACUUM HOSE	1		
33	1601809180	CANISTER DESORPTION HOSE	1		
	1601810180	CANISTER AIR INTAKE HOSE	1		
34	1016001357	CONTROL CANISTER	1		
35	1104148001	FUEL EVAPORATIVE EMISSION HOSE	1		
36	E150090005	CHARCOAL CANISTER VALVE	1		
37	E010004001	PCV HOSE	1		

21 IGNITION CABLE ASSY.

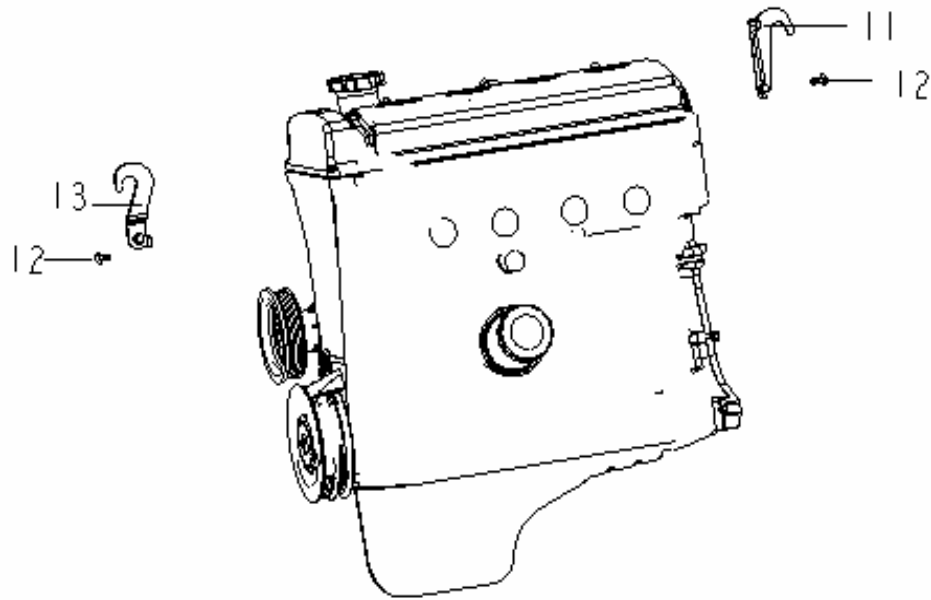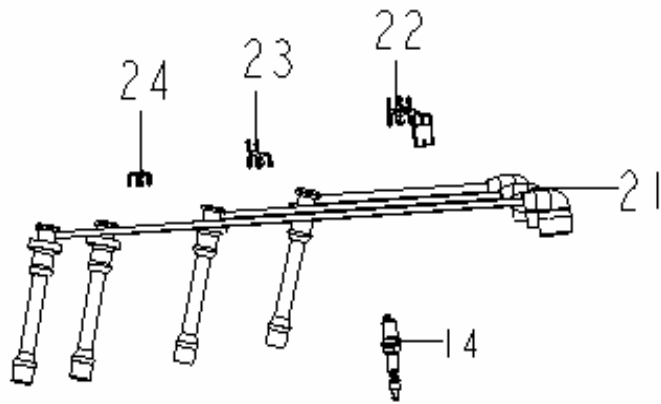

NO.	PART NO.	DES	QTY	REMARK
11	1106013184	REAR HANGER	1	
12		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	2	M10x1.25x20
13	1106013183	FRONT HANGER	1	
14	1106013243	SPARK PLUG	4	
21	1106013241	IGNITION CABLE	1	
22		FOUR WIRES CLAMP	1	
23		THREE WIRES CLAMP	1	
24		DOUBLE WIRES CLAMP	1	


22 ECU & IGNITION COIL

	NO.	PART NO.	DES	QTY	REMARK
	11		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	4	M6x50
	12	1106013248	IGNITION COIL	1	
	13	1106013242	IGNITION COIL MOUNTING BRACKET	1	
	14		BOLT M8x31	3	
	15	E150110005	ECU (EURO II)	1	1.3L
	18	2150110003	ECU(EURO III)	1	1.3L
	18	E150110010	ECU (EURO II)	1	1.5L/1.6
	20	2150110008	ECU (EURO III)	1	1.5L/1.6
	20	1086001116	ECU (EURO III+OBD)	1	1.5L
	16	1106010227	ECU (EURO III+OBD)	1	1.3L
	16	E000500005	ENGINE WIRING HARNESS ASSY.(EURO II)	1	
	17	2000500024	ENGINE WIRING HARNESS ASSY. (EURO II, DUAL FANS)	1	CK-1
	19	2000500024-01	ENGINE WIRING HARNESS ASSY. (EURO III)(DUAL FANS)	1	CK-1
	19	2000500026	ENGINE WIRING HARNESS ASSY. (EURO III) (DUAL FANS,AT)	1	CK-1
	19	1086001110	ENGINE WIRING HARNESS ASSY. (EURO III+OBD)	1	CK-1
	19	1086001112	ENGINE WIRING HARNESS ASSY. (EURO III+OBD)	1	MK


23 ALTERNATOR COMPONENTS

	NO.	PART NO.	DES	QTY	REMARK
	10	E090200005	ALTERNATOR ADJUSTING BRACKET	1	
	11	2090200501	ADJUSTING BRACKET BOLT M10x1.25x23	2	
	12	E090200201	ADJUSTING BLOCK	1	
	13	2090000801	ALTERNATOR UPPER/LOWER ADJUSTING BOLT	1	M8x89
	14		NUT WITH STOP TAB M10x1.25	1	
	15	E090000101	ALTERNATOR BRACKET	1	
	16	1106013201	ALTERNATOR COMPONENTS 75A	1	1.3L/1.5L
		1086001111	ALTERNATOR COMPONENTS 90A	1	1.6L
	17		ALTERNATOR FRONT/REAR ADJUSTING BOLT	1	M8x43
	18		ALTERNATOR BRACKET UPPER FIXING BOLT	2	M8x25
	19		ALTERNATOR BRACKET LOWER FIXING BOLT	1	M8x30
	20	E090000501	ALTERNATOR FIXING BOLT M10x1.25x105	1	
	21	E030000401	DRIVING BELT	1	
	22	1106010346	75A GENERATOR ADJUSTER	1	
		1106010347	90A GENERATOR ADJUSTER	1	

24 STARTER




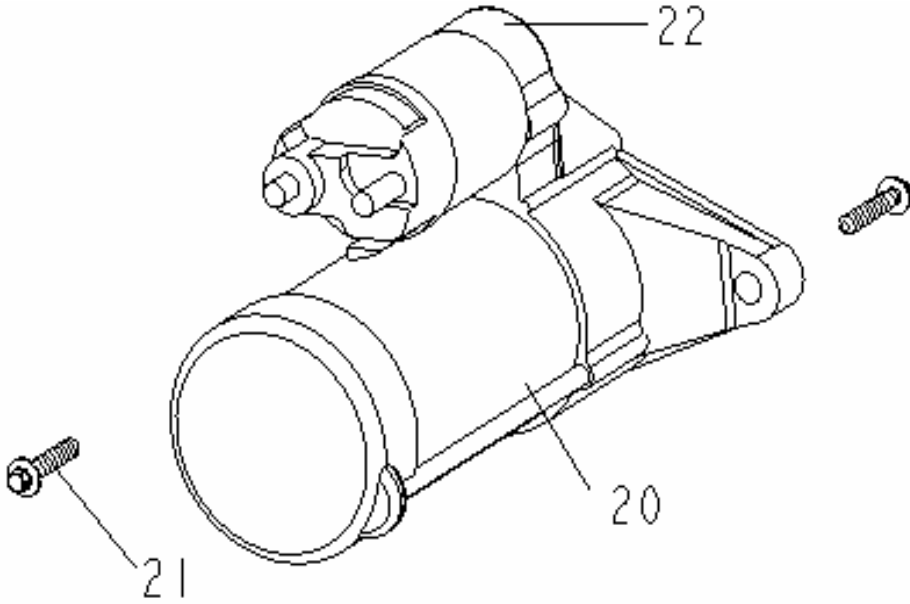
	NO.	PART NO.	DES	QTY	REMARK
	20	E080000010	STARTER COMPONENTS	1	1.3L/1.5L
		E370801021	STARTER COMPONENTS	1	1.6L
	21		HEXAGON HEAD BOLT & SINGLE COIL SPRING LOCK WASHER	2	M10x1.25x40
	22	1106010351	MAGNETIC SWITCH	1	

25 FUEL PUMP ASSY.

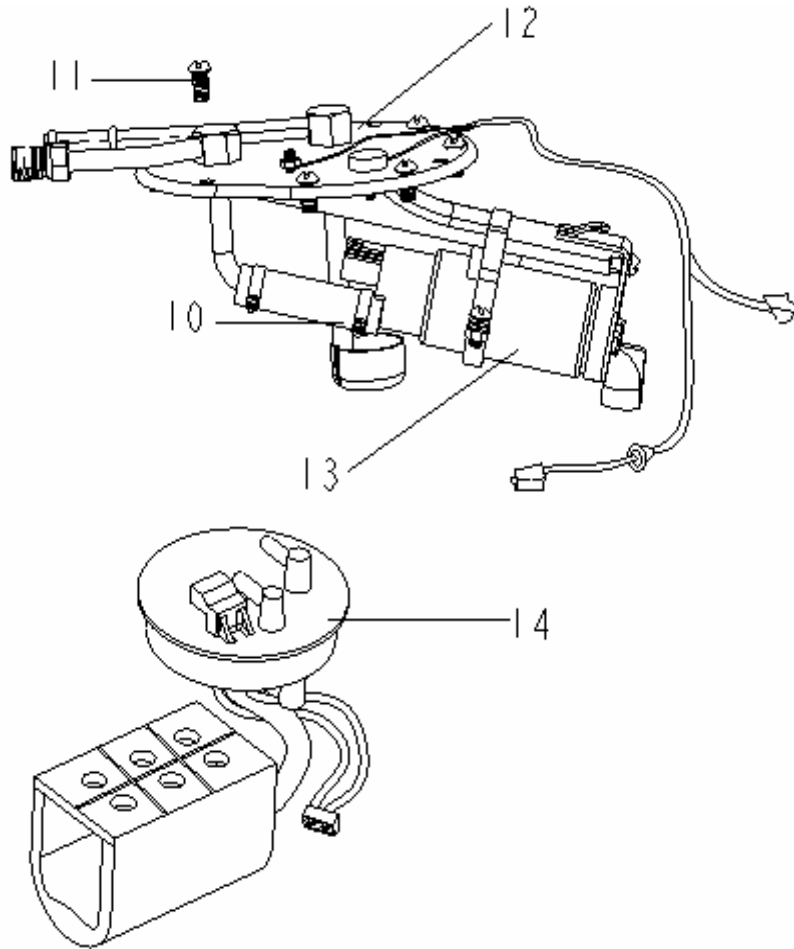

NO.	PART NO.	DES	QTY	REMARK
10		FUEL PUMP ASSY.	1	
11		CROSS RECESSED HEXAGON BOLT	8	M5x14
12		FUEL PUMP BRACKET	1	
13		FUEL PUMP	1	
14	1601285180	FUEL PUMP&FUEL LEVEL SENSOR	1	

26 ENGINE MOUNTING

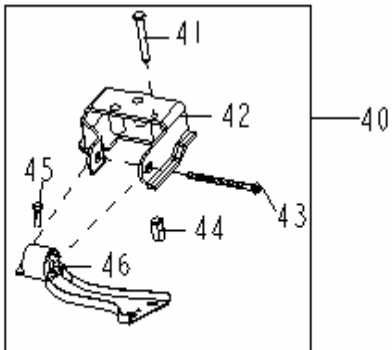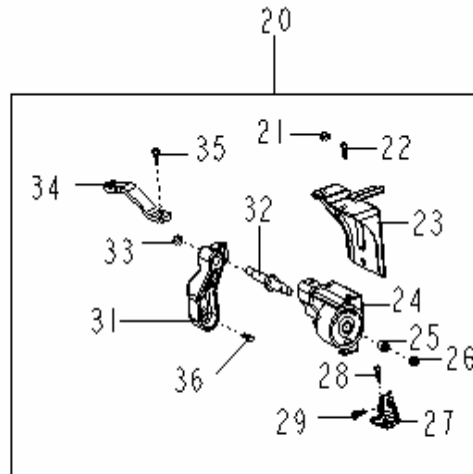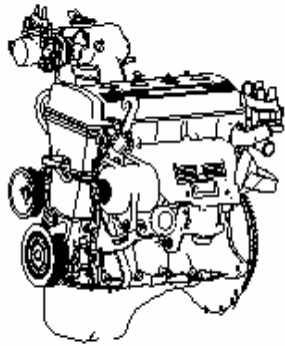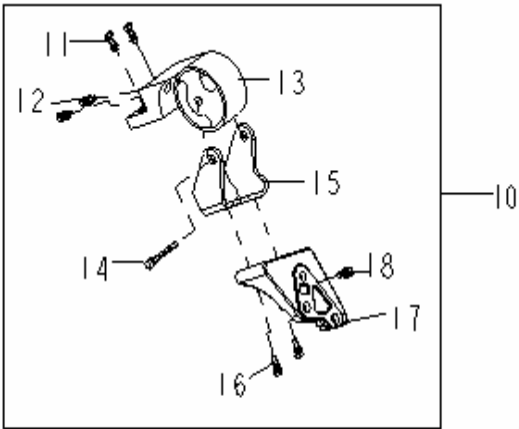

NO.	PART NO.	DES	QTY	REMARK
10		ENGINE REAR MOUNT ASSY.	1	
11		HEXAGON HEAD BOLT & THICK PLAIN WASHER ASSY.	2	M10x1.25x30
12		HEXAGON HEAD BOLT M10x1.25x110	2	
13	1600437180	ENGINE REAR MOUNT INSULATOR ASSY.	1	
14		HEXAGON HEAD BOLT & SINGLE COIL SPRING LOCK WASHER	1	M12x1.25x95
15	1600501180	REAR MOUNT BRACKET CONNECTING PLATE ASSY.	1	
16		HEXAGON FLANGE BOLT-PRODUCT GRADE B M1x1.25x30	3	
17	1600434180	ENGINE REAR MOUNT BRACKET	1	
18		HEXAGON HEAD BOLT & SINGLE COIL SPRING LOCK WASHER	2	M10x1.25x25
20		ENGINE LEFT MOUNT ASSY.	1	
21		HEXAGON FLANGE BOLT-PRODUCT GRADE A M10x1.25	1	
22		HEXAGON HEAD BOLT & SINGLE COIL SPRING LOCK WASHER	1	M12x1.25x25
23	1600564180	ENGINE LEFT MOUNT BRACKET ASSY.	1	
24	1600436180	ENGINE LEFT MOUNT INSULATOR ASSY.	1	
25		THICK PLAIN WASHER M12x1.25x25	1	
26		HEXAGON FLANGE BOLT-PRODUCT GRADE A M12x1.25	1	
27	1600566180	ENGINE RIGHT MOUNT BRACKET REINFORCEMENT	1	
28		HEXAGON HEAD BOLT	2	M12x1.25x30
29		HEXAGON HEAD BOLT & SINGLE COIL SPRING LOCK WASHER	4	M10x1.25x25
31		ENGINE RIGHT MOUNT INSULATOR REINFORCEMENT	1	
32		AXIS PIN	1	
33		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	1	M12x1.25
34		ENGINE RIGHT UPPER MOUNT BRACKET	1	
35		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	2	M12x1.25x30
36		HEXAGON HEAD BOLT M10x1.25x38	2	

26 ENGINE MOUNT

NO.	PART NO.	DES	QTY	REMARK	NO.	PART NO.	DES	QTY	REMARK
40	2000410104	ENGINE RIGHT MOUNT BRACKET ASSY.	1						
41		HEXAGON HEAD BOLT & SINGLE COIL SPRING LOCK WASHER	1	M10x1.25x50					
42	1600418180	ENGINE RIGHT MOUNT BRACKET ASSY.	1						
43		HEXAGON HEAD BOLT & SINGLE COIL SPRING LOCK WASHER	1	M12x1.25x95					
44		LONG NUT WITH SPRING WASHER	1						
45		HEXAGON HEAD BOLT & SINGLE COIL SPRING LOCK WASHER	3	M10x1.25x20					
46	1600435180	ENGINE RIGHT MOUNT INSULATOR ASSY.	1						

27 CAMSHAFT POSITION SENSOR

	NO.	PART NO.	DES	QTY	REMARK
<p style="text-align: center;">22</p> <p style="text-align: center;">23</p> <p style="text-align: center;">23</p> <p style="text-align: center;">20</p> <p style="text-align: center;">21</p> <p style="text-align: center;">30</p>	20	E120101001	CAMSHAFT POSITION SENSOR SEAT COMPONENTS	1	
	21	1106013247	CAMSHAFT POSITION SENSOR	1	
	22		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	1	
	23		HEXAGON HEAD BOLT	2	
	30		CAMSHAFT POSITION SENSOR SENSOR & SEAT COMPONENTS	1	

28 COLD AIR INTAKE BOX

	NO.	PART NO.	DES	QTY	REMARK
	10	1109320005	COLD AIR INTAKE BOX SUB-ASSY.	1	
	11		HEXAGON NUT & WAVE WASHER ASSY. M6	2	
	12		BOWL-SHAPED WASHER	2	
	13		FLEXIBLE WASHER	1	
	16		HEXAGON HEAD BOLT & LARGE PLAIN WASHER ASSY.	1	
	17		WASHER	1	
	18	1109401005	COLD AIR INTAKE BOX LOWER BRACKET	1	


29 CLUTCH ASSY.

	NO.	PART NO.	DES	QTY	REMARK
	11	1106015058	FRICITION PLATE ASSY.	1	
		1106018067	FRICITION PLATE ASSY.	1	1.6L
	12	1106015057	PRESSUREPLATE ASSY.	1	
		1106018008	PRESSUREPLATE ASSY.	1	1.6L
	13		HEXAGON HEAD BOLT M8x16	6	
	14		CLUTCH ASSY.	1	

CONTENT


1	PETROL ENGINE ASSY.	21	IGNITION CABLE ASSY.
2	PETROL ENGINE COMPONENTS	22	ECU & IGNITION COIL
3	CYLINDER BLOCK SUB-ASSY.	23	ALTERNATOR COMPONENTS
4	CYLINDER HEAD COVER COMPONENTS	24	STARTER
5	CYLINDER HEAD	25	FUEL PUMP ASSY.
6	CYLINDER BLOCK COMPONENTS	26	ENGINE MOUNTING
7	TIMING BELT COVER AND BELT PULLEYS	27	PHASE SENSOR AND BASE
8	PISTON CONNECTING ROD COMPONENTS	28	COLD AIR INTAKE BOX
9	CRANKSHAFT FLYWHEEL COMPONENT	29	CLUTCH ASSY.
10	CAMSHAFT		
11	VALVE		
12	TIMING BELT		
13	OIL PUMP ASSY.		
14	OIL STRAINER AND OIL PAN COMPONENTS		
15	THERMOSTAT ASSY.		
16	WATER PUMP ASSY.		
17	THROTTLE		
18	INTAKE MANIFOLD COMPONENTS		
19	EXHAUST MANIFOLD COMPONENTS		
20	FUEL INJECTOR		

1 PETROL ENGINE ASSY.

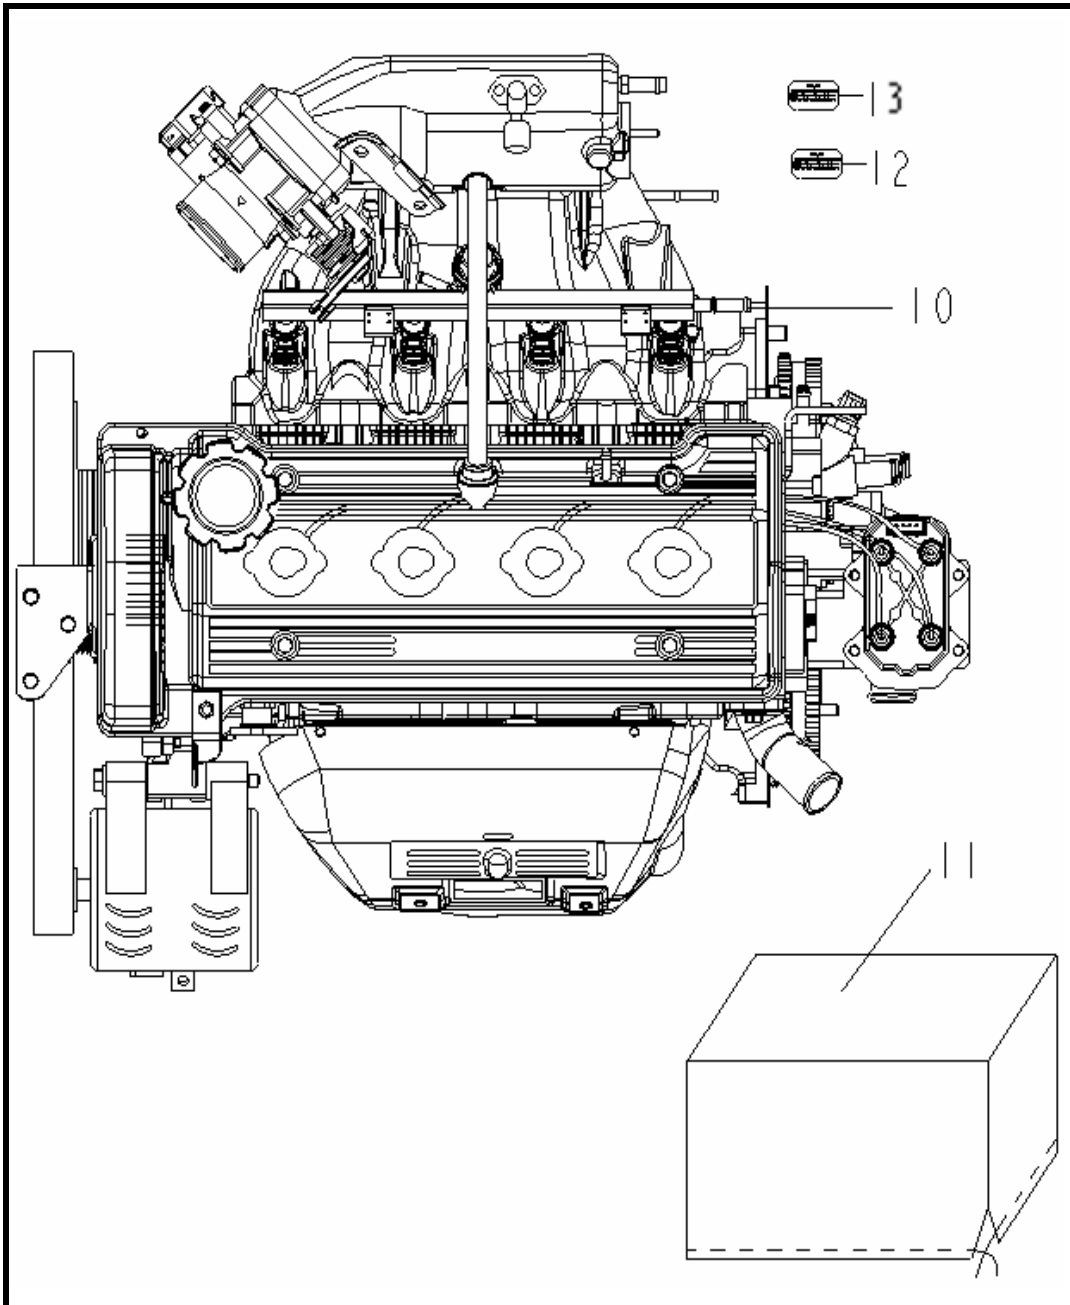

NO.		DES	QTY	REMARK
10		PETROL ENGINE ASSY.	1	
11		PETROL ENGINE FILM COVER (FOR TRANSPORTATION)	1	1.3L
12		PETROL ENGINE MAINTAINANCE PASTER	1	
13		PETROL ENGINE MAINTAINANCE PASTER	1	1.5L

2 PETROL ENGINE COMPONENTS

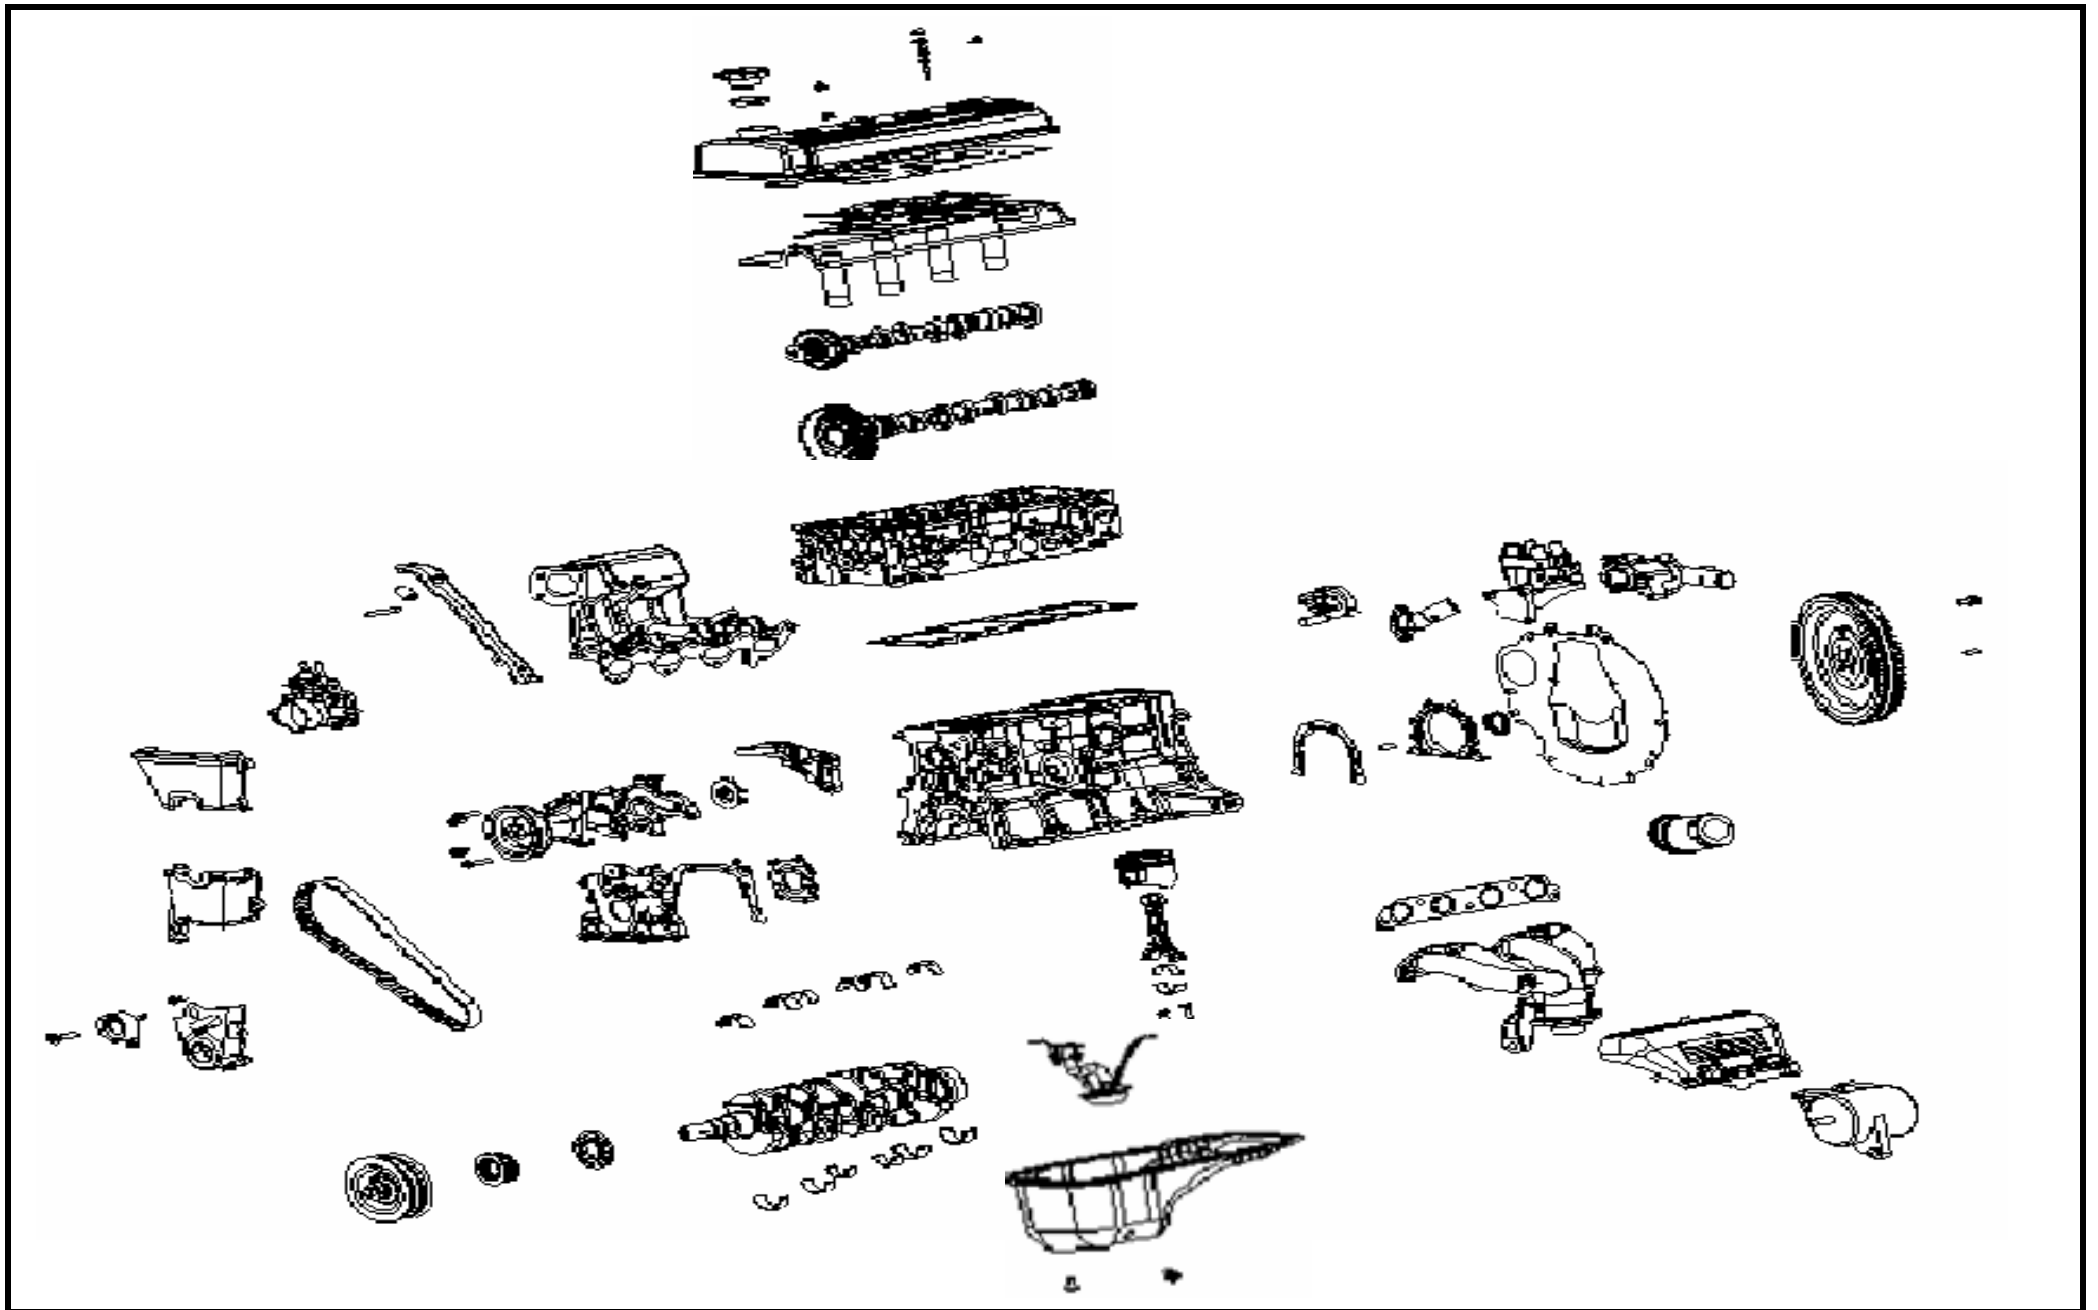


3 CYLINDER BLOCK SUB-ASSY.

	NO.	PART NO.	DES	QTY	REMARK
		E000010010	CYLINDER BLOCK SUB-ASSY.	1	1.3L
		E000010002	CYLINDER BLOCK SUB-ASSY.	1	1.5L


4 CYLINDER HEAD COVER COMPONENTS

	NO.	PART NO.	DES	QTY	REMARK
	10	1086001126	CYLINDER HEAD COVER	1	
	11	1106013110	CYLINDER HEAD COVER OIL BAFFLER GASKET	1	
	12	E010400301	OIL BAFFLER A	1	
	13	E010400401	OIL BAFFLER B	1	
	14	1086001127	CYLINDER HEAD COVER GASKET	1	
	15	1106013107	CYLINDER HEAD OIL SEAL ASSY.	4	
	16	1106013115	OIL CAP	1	
	17	E010402001	CONTROL VALVE	1	
	18	E010400501	VENTILATION HOSE JOINT	1	
	19		OIL CAP SEAL WASHER	1	
	20	E010401001	WIRE HARNESS BRACKET	1	
	21		WIRE HARNESS BRACKET FIXING BOLT M6x16	1	
	22	E010400901	SEAL SHEATH	1	
	23		CYLINDER HEAD COVER COMPONENTS	1	
	24	1086000532	CYLINDER HEAD COVER NUT	4	
	25	E010401501	WASHER ASSY.	4	
	26	2000000701	MR479Q PETROL ENGINE SCUTCHEON	1	
	27	1106010506	DOUBLE END STUD M6x83	4	
	28		COVER Φ 7x10 (FOR TRANSPORTATION)	1	
	29		MR479QA PETROL ENGINE SCUTCHEON	1	

5 CYLINDER HEAD

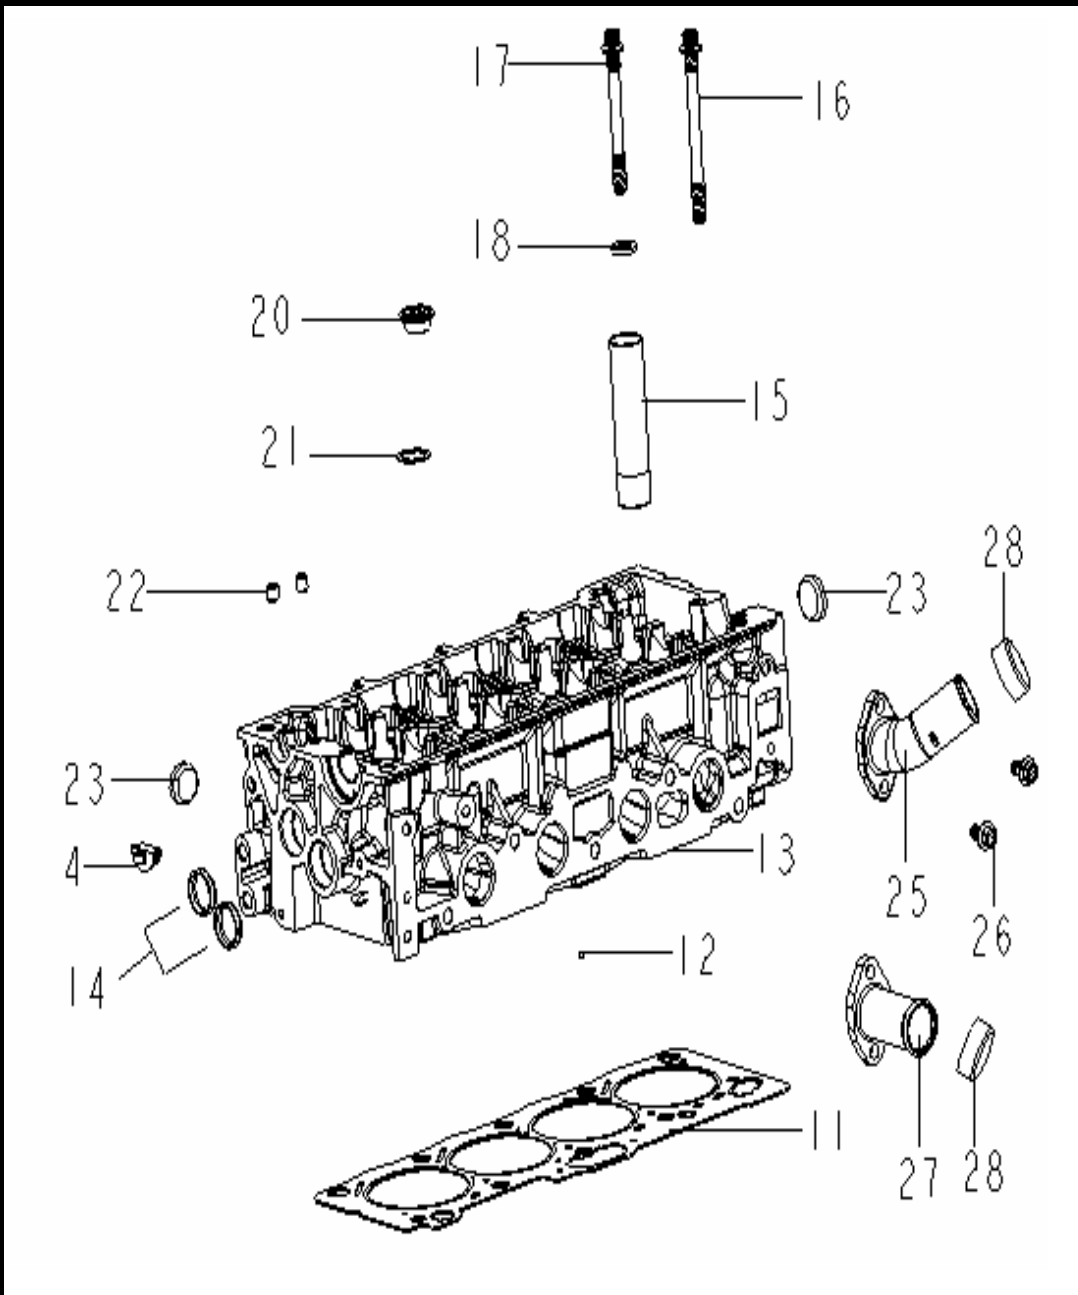	NO.	PART NO.	DES	QTY	REMARK
	11	E010001601	CYLINDER HEAD GASKET	1	
	12		STEEL BALL	2	
	13	1086090101	CYLINDER HEAD	1	1.5L
		1086090100	CYLINDER HEAD	1	1.3L
	14	E010500301	SEALING COVER B	2	
	15	E010500601	SPARK PLUG TUBE	4	
	16	E010500901-01	CYLINDER HEAD BOLT M10x1.25x108	5	
	17	E010500801-01	CYLINDER HEAD BOLT M10x1.25x90	5	
	18	E010501001	WASHER $\Phi 20.5 \times 3$	10	
	20		CYLINDER HEAD PLUG M20x1.5	3	
	21		CYLINDER HEAD PLUG WASHER	3	
	22		ALIGNING PIN BUSH	6	
	23	E010500201	SEALING COVER A	2	
	24	2010001801	SEMICIRCLE PLUG	1	
	25	E010001701	WATER OUTLET	1	
	26		WATER OUTLET FIXING BOLT	2	
	27		WATER OUTLET (FOR SHANGHAI MAPLE ONLY)	1	
	28		COVER $\Phi 32 \times 14$ (FOR TRANSPORTATION)	1	

6 CYLINDER BLOCK COMPONENTS

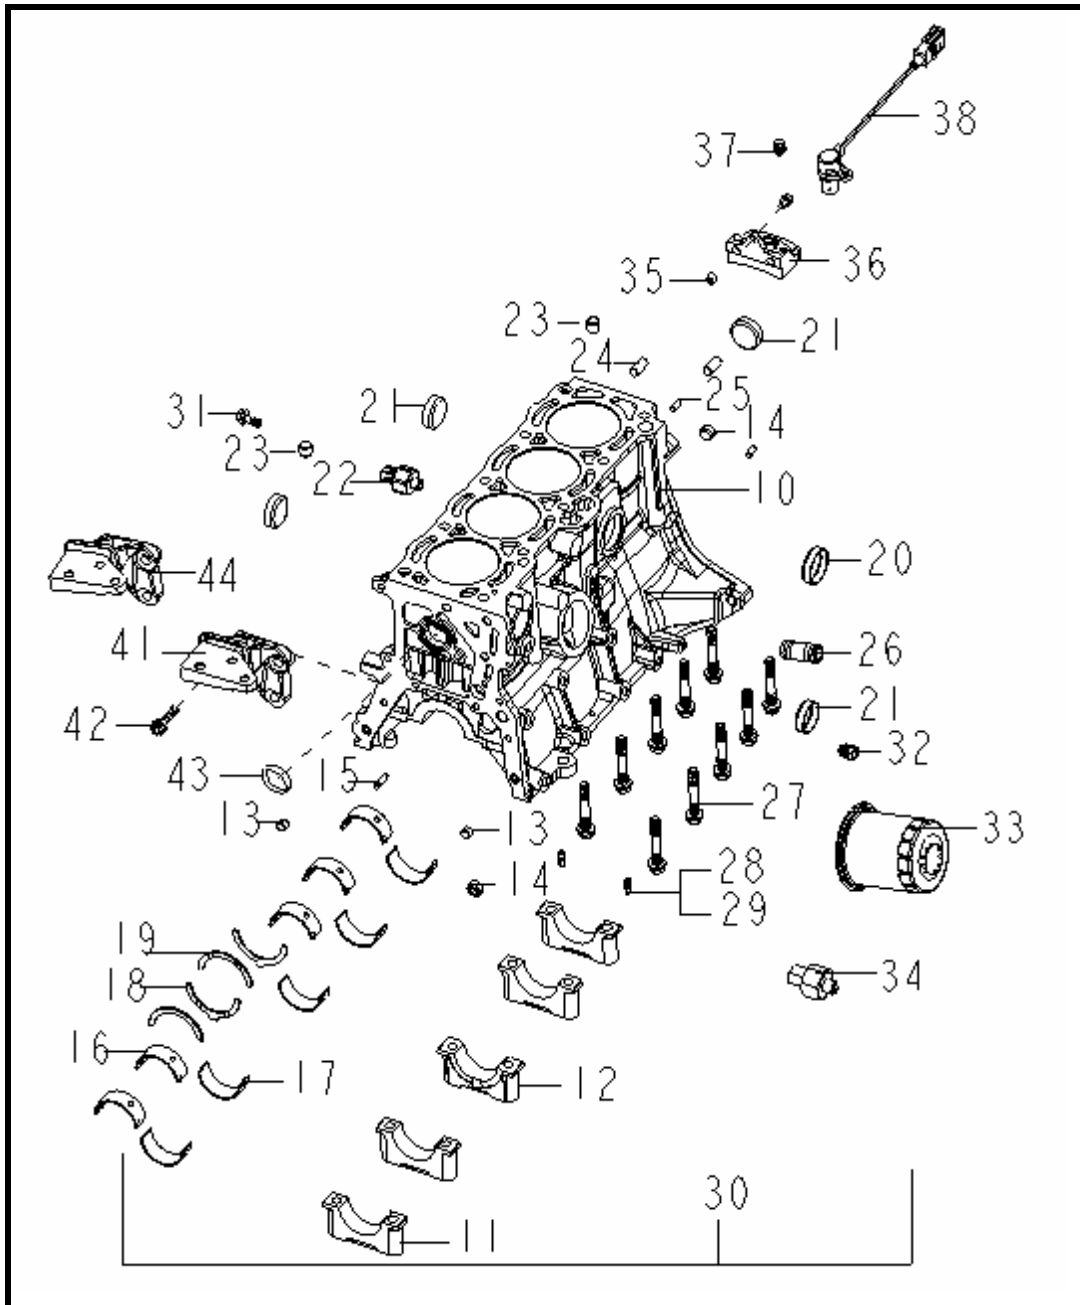	NO.	PART NO.	DES	QTY	REMARK
	10	E020300104	CYLINDER BLOCK	1	
	11		MAIN BEARING CAP (1ST, 2ND, 4TH, 5TH)	4	
	12		MAIN BEARING (3RD)	1	
	13	E020300201	ALIGNING PIN $\Phi 11 \times 8$	2	
	14	E020300401	OIL GALLERY BOLT R3/8x10	2	
	15	E020300301	HANGING PIN $\Phi 6 \times 22$	1	
	16	1106013216	UPPER MAIN BEARING	5	
	17	1106013217	LOWER MAIN BEARING	5	
	18	E020301601	CRANKSHAFT UPPER THRUST WASHER	2	
	19	E020301701	CRANKSHAFT LOWER THRUST WASHER	2	
	20	1106010501	SEALING COVER $\Phi 40$	1	
	21	1106010502	SEALING COVER $\Phi 35$	4	
	22	1086001166	KNOCK SENSOR(479Q)	1	
		21500400041	KNOCK SENSOR(479QA)	1	
	23	E020300801	ALIGNING PIN $\Phi 13 \times 12$	2	
	24	E020300501	ALIGNING PIN $\Phi 10 \times 22$	2	
	25	E020300701	ALIGNING PIN $\Phi 6 \times 14$	2	
	26		HEXAGON SOCKET DOUBLE END SCREW CANNULA	1	
	27	1106013268	MASTER BEARING CAP BOLT M10x1.25x60	10	
	28	E020302101	DOUBLE END STUD M6x18	2	
	29		PREVAILING TORQUE TYPE HEXAGON NUT WITH FLANGE	2	M6
	30		CYLINDER BLOCK COMPONENTS	1	
	31		BOLT M8x12	1	

6 CYLINDER BLOCK COMPONENTS

NO.	PART NO.	DES	QTY	REMARK	NO.	PART NO.	DES	QTY	REMARK
32	E020301201	DRAIN PLUG R1/4x12	1						
33	1106013221	OIL FILTER COMPONENTS	1						
34	1106013220	OIL PRESSURE SWITCH	1						
35		SPEED SENSOR MOUNTING BRACKET ALIGNING PIN BUSH	2						
36	E020000201	SPEED SENSOR MOUNTING BRACKET	1						
37	E20110003	HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	3						
38	1086001168	ENGINE SPEED SENSOR	1						
41	2000410104	ENGINE RIGHT MOUNTING BRACKET(CK-1)	1						
	1086000442	ENGINE RIGHT MOUNTING BRACKET(MK)	1						
	E000410101	ENGINE RIGHT MOUNTING BRACKET(OLD TYPE)	1						
42		BOLT	3						
43	E050000301	O RING 34.5x2.65	1						

7 TIMING BELT COVER & BELT PULLEYS

NO.	PART NO.	DES	QTY	REMARK
10	1106013231	CRANKSHAFT PULLEY	1	
11	E030100101	NO.1 TIMING BELTS COVER	1	
12	E030000301	TIMING BELT GUIDE	1	
13	E030000201	CRANKSHAFT TIMING PULLEY	1	
14	E030100201	NO.2 TIMING BELTS COVER	1	
15	E030100301	NO.3 TIMING BELTS COVER	1	
16		HEXAGON FLANGE BOLT-PRODUCT GRADE B	9	M6x20

8 PISTON CONNECTING ROD COMPONENTS

	NO.	PART NO.	DES	QTY	REMARK
	11		TOP COMPRESSION RING	4	
	12		SECOND COMPRESSION RING	4	
	13		OIL RING EXP&ER	4	
	14		OIL RING SIDE RAIL	8	
	15		OIL RING COMPONENTS	4	
	16	E020110010	PISTON RING COMPONENTS	4	
	17	E020100103-01	PISTON	4	1.3L
	26	E020100106	PISTON	4	1.5L
	18	1106013100	PISTON PIN	4	
	19		CONNECTING ROD BODY	4	
	20		CONNECTING ROD BOLT	8	
	21		CONNECTING ROD HEAD	4	
	22		CONNECTING ROD NUT	8	
	23	E020120501	CONNECTING ROD BEARINGS	8	
	24	E020120005	CONNECTING ROD COMPONENTS	4	
	25		PISTON CONNECTING ROD COMPONENTS	4	
	27		MR479QA PISTON CONNECTING ROD COMPONENTS	4	


9 CRANKSHAFT FLYWHEEL COMPONENT

	NO.	PART NO.	DES	QTY	REMARK
	11	E020210301	CRANKSHAFT BELT PULLEY FIXING BOLT	1	
	12		WASHER	1	
	13	E020210201	SEMICIRCLE KEY	1	
	14	E020210103	CRANKSHAFT MR479Q	1	
	15		CRANKSHAFT COMPONENTS	1	
	21	E020500201	REAR OIL SEAL RETAINER GASKET	1	
	22	E020500005	CRANKSHAFT REAR OIL SEAL RETAINER	1	
	23	E20103011	HEXAGON FLANGE BOLT-PRODUCT GRADE B	6	M6x16
	24	1106013094	CRANKSHAFT REAR OIL SEAL ASSY.	1	
	25		REAR OIL SEAL RETAINER COMPONENTS	1	
	26	E020000101	CLUTCH HOUSING PLATE	1	
	27		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	2	M6x13
	31	1106013307	FLYWHEEL GEAR RING	1	
	32	1086000783	FLYWHEEL	1	
	33	E020220501	FLYWHEEL FIXING BOLT M10x1.25x23	6	
	34	E020220301	ALIGNING PIN $\Phi 8 \times 20$	3	
	35	1106013095	FLYWHEEL COMPONENTS	1	
	41		SENSOR PLATE	1	
	42		CRANKSHAFT FLYWHEEL COMPONENTS	1	
	43	E020210106	CRANKSHAFT MR479QA	1	
44		CRANKSHAFT COMPONENTS	1		
45		MR479QA CRANKSHAFT FLYWHEEL COMPONENTS	1		

10 CAMSHAFT


	NO.	PART NO.	DES	QTY	REMARK
	10	E010110101	INTAKE CAMSHAFT	1	1.3L
		2100603121	INTAKE CAMSHAFT	1	1.5L
	12	E010110301	DRIVING GEAR	1	
	13	E010110501	SUB-GEAR	1	
	14	E010110401	CAMSHAFT GEAR SPRING	1	
	15	E010110701	WAVE WASHER	1	
	16	E010110801	SNAP RING	1	
	17	E010110601	DRIVING GEAR ALIGNING PIN Φ 5x8	1	
	18	E010110201	SUB-GEAR ALIGNING PIN Φ 5x7	1	
	19	E010120201	ALIGNING PIN Φ 5x12	1	
	20	E010000103	INTAKE CAMSHAFT BEARING CAP A	1	
	21		EXHAUST CAMSHAFT BEARING CAP A	1	
	22		EXHAUST CAMSHAFT BEARING CAP B	1	
	23	E010000203	CAMSHAFT BEARING CAP	8	
	25	E010002701	CAMSHAFT BEARING CAP BOLT	18	
	30	E010120101	EXHAUST CAMSHAFT	1	1.5L
		1086001125	EXHAUST CAMSHAFT	1	1.3L
	31	E010120301	TRANSMITTING GEAR	1	
	32	E030000101	CAMSHAFT TIMING BELT GUIDE	1	
	33	1106013187	EXHAUST CAMSHAFT OIL SEAL ASSY.	1	
	34		SNAP RING	1	
	36		INTAKE CAMSHAFT COMPONENTS	1	
	37		EXHAUST CAMSHAFT COMPONENTS	1	
	38	E030000801	CAMSHAFT TIMING BELT GUIDE FIXING BOLT	1	

11 VALVE

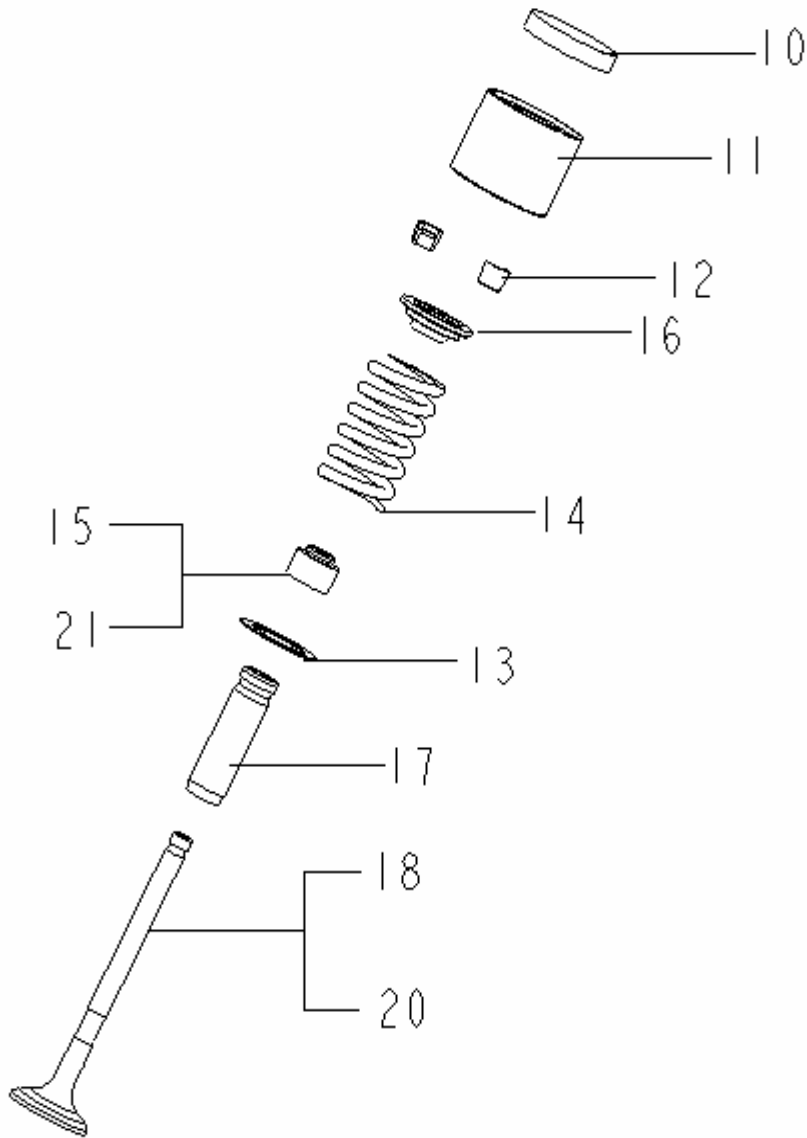


NO.	PART NO.	DES	QTY	REMARK
10	E010001201	SHIM	16	
11	1086001194	VALVE TAPPET	16	
12	1106018005	VALVE KEEPER	32	
13	E010000901	VALVE SPRING SEAT	16	
14	E010000801	VALVE SPRING	16	
15	1106013097	INTAKE OIL SEAL ASSY.	8	
16	1106018006	VALVE SPRING RETAINER	16	
17	E010500703	VALVE GUIDE	16	
18	E010000501	INTAKE VALVE	8	
20	E010000601	EXHAUST VALVE	8	
21	1106013098	EXHAUST OIL SEAL ASSY.	8	

12 TIMING BELT

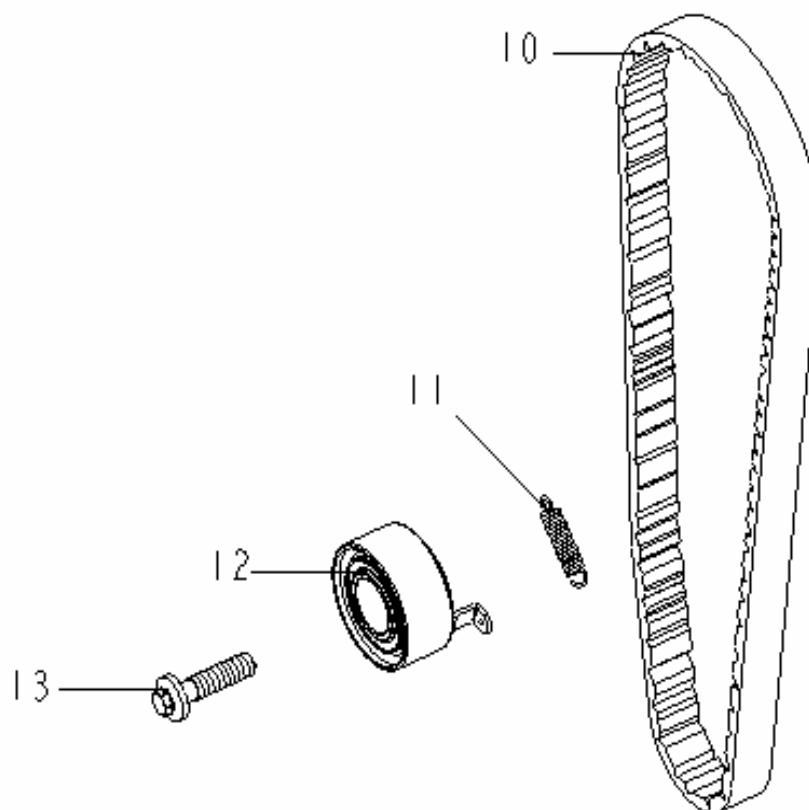	NO.	PART NO.	DES	QTY	REMARK
	10	E030000701	TIMING BELT	1	
	11	E030000501	TENSION SPRING	1	
	12	1106013230	BELT TENSIONER COMPONENTS	1	
	13	E030000901	TIMING BELT TENSIONER FIXING BOLT	1	M10x1.25x40

13 OIL PUMP ASSY.

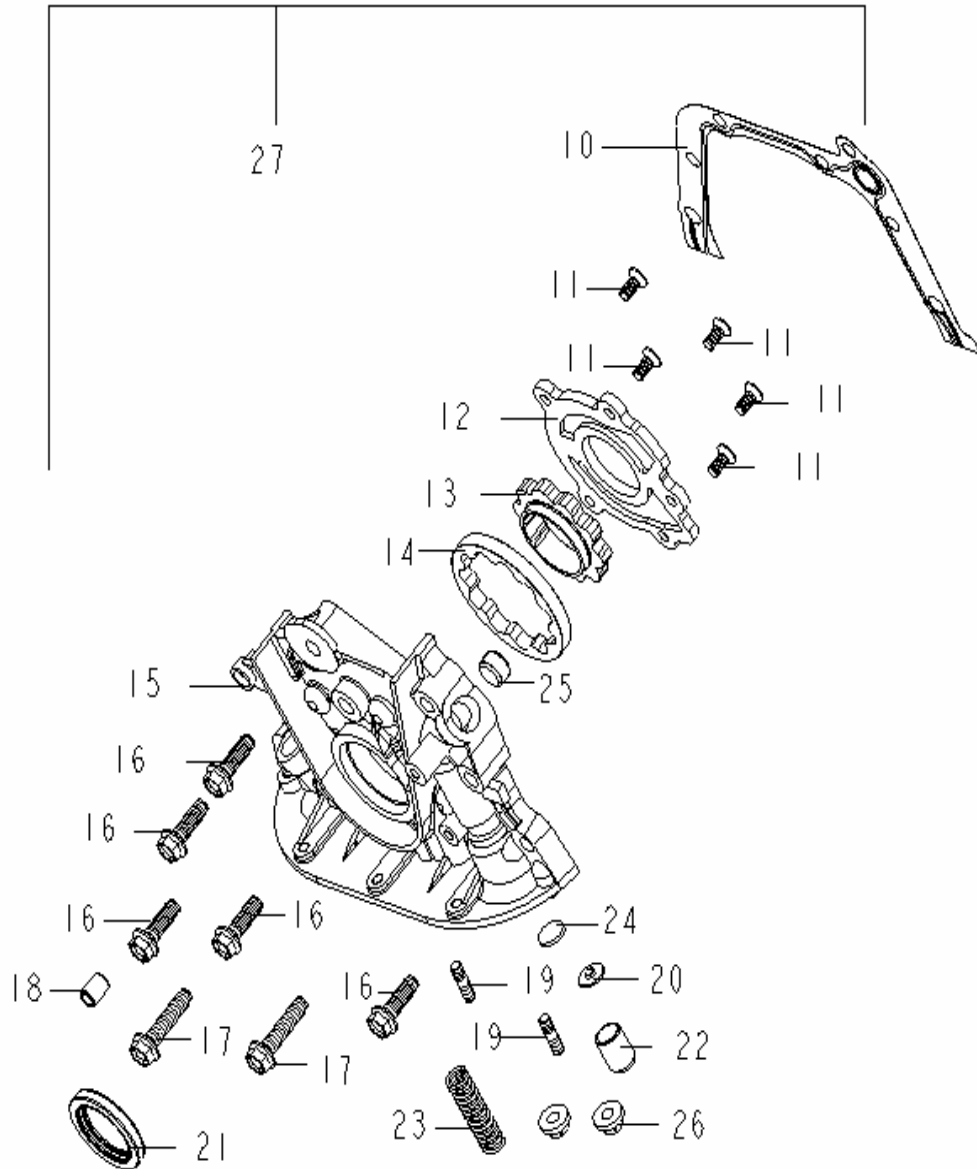

NO.	PART NO.	DES	QTY	REMARK
10	E040000401	CRANKSHAFT FRONT OIL SEAL RETAINER GASKET	1	
11		SCREW M6x10	5	
12		OIL PUMP BODY COVER	1	
13		DRIVING ROTOR	1	
14		DRIVEN ROTOR	1	
15		OIL PUMP BODY	1	
16	E040000601	OIL PUMP SHORT FIXING BOLT M8x25	5	
17	E040000701	OIL PUMP FIXING BOLT M8x35	2	
18		PISITION BUSH	1	
19	E040000801	DOUBLE END STUD M6x22	2	
20		RETAINER	1	
21	1106013209	CRANKSHAFT FRONT OIL SEAL ASSY.	1	
22		OIL PUMP PRESSURE RELIEF VALVE	1	
23		SPRING	1	
24		SNAP RING	1	
25		HEXAGON SOCKET PLUG R3/8x10	1	
26		PREVAILING TORQUE TYPE HEXAGON NUT WITH FLANGE	2	M6
27	E040100005	OIL PUMP ASSY.	1	

14 OIL STRAINER & OIL PAN COMPONENTS

	NO.	PART NO.	DES	QTY	REMARK
	10	1106013215	OIL PAN COMPONENT	1	
	11		BAFFLE BOARD	1	
	12		NUT M12x1.25	1	
	13		OIL PAN	1	
	14	E020400201	OIL DRAIN PLUG WASHER	1	
	15		PREVAILING TORQUE TYPE HEXAGON NUT WITH FLANGE	2	M6
	16	E020400101	OIL DRAIN PLUG M12x1.25x16	1	
	17		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	19	M6x12
	21	E020900101	OIL STRAINER GASKET	1	
	22	E020900005	OIL STRAINER	1	
	23		PREVAILING TORQUE TYPE HEXAGON NUT WITH FLANGE	2	M6
	24		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	2	M6x12
	30	1106013170	OIL DIPSTICK	1	
	31		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	1	M6x12
32		O RING 10x1.8	1		
33		PETROL ENGINE QUALIFICATION CERTIFICATION	1	1.3L	
34		PETROL ENGINE QUALIFICATION CERTIFICATION	1	1.5L	


15 THERMOSTAT ASSY.

	NO.	PART NO.	DES	QTY	REMARK
	10	1106013089	WATER INLET HOUSING	1	
	11		SIMPLE CIRCULATION WATER INLET/OUTLET PIPE JOINT	2	
	12	1106013067	COOLING WATER BYPASS HOSE JOINT	2	
	13	1086001129	WATER TEMPERATURE SENSOR	1	1.3L
		1086001163	WATER TEMPERATURE SENSOR	1	1.5L
	14	E040000701	OIL PUMP FIXING BOLT	1	
	15	E010400901	SEAL WASHER	1	
	16	1106013088	THERMOSTAT	1	
	17	E060000101	WATER INTEL	1	
	18		DOUBLE END STUD M6x25	2	
	19		PREVAILING TORQUE TYPE HEXAGON NUT WITH FLANGE	2	M6
	20		THERMOSTAT ASSY.	1	
	21	E010501301	DOUBLE END STUD M8x45	2	
	22		WATER INLET	1	
	23		PLUG FOR WATER TEMPERAURE SWITCH SCREW	1	
	24		COVER Φ 32X14 (FOR TRANSPORTATION)	1	
	25		COVER Φ 17X12 (FOR TRANSPORTATION)	2	

16 WATER PUMP ASSY.

	NO.	PART NO.	DES	QTY	REMARK
	10	1106013239	WATER PUMP PULLEY	1	CK
		2160197501	WATER PUMP PULLEY	1	MK
	11		PULLEY SEAT	1	
	12		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	4	M6x12
	13		WATER PUMP PIVOT BEARING	1	
	14		WATER PUMP FIXING BOLT M8x35	3	
	15		WATER PUMP BODY	1	
	16		ROTOR	1	
	17		WATER PUMP GASKET	1	
	18		WATER PUMP SUCTION COVER	1	
	19	E050200501	WATER PUMP INLET PIPE GASKET	1	
	20	E050200201	INLET HOSE	1	
	21	Q67645	CLIP	2	
	22	1106013085	WATER TEMPERATURE GAUGE SENSOR	1	
	23	1086001162	2# WATER INLET PIPE	1	
	24	E050100005	WATER PUMP BODY ASSY.	1	
	25		WATER PUMP SEAL	1	
	26		WATER PUMP ASSY.	1	
	27		DOUBLE END STUD M6x25	1	
	28	E010501401	DOUBLE END STUD M8x33.5	2	

17-2 THROTTLE

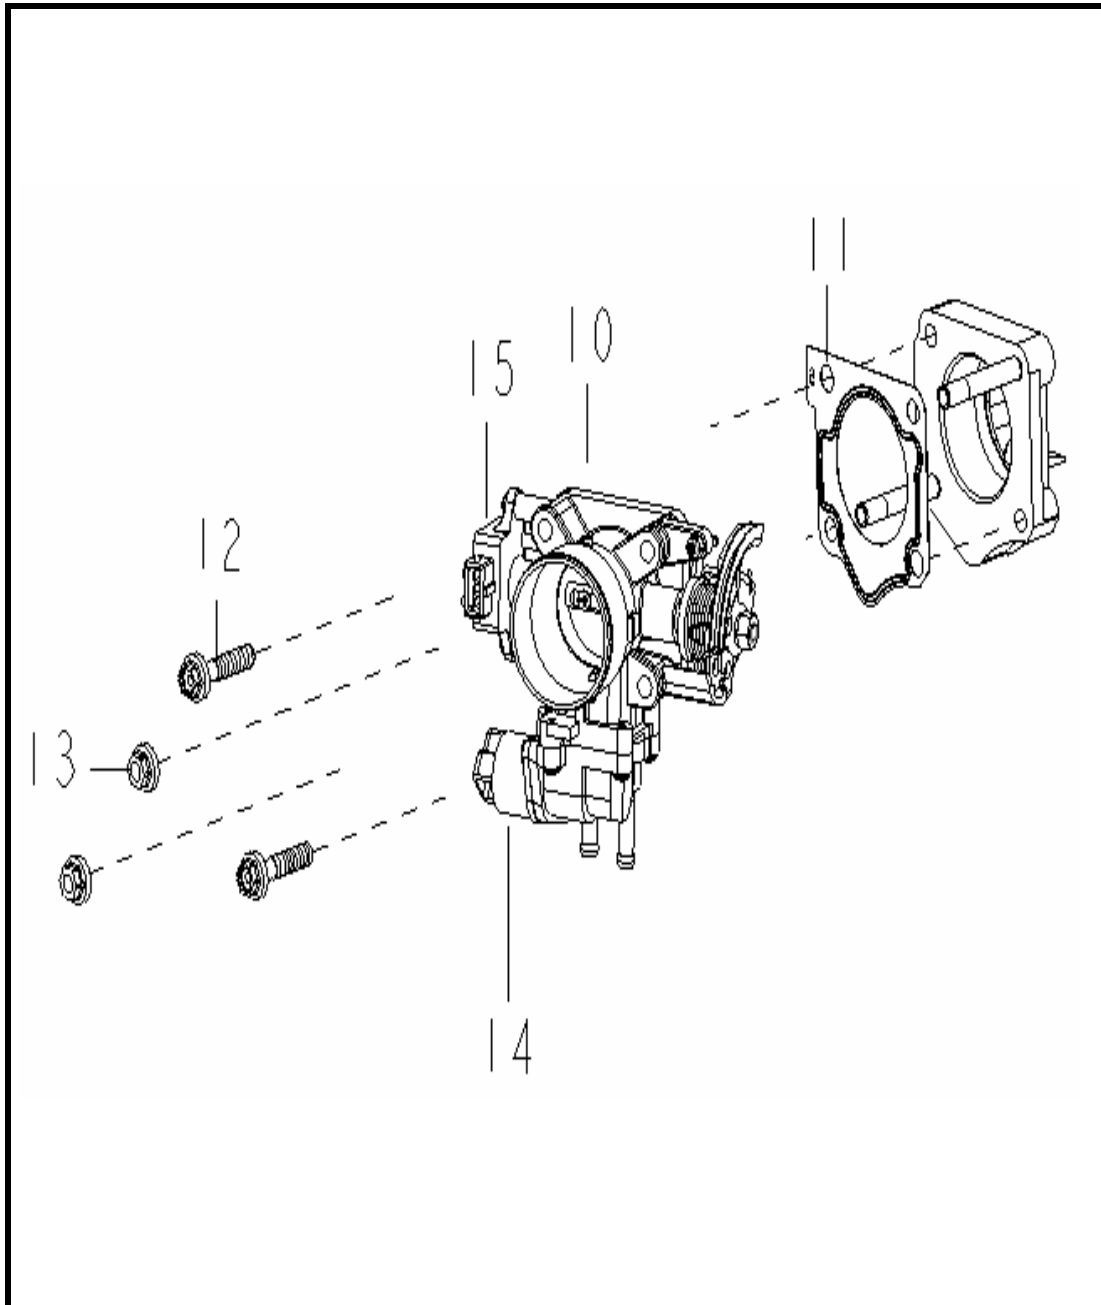	NO.	PART NO.	DES	QTY	REMARK
		10	2110710012	THROTTLE BODY COMPONENTS	1
		1086001158-01	THROTTLEBODY COMPONENTS	1	1.5L
		2110300008-01	THROTTLE ASSY.	1	AT
	11	1086001161	MR 479Q/QA THROTTLE BODY GASKET	1	
	12		FUEL TUBE FIXING BOLT	2	
	13		HEXAGON FLANGE NUT M8	2	
	14	1107130002	STEP MOTOR	1	1.3L
		1086001156	STEP MOTOR	1	1.5L
	15	1106013159	THROTTLE POSITION SENSOR	1	1.3L
		1086001157	THROTTLE POSITION SENSOR	1	1.5L

18 INTAKE MANIFOLD COMPONENTS

	NO.	PART NO.	DES	QTY	REMARK	
	11		HEXAGON FLANGE BOLT M8x14	2		
	12		ACCELERATOR LEVER CLIP	1		
	13		DOUBLE END STUD M6x25	2		
	14	1086001147		INTAKE MANIFOLD	1	1.3L
		1086001172		INTAKE MANIFOLD	1	1.5L
	15	1106010502		COVER	1	
	16	E010200301		STRAIGHT PIPE JOINT A	1	
	17	E010200601		HEXAGON HEAD PIPE JOINT R1/18x18	1	
	18			DUSTPROOF PLUG	1	
	19	E010200501		STRAIGHT PIPE JOINT B	1	
	23	E010200201		BENDED PIPE JOINT	1	
	24	1086001167		INTAKE TEMPERATURE & PRESSURE SENSOR (479Q)	1	
		1086000786		INTAKE TEMPERATURE & PRESSURE SENSOR (479QA)	1	
	25			HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	2	M6x16
	26	1086005001		COOLING WATER BYPASS HOSE	2	
	27	1086001173		FUEL RETURN PIPE & BRACKET ASSY.(479Q)	1	
		1086001174		FUEL RETURN PIPE & BRACKET ASSY.(479QA)	1	
	28			PREVAILING TORQUE TYPE HEXAGON NUT WITH FLANGE	2	M6
	29	E010001301		INTAKE MANIFOLD GASKET	1	
	31	E010501501		DOUBLE END STUD M8x35	2	
	32			INTAKE MANIFOLD STAY FIXING BOLT M8x16	1	
	33			HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	1	M6x16
	34	1106013195		INTAKE MANIFOLD STAY	1	
	35	1086001195		FUEL RETURN HOSE	1	
	36			INTAKE MANIFOLD FIXING BOLT	7	

18 INTAKE MANIFOLD COMPONENTS

NO.	PART NO.	DES	QTY	REMARK	NO.	PART NO.	DES	QTY	REMARK
37		DOUBLE END STUD M8x62	2						
40	E010200005	INTAKE MANIFOLD COMPONENTS	1						
41		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	1	M10x1.25x20					
42		PIPE	2						
43		CLIP	2						
44		CLIP	4						
45		CLIP	2						
46		COVER Φ 3.5x9 (FOR TRANSPORTATION)	1						
47		COVER Φ 7x10 (FOR TRANSPORTATION)	1						
	1086000233	INTAKE TEMPERATURE & PRESSURE SENSOR BRACKET	1						



19 EXHAUST MANIFOLD COMPONENTS

	NO.	PART NO.	DES	QTY	REMARK
	10		EXHAUST MANIFOLD	1	
	11	1086001114	OXYGEN SENSOR	1	1.3L
		2150020003	OXYGEN SENSOR	1	1.5L
	12		EXHAUST MANIFOLD STAY	1	
	13	E010300901	DOUBLE END STUD M10x1.25x40	5	
	14	1106013193	UPPER HEAT INSULATOR	1	
	15		UPPER/LOWER HEAT INSULATOR FIXING BOLT	6	M6x12
	16		EXHAUST MANIFOLD STAY FIXING BOLT M8x25	1	
	17		NUT M10x1.25	5	
	18	E010300401	LOWER HEAT INSULATOR	1	
	19	E010001401	EXHAUST MANIFOLD GASKET	1	
	20	1086001181	EXHAUST MANIFOLD TWC	1	1.5L
		1086001179	EXHAUST MANIFOLD TWC	1	1.3L
	21		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	1	M10x1.25x20
	22		WIRE CLIP	1	

20 FUEL INJECTOR

	NO.	PART NO.	DES	QTY	REMARK
	11	E110220005	FUEL INLET HOSE COMPONENTS	1	
	13	E110200401	FUEL HOSE BOLT GASKET	2	
	15	E010201001	FUEL RAIL INSULATOR	2	1.3L
		1086001196	FUEL RAIL INSULATOR	2	1.5L
	16	1106013169	FUEL PRESSURE REGULATOR(1.3L)	1	
		1086001155	FUEL PRESSURE REGULATOR(1.5L)	1	
		1086001165	FUEL PRESSURE REGULATOR CASING(1.3L)	1	
		1086001150	FUEL PRESSURE REGULATOR CASING(1.5L)	1	
	17	2110110101	O RING	1	
	22	1086001164	FUEL RAIL COMPONENTS	1	
	23	1106013162	FUEL INJECTOR FIXING BRACKET	4	
	24	1106013158	FUEL INJECTOR ASSY.(1.3L)	4	
		1086001154	FUEL INJECTOR ASSY.(1.5L)	4	
	25	1106013286	O RING 15x8x3.5	8	
	32	1086001160	VACUUM HOSE	1	1.3L
		1086001192	VACUUM HOSE	1	1.5L
	33	1104510101	CHARCOAL CANISTER HOSE	1	
34	1016001357	CHARCOAL CANISTER	1		
35	1104148001	FUEL EVAPORATIVE EMISSION HOSE	1		
36	E150090005	CHARCOAL CANISTER VALVE	1		
37	E010004001	PCV HOSE	1		

21 IGNITION CABLE ASSY.

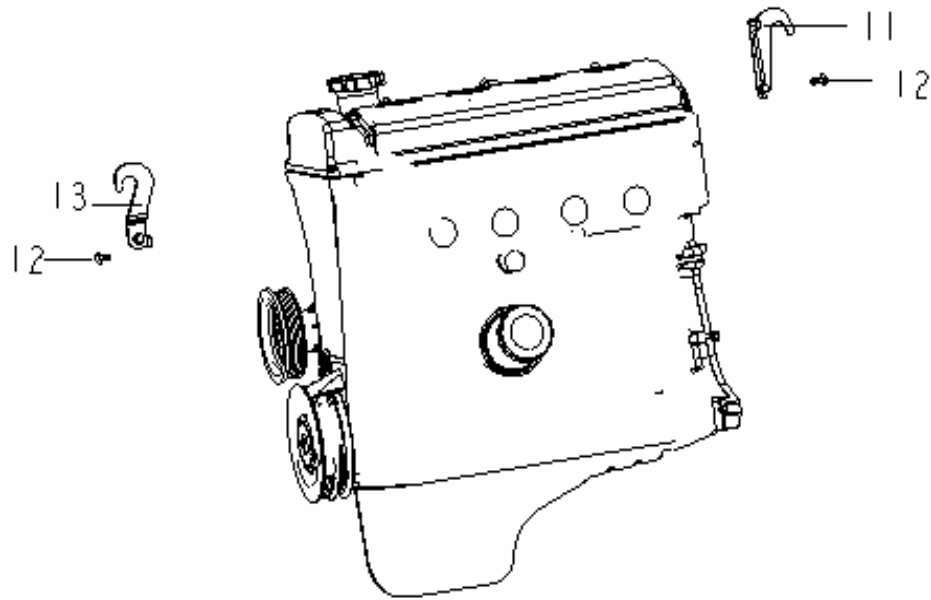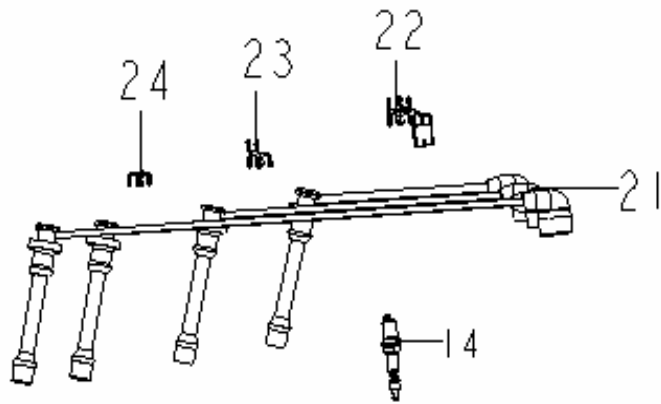

NO.	PART NO.	DES	QTY	REMARK
11	1106013184	REAR HANGER	1	
12		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	2	M10x1.25x20
13	1106013183	FRONT HANGER	1	
14	1106013243	SPARK PLUG	4	
21	1086000785	HIGH PRESSURE LEAD ASSY.	1	
22		FOUR WIRES CLAMP	1	
23		THREE WIRES CLAMP	1	
24		DOUBLE WIRES CLAMP	1	


22 ECU & IGNITION COIL

	NO.	PART NO.	DES	QTY	REMARK
	11		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	4	M6x50
	12	E150130005	IGNITION COIL	1	1.3L
		1086001171	IGNITION COIL	1	1.5L
	13	1106013242	IGNITION COIL INSTALLATION BRACKET	1	
	14		BOLT M8x31	3	
	15	1016000617	ECU	1	1.3L
		1016003757	ECU(ANTI-THEFT)	1	1.3L
	18	1016000619	ECU	1	1.5L
		1016003881	ECU(ANTI-THEFT)	1	1.5L
	17	1086001131	ENGINE WIRING HARNESS ASSY.	1	1.3L
		1017010232	ENGINE WIRING HARNESS ASSY. (ANTI-THEFT)	1	1.3L
	19	1017007988	ENGINE WIRING HARNESS ASSY.	1	1.5L
		1017010233	ENGINE WIRING HARNESS ASSY. (ANTI-THEFT)	1	1.5L


23 ALTERNATOR COMPONENTS

	NO.	PART NO.	DES	QTY	REMARK
	10	E090200005	ALTERNATOR ADJUSTING BRACKET	1	
	11	2090200501	ADJUSTING BRACKET BOLT M10x1.25x23	2	
	12	E090200201	ADJUSTING BLOCK	1	
	13	2090000801	ALTERNATOR UPPER/LOWER ADJUSTING BOLT	1	M8x89
	14		NUT WITH STOP TAB M10x1.25	1	
	15	E090000101	ALTERNATOR BRACKET	1	
	16	1086001111	ALTERNATOR COMPONENTS 90A	1	
	17		ALTERNATOR FRONT/REAR ADJUSTING BOLT	1	M8x43
	18		ALTERNATOR BRACKET UPPER FIXING BOLT	2	M8x25
	19		ALTERNATOR BRACKET LOWER FIXING BOLT	1	M8x30
	20	E090000501	ALTERNATOR FIXING BOLT M10x1.25x105	1	
	21	E030000401	DRIVING BELT	1	
	22	1106010346	75A GENERATOR ADJUSTER	1	
		1106010347	90A GENERATOR ADJUSTER	1	

24 STARTER




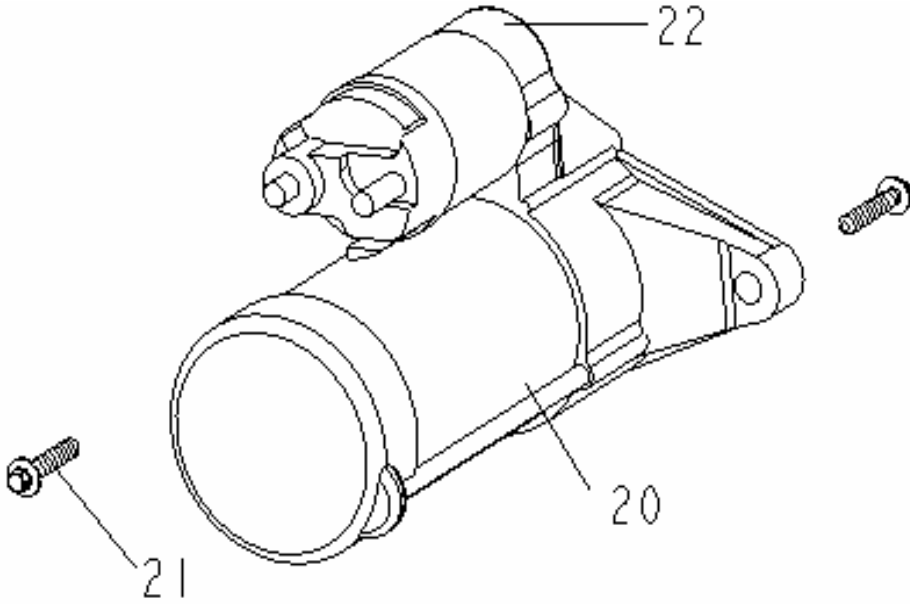
	NO.	PART NO.	DES	QTY	REMARK
	20	E08000010	STARTER COMPONENTS	1	
	21		HEXAGON HEAD BOLT & SINGLE COIL SPRING LOCK WASHER	2	M10x1.25x40
	22	2080000102	MAGNETIC SWITCH	1	

25 FUEL PUMP ASSY.

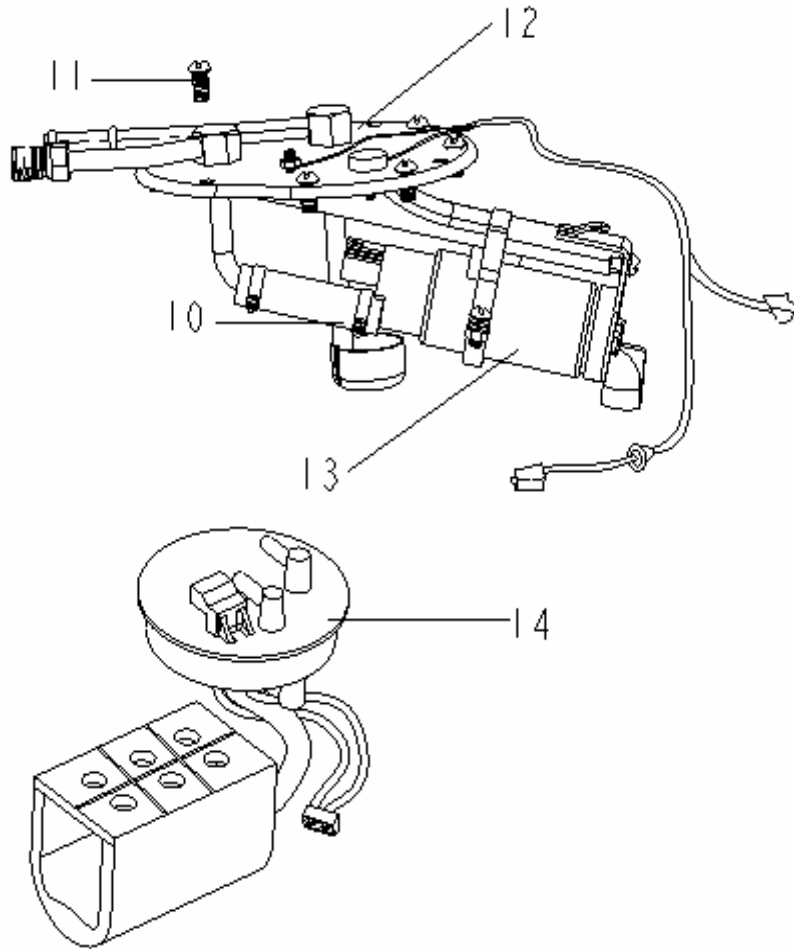

NO.	PART NO.	DES	QTY	REMARK
10		FUEL PUMP ASSY.	1	
11		CROSS RECESSED HEXAGON BOLT	8	M5x14
12		FUEL PUMP BRACKET	1	
13		FUEL PUMP	1	
14	1601285180	FUEL PUMP&FUEL LEVEL SENSOR	1	

26 ENGINE MOUNTING

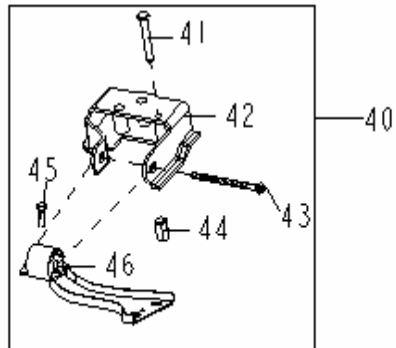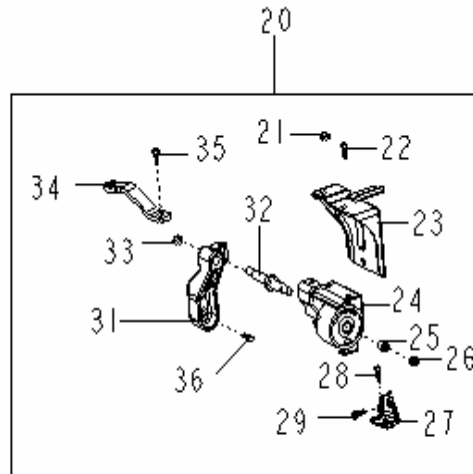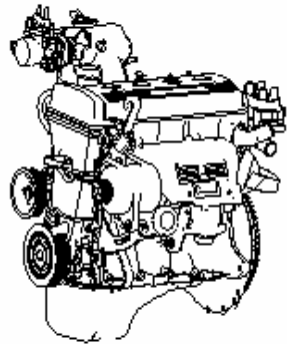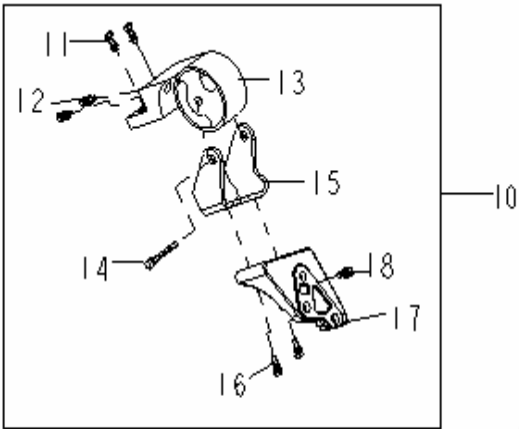

NO.	PART NO.	DES	QTY	REMARK
10		ENGINE REAR MOUNTING ASSY.	1	
11		HEXAGON HEAD BOLT & THICK PLAIN WASHER ASSY.	2	M10x1.25x30
12		HEXAGON HEAD BOLT M10x1.25x110	2	
13	1600437180	ENGINE REAR MOUNTING INSULATOR ASSY.	1	
14		HEXAGON HEAD BOLT & SINGLE COIL SPRING LOCK WASHER	1	M12x1.25x95
15	1600501180	REAR MOUNTING BRACKET CONNECTING PLATE ASSY.	1	
16		HEXAGON FLANGE BOLT-PRODUCT GRADE B M1x1.25x30	3	
17	1600434180	ENGINE REAR MOUNTING BRACKET	1	
18		HEXAGON HEAD BOLT & SINGLE COIL SPRING LOCK WASHER	2	M10x1.25x25
20		ENGINE LEFT MOUNTING ASSY.	1	
21		HEXAGON FLANGE BOLT-PRODUCT GRADE A M10x1.25	1	
22		HEXAGON HEAD BOLT & SINGLE COIL SPRING LOCK WASHER	1	M12x1.25x25
23	1600564180	ENGINE LEFT MOUNTING BRACKET ASSY.	1	
24	1600436180	ENGINE LEFT MOUNTING INSULATOR ASSY.	1	
25		THICK PLAIN WASHER M12x1.25x25	1	
26		HEXAGON FLANGE BOLT-PRODUCT GRADE A M12x1.25	1	
27	1600566180	ENGINE RIGHT MOUNTING BRACKET REINFORCEMENT	1	
28		HEXAGON HEAD BOLT	2	M12x1.25x30
29		HEXAGON HEAD BOLT & SINGLE COIL SPRING LOCK WASHER	4	M10x1.25x25
31		ENGINE RIGHT MOUNTING INSULATOR REINFORCEMENT	1	
32		AXIS PIN	1	
33		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	1	M12x1.25
34		ENGINE RIGHT UPPER MOUNTING BRACKET	1	
35		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	2	M12x1.25x30
36		HEXAGON HEAD BOLT M10x1.25x38	2	

26 ENGINE MOUNTING

NO.	PART NO.	DES	QTY	REMARK	NO.	PART NO.	DES	QTY	REMARK
40	2000410104	ENGINE RIGHT MOUNTING BRACKET ASSY.	1						
41		HEXAGON HEAD BOLT & SINGLE COIL SPRING LOCK WASHER	1	M10x1.25x50					
42	1600418180	ENGINE RIGHT MOUNTING BRACKET ASSY.	1						
43		HEXAGON HEAD BOLT & SINGLE COIL SPRING LOCK WASHER	1	M12x1.25x95					
44		LONG NUT WITH SPRING WASHER	1						
45		HEXAGON HEAD BOLT & SINGLE COIL SPRING LOCK WASHER	3	M10x1.25x20					
46	1600435180	ENGINE RIGHT MOUNTING INSULATOR ASSY.	1						


27 CAMSHAFT POSITION SENSOR

	NO.	PART NO.	DES	QTY	REMARK
	20		CAMSHAFT POSITION SENSOR SEAT COMPONENTS	1	
	21	1136000166	CAMSHAFT POSITION SENSOR	1	1.3L
	22		HEXAGON HEAD BOLT & PLAIN WASHER ASSY.	1	M6x20
	23		HEXAGON HEAD BOLT	2	M6x16
	30		CAMSHAFT POSITION SENSOR & SEAT COMPONENTS	1	

28 COLD AIR INTAKE BOX

	NO.	PART NO.	DES	QTY	REMARK
	10		COLD AIR INTAKE BOX ASSY.	1	
	11		HEXAGON NUT & WAVE WASHER ASSY. M6	2	
	12		BOWL-SHAPED WASHER	2	
	13		FLEXIBLE WASHER	1	
	16		HEXAGON HEAD BOLT & LARGE PLAIN WASHER ASSY.	1	
	17		WASHER	1	
	18	1109401005	COLD AIR INTAKE BOX LOWER BRACKET	1	

29 CLUTCH ASSY.

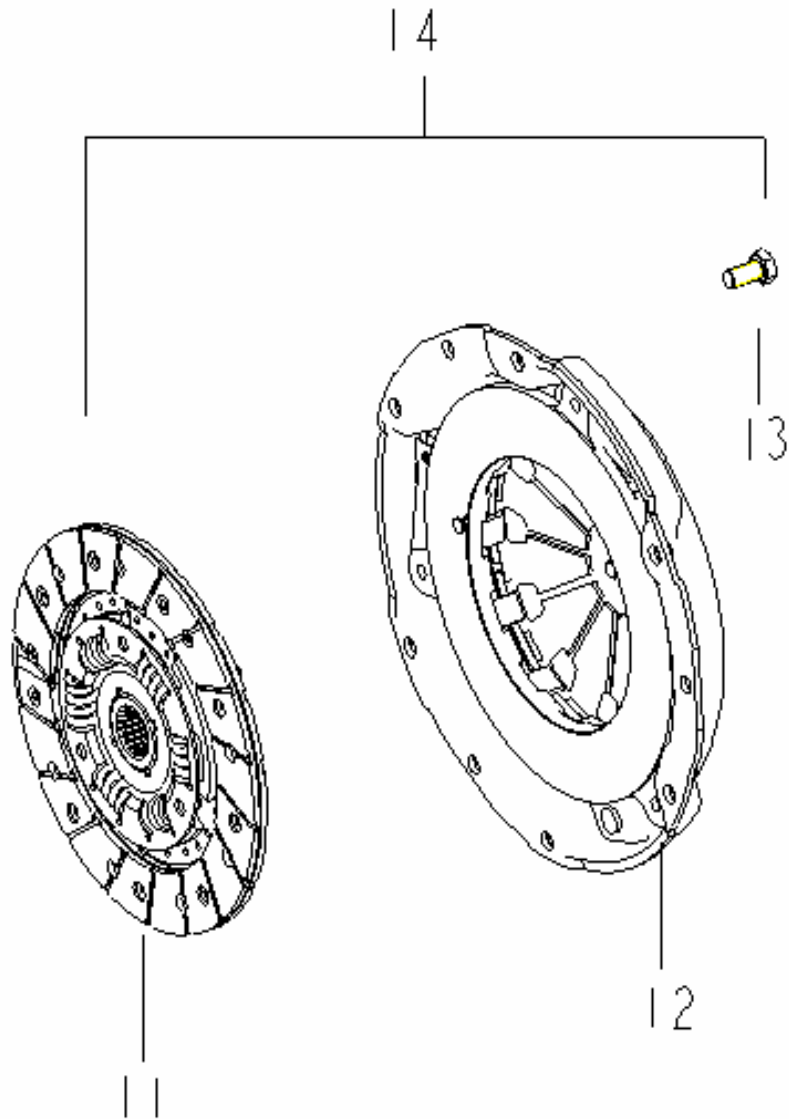


NO.	PART NO.	DES	QTY	REMARK
11	1106015058	FRICTION PLATE ASSY.	1	
12	1106015057	PRESSUREPLATE ASSY.	1	
13		HEXAGON HEAD BOLT M8x16	6	
14		CLUTCH ASSY.	1	


S160 TRANSMISSION ASSY.

	NO.	PART NO.	DES	QTY	REMARK
	1	3170102101	END CAP	1	
	2	3170122201	PRESS COVER	1	
	3	3170122401	OUTPUT SHAFT SPRING	1	
	4	3170100006	END CAP BOLT	4	
	5	3170121601	O RING-ODOMETER	2	
	6	3230330901	DRIVING GEAR-ODOMETER	1	
	7	3170121005	DRIVEN GEAR-ODOMETER	1	
	8	3170120102	CASE-ODOMETER DRIVEN GEAR	1	
	9	3170121501	SPRING	1	
	10	3170100007	ODOMETER BOLT	1	
	11	3170121301	ODOMETER LOCK WASHER	1	
	12	3380209001	ODOMETER OIL SEAL	1	
	13	3170102002	SHIFT CABLE BRACKET	1	
	14	3170102001	SHIFT CABLE BRACKET	1	
	15	3170122301	SHIFT CABLE BRACKET BOLT	4	
	16	3150010001	SHIFT COVER TIGHTENING BOLT	2	
	17	3160131006	CLUTCH SLAVE PUMP	1	
	18	3160121101	RELEASE FORK	1	
	19	3160122001	CLUTCH BEARING	1	
	20	3160132001	SUPPORTING POST	1	
	21	3160121201	SPRING	1	
	22	3160133005	BOOT	1	
	23	3170216001	SHIFT POSITION ASSY.	1	
	24	3170102301	ATTACHING BOLT	14	
	25	1700201180	VEHICLE SPEED SENSOR	1	

S160 TRANSAXLE ASSY.

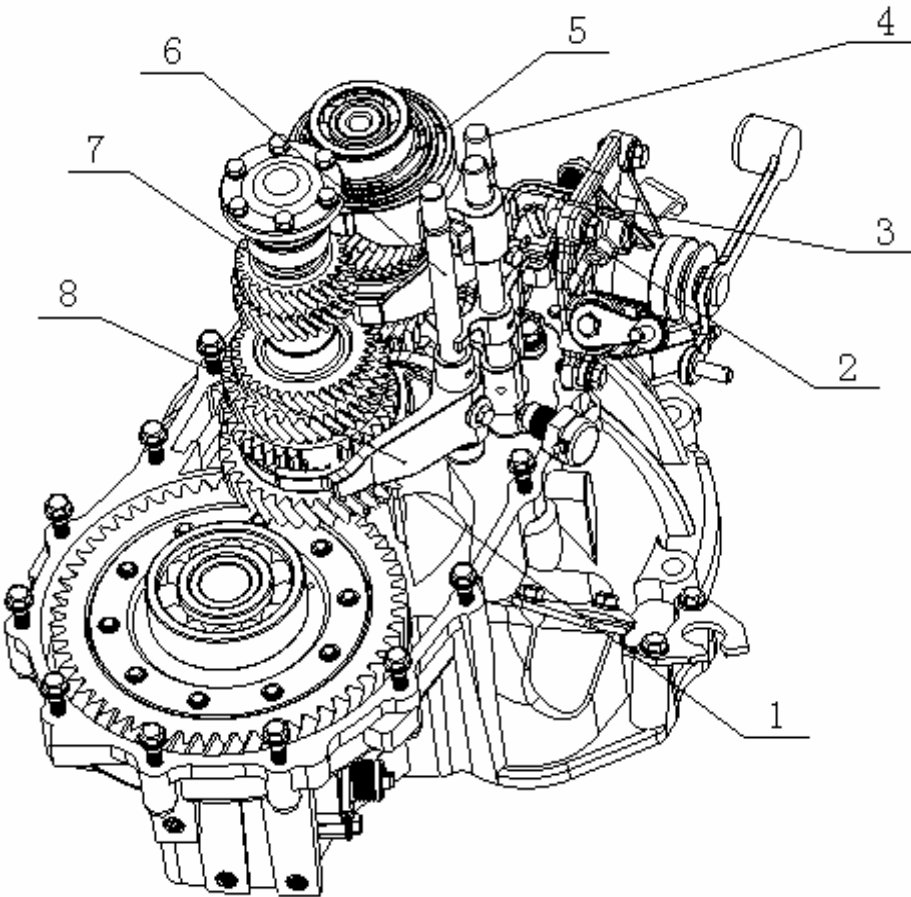
	NO.	PART NO.	DES	QTY	REMARK
	1	3170103001	S SHAPE OIL SEAL	1	
	2	3170200005	VENT PLUG ASSY.	1	
	3	3170206101	REVERSE SHIFT FORK SHAFT	1	5TH
	4	3170206001	SHIFT FORK-3RD AND 4TH GEAR	1	
	5	343-6316002	BEARING-INPUT SHAFT	1	
	6	3170205901	FORK SHAFT-1ST AND 2ND GEAR	1	
	7	3204715101	BEARING-OUTPUT SHAFT	1	
	8	3170202401	GEAR SHIFT FORK SHAFT	1	1ST,2ND
		3408018101	DIFFERENTIAL FRONT BEARING	1	
		343-6315701	DIFFERENTIAL REAR BEARING	1	
		3170104901	REAR BEARING-INPUT SHAFT	1	
		3305517101	FRONT BEARING-OUTPUT SHAFT	1	

S160 DIFFERENTIAL ASSY.

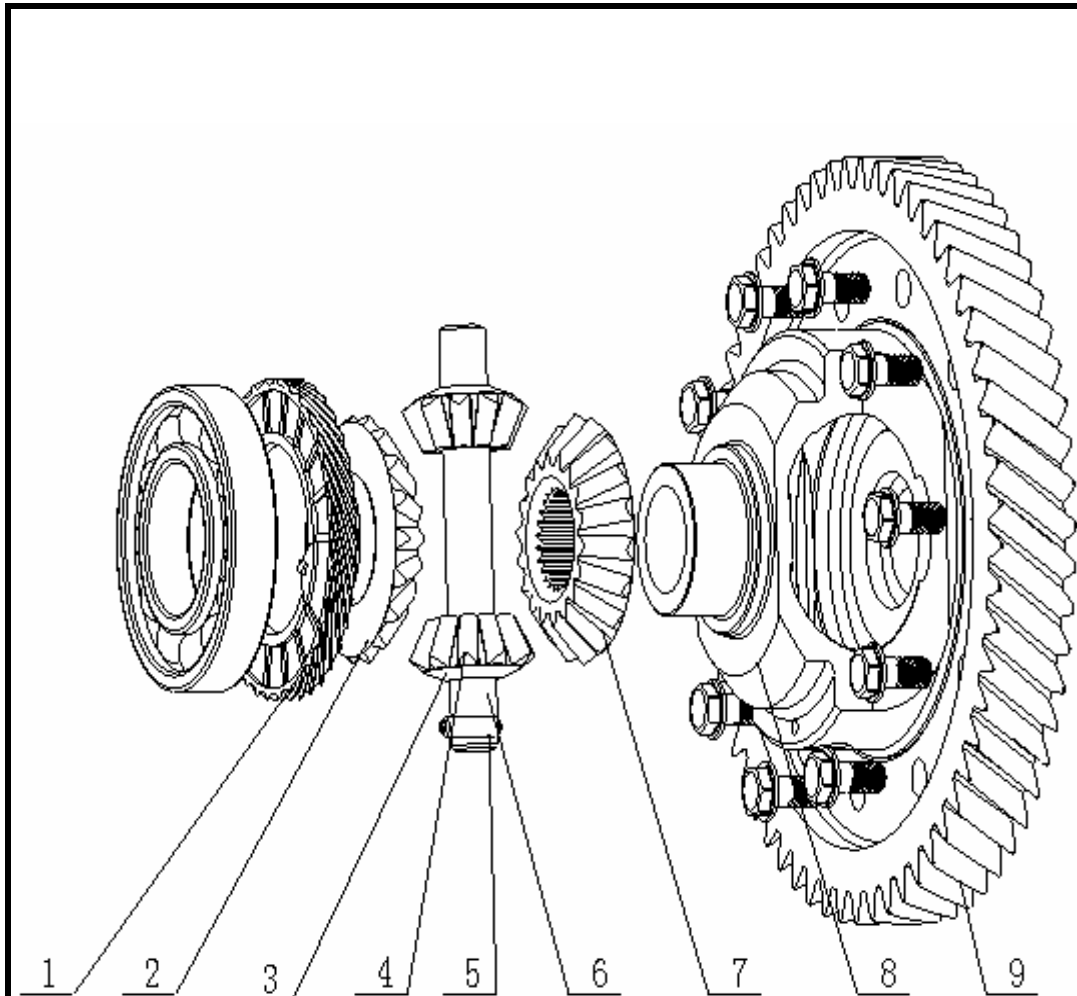

NO.	PART NO.	DES	QTY	REMARK
1	3230330901	GEAR-ODOMETER DRIVING	1	
2	3230330701	SIDE GEAR GASKET	2	
3	3230330601	PLANETARY GEAR GASKET	2	
4	3230330301	PLANETARY GEAR	2	
5	3230331001	ELASTIC CYLINDER PIN	1	
6	3230330401	PLANETARY GEAR SHAFT	1	
7	3230330201	SIDE GEAR	2	
8	3230330101	DIFFERENTIAL CASE	1	
9	3230330801	DIFFERENTIAL RING GEAR	1	
	3230331401	DIFFERENTIAL LEFT OIL SEAL	1	
	3230332101	DIFFERENTIAL RIGHT OIL SEAL	1	

S160 COVER-GEARSHIFT ASSY.

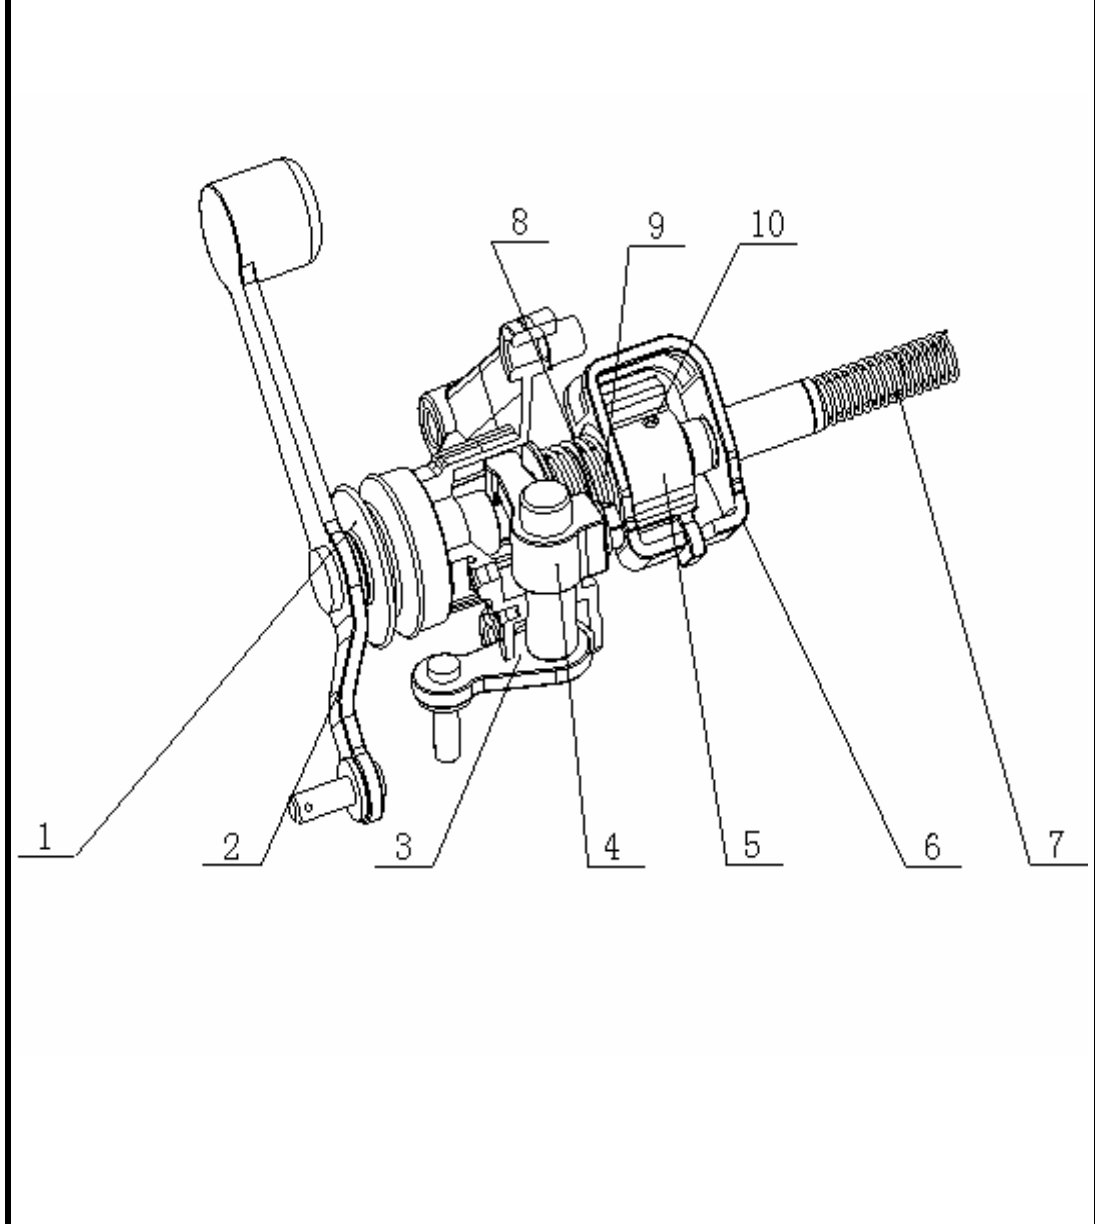	NO.	PART NO.	DES	QTY	REMARK
 <p>The diagram shows an exploded view of the gearshift assembly. Callout 1 points to the gearshift guide shaft boot. Callout 2 points to the guide shaft. Callout 3 points to the rocker. Callout 4 points to the gear shifter. Callout 5 points to another gear shifter. Callout 6 points to the shift lever bracket. Callout 7 points to return spring B. Callout 8 points to a nut. Callout 9 points to return spring A. Callout 10 points to a cylinder pin.</p>	1	3170212501	GEARSHIFT GUIDE SHAFT BOOT	1	
	2	3170210101	GUIDE SHAFT-GEARSHIFT	1	
	3	3170211105	ROCKER	1	
	4	3170211001	GEAR SHIFTER	1	
	5	3170214201	GEAR SHIFTER	1	
	6	3170214601	BRACKET -SHIFT LEVER	1	
	7	3170213001	RETURN SPRING B	1	
	8	3170211501	NUT	1	
	9	3170212601	RETURN SPRING A	1	
	10	3170203601	CYLINDER PIN	1	

S160 GEARSHIFT SYSTEM ASSY.

	NO.	PART NO.	DES	QTY	REMARK
	1	3170108201	REVERSE COUNTER GEAR	1	
	2	3170109201	REVERSE COUNTER GEAR SHAFT	1	
	3	3170205401	GUIDE BLOCK-5TH AND REVERSE GEAR	1	
	4	3170202701	GEARSHIFT FORK SHAFT	1	3TH,4TH
	5	3150010002	GEARSHIFT FORK BOLT	2	
	6	3170202901	FIFTH GEAR SHIFT FORK	1	
	7	3170205601	GUIDE BLOCK - REVERSE GEAR	1	
	8	3170209201	PIN	1	
	9	3170205201	GUIDE BLOCK	1	1ST,2ND
	10	3170206301	ELASTIC CYLINDER PIN	2	
	11	3170209401	PIN	1	
	12	3170207701	FORK SHAFT SNAP RING	5	


S160 OUTPUT SHAFT ASSY.

	NO.	PART NO.	DES	QTY	REMARK
	1	3170110601	OUTPUT SHAFT	1	
	2	3343928101	NEEDLY ROLLER BEARING	1	1ST
	3	3170111101	GEAR-1ST SPEED,OUTPUT	1	
	4	3170112801	SYNCHRONIZER GEAR RING	1	1ST
	5	3170112901	SYNCHRONIZER GEAR RING	1	2ND
	6	3170113101	GEAR-2ND SPEED,OUTPUT	1	
	7	3170104301	NEEDLY ROLLER SECLUSION RING	1	
	8	3343923101	NEEDLY ROLLER BEARING	1	2ND
	9	3170113601	GEAR-3RD SPEED,OUTPUT	1	
	10	3170113701	COVER ORIENTATION	1	
	11	3170113801	GEAR-4TH SPEED,OUTPUT	1	2ND
	12	3170114001	GEAR-5TH SPEED,OUTPUT	1	
	13	3170110101	OUTPUT 5TH GEAR RING	1	
	14	3170112005	SYNCHRONIZER ASSY.	1	1ST,2ND

S160 SHAFT-INPUT ASSY.

	NO.	PART NO.	DES	QTY	REMARK
	1	3170104101	SHAFT-INPUT	1	
	2	3170105201	GEAR-3RD SPEED,INPUT	1	
	3	3170106601	RING-3RD SPEED SYNCHRONIZING	1	
	4	3170106701	RING-4TH SPEED SYNCHRONIZING	1	
	5	3170104201	1ST,2ND,3RD,4TH SPEED SPRING	2	
	6	3170105401	GEAR-4TH SPEED,INPUT	1	
	7	3343921101	NEEDLY ROLL BEARING	1	3RD,4TH
	8	3170104401	INPUT FOURTH GEAR THURST WASHER	1	
	9	3170104501	BALL-ORIENTATION	1	4TH
	10	3170105801	GEAR-5TH SPEED,INPUT	1	
	11	3170104601	THRUST WASHER RETAINER	1	4TH
	12	3313620101	NEEDLY ROLLER BEARING	1	5TH
	13	3170107601	RING-5TH SPEED SYNCHRONIZING	1	
	14	3170106001	SYNCHRONIZER ASSY.	1	3RD,4TH
	15	3170107005	SYNCHRONIZER ASSY.	1	5TH


S160G TRANSMISSION ASSY.

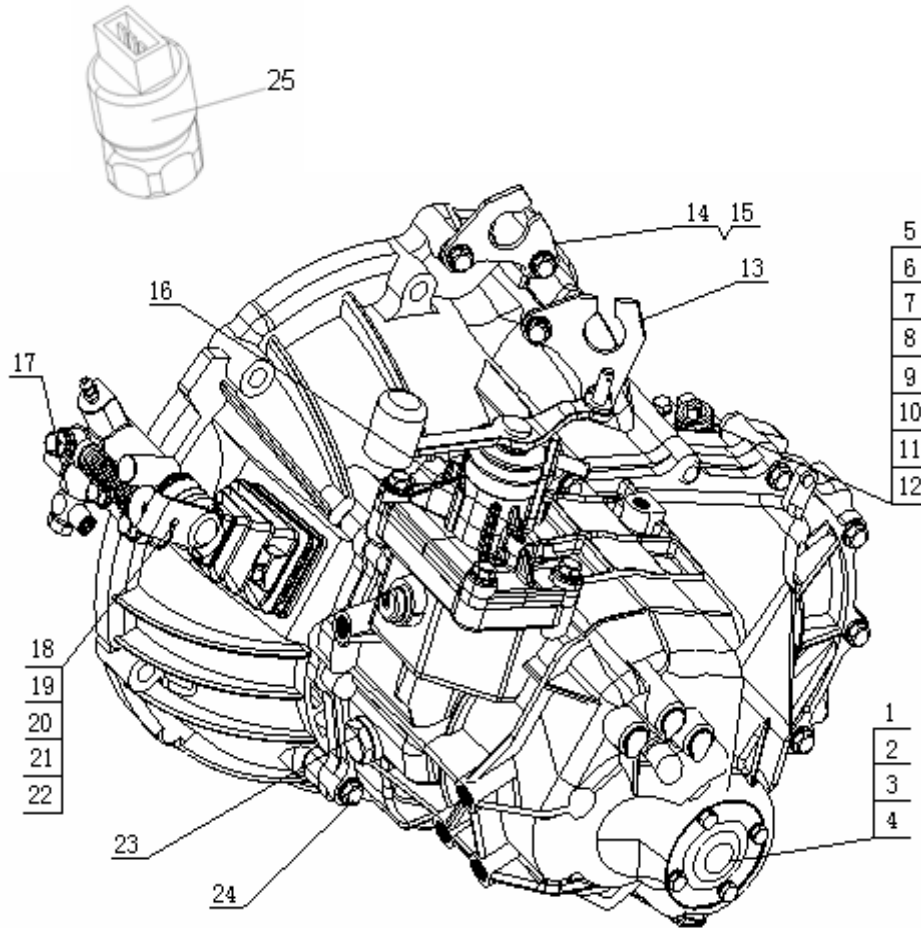

NO.	PART NO.	DES.	QTY	REMARK
1	3170102101	END CAP	1	
2	3170122211	PRESS COVER	1	
3	3170122401	OUTPUT SHAFT SPRING	1	
4	3170100006	END CAP BOLT	4	
5	3170121601	O RING-ODOMETER	2	
6	3230330901	DRIVING GEAR-ODOMETER	1	
7	3170121005	DRIVEN GEAR-ODOMETER	1	
8	3170120102	CASE-ODOMETER DRIVEN GEAR	1	
9	3170121501	SPRING	1	
10	3170100007	ODOMETER BOLT	1	
11	3170121301	ODOMETER LOCK WASHER	1	
12	3380209001	ODOMETER OIL SEAL	1	
13	3170102002	SHIFT CABLE BRACKET	1	
14	3170102001	SHIFT CABLE BRACKET	1	
15	3170122301	SHIFT CABLE BRACKET BOLT	4	
16	3150010001	SHIFT COVER TIGHTENING BOLT	2	
17	3160131006	CLUTCH SLAVE PUMP	1	
18	3160121101	RELEASE FORK	1	
19	3160122001	CLUTCH BEARING	1	
20	3160132001	SUPPORTING POST	1	
21	3160121201	SPRING	1	
22	3160133005	BOOT	1	
23	3170216001	SHIFT POSITION ASSY.	1	
24	3170102301	ATTACHING BOLT	14	
25	1700201180	VEHICLE SPEED SENSOR	1	

|


S160G TRANSAXLE ASSY.

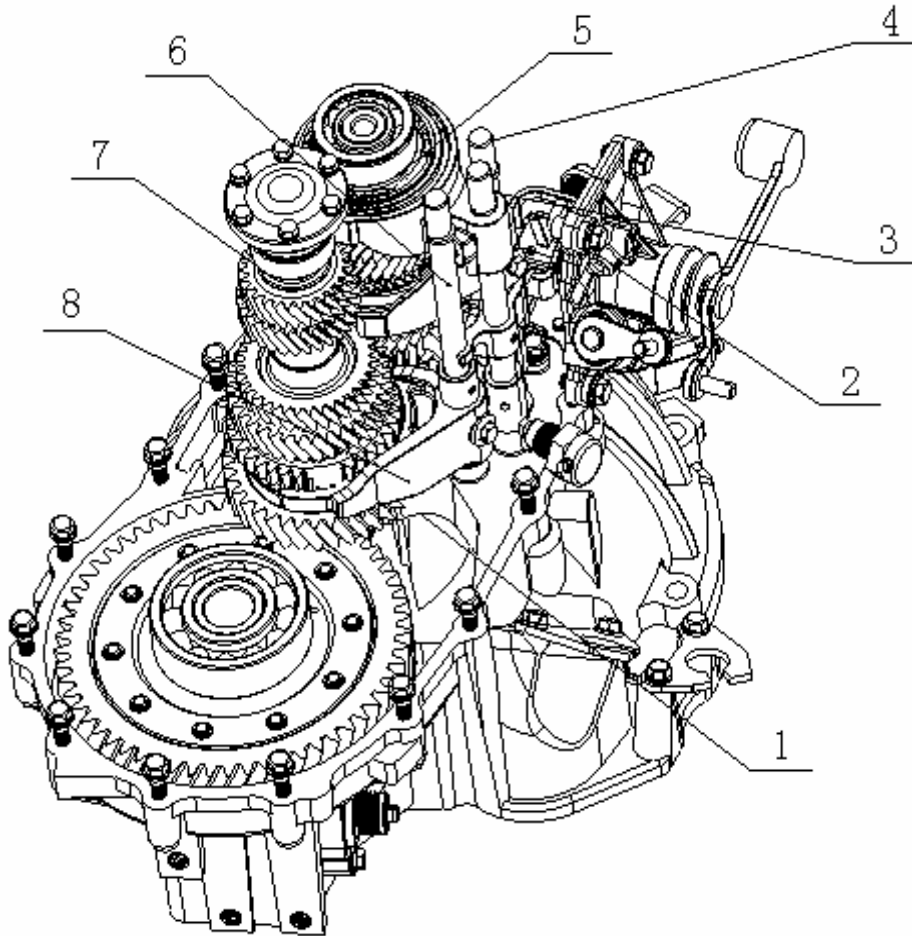

NO.	PART NO.	DES.	QTY	REMARK
1	3170103001	S SHAPE OIL SEAL	1	
2	3170200005	VENT PLUG ASSY.	1	
3	3170206111	REVERSE SHIFT FORK SHAFT	1	5TH
4	3170206011	SHIFT FORK-3RD AND 4TH GEAR	1	
5	343-6316002	FRONT BEARING-INPUT SHAFT	1	
6	3170205911	FORK SHAFT-1ST AND 2ND GEAR	1	
7	3204715101	REAR BEARING-OUTPUT SHAFT	1	
8	3170202401	GEAR SHIFT FORK SHAFT	1	1ST,2ND
	3408018101	DIFFERENTIAL FRONT BEARING	1	
	343-6315701	DIFFERENTIAL REAR BEARING	1	
	3170104901	REAR BEARING-INPUT SHAFT	1	
	3305517101	FRONT BEARING-OUTER SHAFT	1	

S160G DIFFERENTIAL ASSY.


NO.	PART NO.	DES.	QTY	REMARK
1	3230330901	GEAR-ODOMETER DRIVING	1	
2	3230330701	SIDE GEAR GASKET	2	
3	3230330601	PLANETARY GEAR GASKET	2	
4	3230330301	PLANETARY GEAR	2	
5	3230331001	ELASTIC CYLINDER PIN	1	
6	3230330402	PLANETARY GEAR SHAFT	1	
7	3230330201	SIDE GEAR	2	
8	3230330111	DIFFERENTIAL CASE	1	
9	3230330811	DIFFERENTIAL RING GEAR	1	
	3230331401	DIFFERENTIAL LEFT OIL SEAL	1	
	3230332101	DIFFERENTIAL RIGHT OIL SEAL	1	

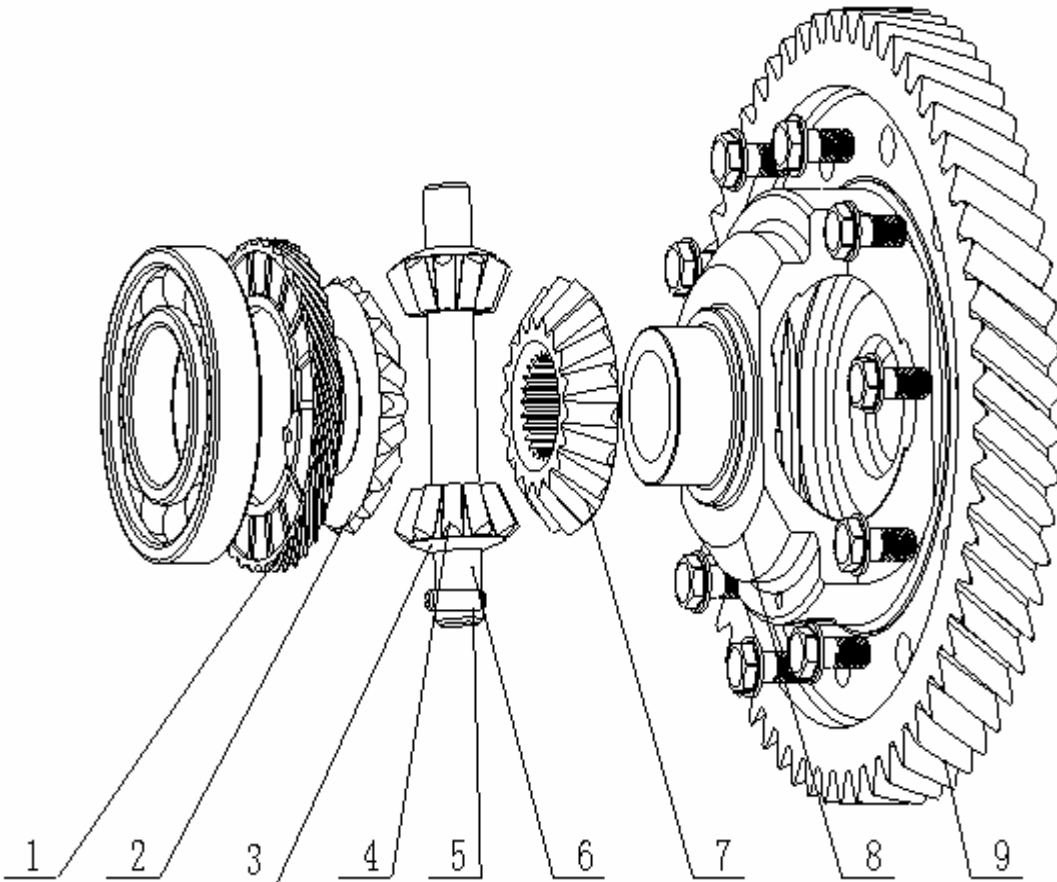

S160G COVER-GEARSHIFT ASSY.

	NO.	PART NO.	DES.	QTY	REMARK
	1	3170212501	GEARSHIFT GUIDE SHAFT BOOT	1	
	2	3170210101	GUIDE SHAFT-GEARSHIFT	1	
	3	3170211105	ROCKER	1	
	4	3170211001	GEAR SHIFTER	1	
	5	3170214201	GEAR SHIFTER	1	
	6	3170214601	BRACKET -SHIFT LEVER	1	
	7	3170213001	RETURN SPRING B	1	
	8	3170211501	NUT	1	
	9	3170212601	RETURN SPRING A	1	
	10	3170203601	CYLINDER PIN	1	

S160G GEARSHIFT SYSTEM ASSY.

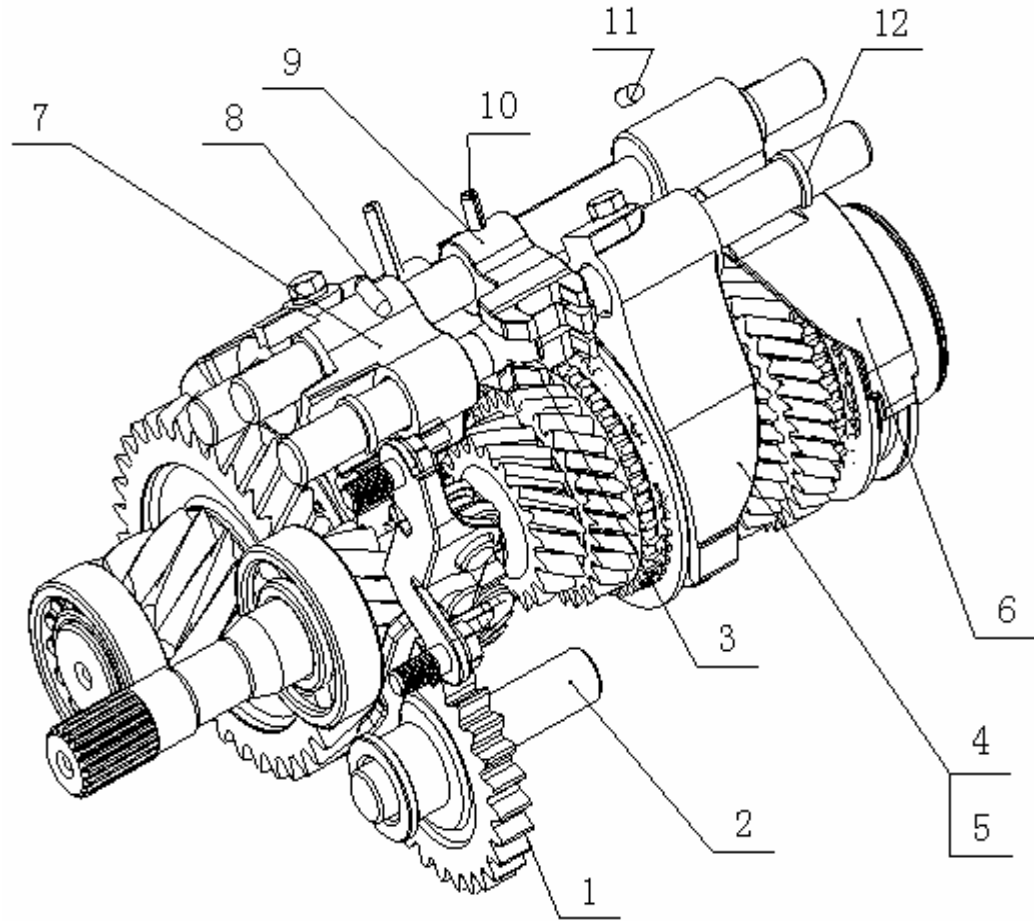

NO.	PART NO.	DES.	QTY	REMARK
1	3170108201	REVERSE COUNTER GEAR	1	
2	3170109201	REVERSE COUNTER GEAR SHAFT	1	
3	3170205401	GUIDE BLOCK-5TH AND REVERSE GEAR	1	
4	3170202711	GEARSHIFT FORK SHAFT	1	3TH,4TH
5	3150010002	GEARSHIFT FORK BOLT	2	
6	3170202901	FIFTH GEAR SHIFT FORK	1	
7	3170205601	GUIDE BLOCK - REVERSE GEAR	1	
8	3170209201	PIN	1	
9	3170205201	GUIDE BLOCK	1	1ST,2ND
10	3170206301	ELASTIC CYLINDER PIN	2	
11	3170209401	PIN	1	
12	3170207701	FORK SHAFT SNAP RING	5	

S160G OUTPUT SHAFT ASSY.

	NO.	PART NO.	DES.	QTY	REMARK
	1	3170110611	OUTPUT SHAFT	1	
	2	3343928111	NEEDLY ROLLER BEARING	1	1ST
	3	3170111111	GEAR-1ST SPEED,OUTPUT	1	
	4	3170112801	SYNCHRONIZER GEAR RING	1	1ST
	5	3170112901	SYNCHRONIZER GEAR RING	1	2ND
	6	3170113111	GEAR-2ND SPEED,OUTPUT	1	
	7	3170104301	NEEDLY ROLLER SECLUSION RING	1	
	8	3343923111	NEEDLY ROLLER BEARING	1	2ND
	9	3170113611	GEAR-3RD SPEED,OUTPUT	1	
	10	3170113711	COVER ORIENTATION	1	
	11	3170113811	GEAR-4TH SPEED,OUTPUT	1	
	12	3170114011	GEAR-5TH SPEED,OUTPUT	1	
	13	3170110101	OUTPUT 5TH GEAR RING	1	
	14	3170112011	SYNCHRONIZER ASSY.	1	1ST,2ND

S160G SHAFT-INPUT ASSY.

	NO.	PART NO.	DES.	QTY	REMARK
	1	3170104111	SHAFT-INPUT	1	
	2	3170105211	GEAR-3RD SPEED,INPUT	1	
	3	3170106601	RING-3RD SPEED SYNCHRONIZING	1	
	4	3170106701	RING-4TH SPEED SYNCHRONIZING	1	
	5	3170104201	1ST,2ND,3RD,4TH SPEED SPRING	2	
	6	3170105411	GEAR-4TH SPEED,INPUT	1	
	7	3343921111	NEEDLY ROLL BEARING	1	3RD,4TH
	8	3170104401	INPUT FOURTH GEAR THURST WASHER	1	
	9	3170104501	BALL-ORIENTATION	1	4TH
	10	3170105811	GEAR-5TH SPEED,INPUT	1	
	11	3170104601	THRUST WASHER RETAINER	1	4TH
	12	3313620111	NEEDLY ROLLER BEARING	1	5TH
	13	3170107601	RING-5TH SPEED SYNCHRONIZING	1	
	14	3170106011	SYNCHRONIZER ASSY.	1	3RD,4TH
	15	3170107011	SYNCHRONIZER ASSY.	1	5TH